


**Audi A6 4D (Quattro)**  
**Audi A6 Kombi (Quattro)**

**(04/2004 - 02/2011)**  
**(03/2005 - 09/2011)**

**A-088**


- PL** **Zaczep kulowy** Instrukcja montażu i eksploatacji
- GB** **Tow bar** Installation and operating instructions
- D** **Die Anhängerkupplung** Montage- und Gebrauchsanleitung
- ES** **Gancho de remolque** Las instrucciones de instalación y de operación
- RU** **Фаркоп** Инструкция по установке и эксплуатации ТСУ
- FR** **Attelage** Notice de montage et d'utilisation
- IT** **Gancio traino** Istruzioni di montaggio
- CZ** **Tažné zařízení** Návod na montáž a použití
- RO** **Cârlig de remorcare** Instrucția de montaj și exploatare
- SE** **Dragkulan** Monterings- och bruksanvisningar.

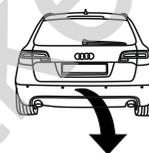



YES  NO



YES  NO

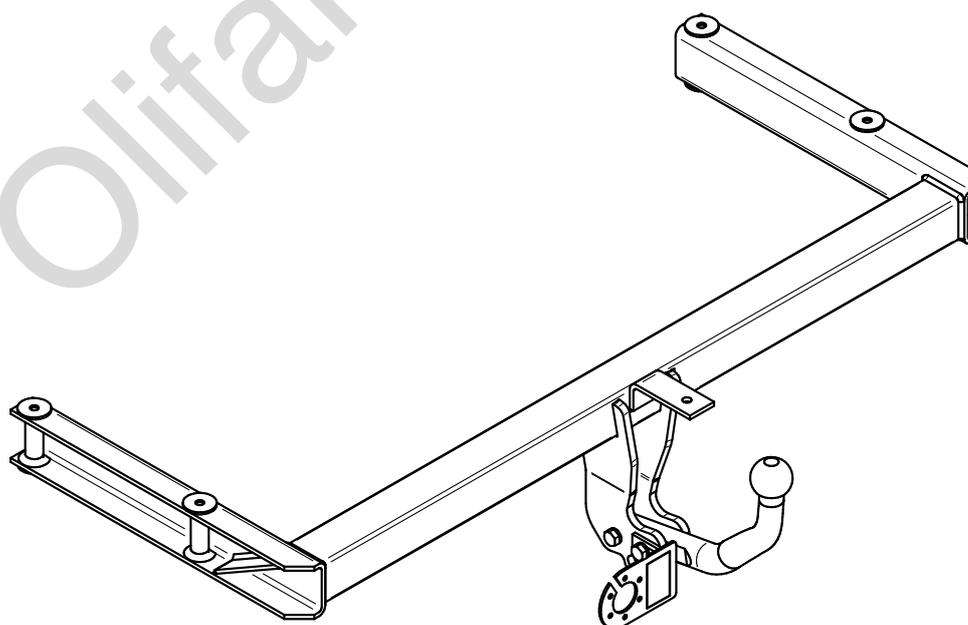

Typ: A-088  
 A50-X  
 e20 0283-00  
 D = 11,0kN  
 S = 85kg

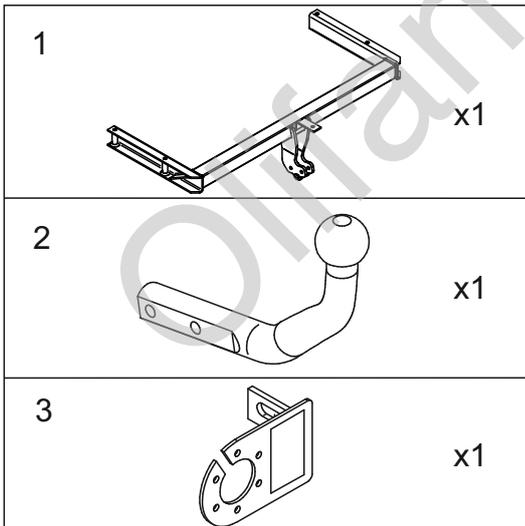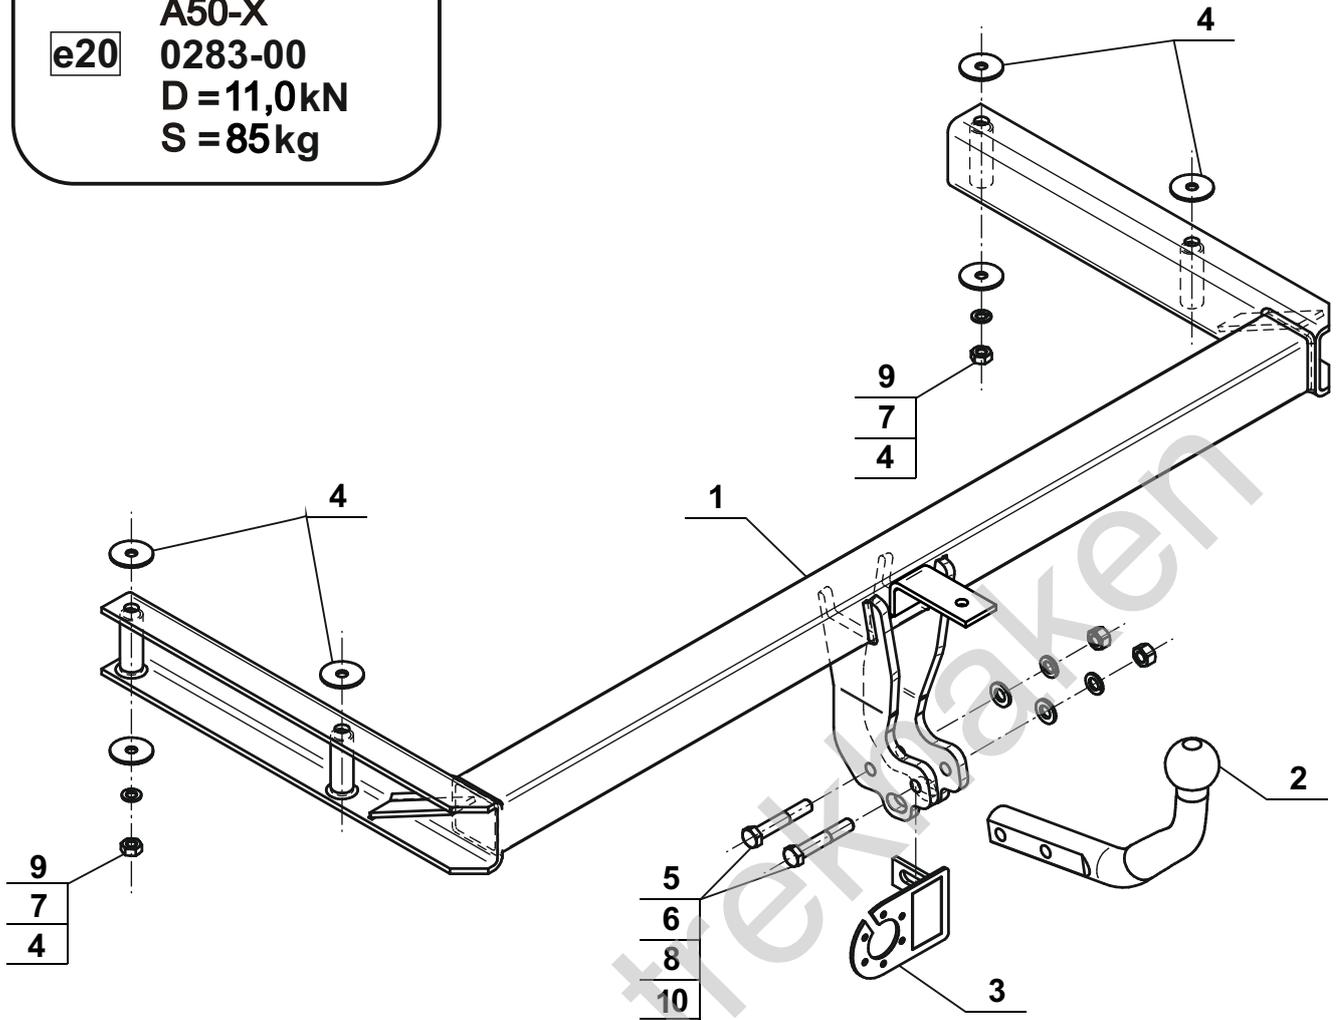


4		Ø40/Ø10,5x2,5	x6
5		M12x70 (PN/M-82101) (8.8)	x2
6		Ø13,0	x2
7		Ø10,2	x2
8		Ø12,2	x2
9		M10 (8)	x2
10		M12 (8)	x2




8.8	
M6 - 10 (Nm)	M12 - 85 (Nm)
M8 - 25 (Nm)	M14 - 135 (Nm)
M10 - 50 (Nm)	M16 - 200 (Nm)


1

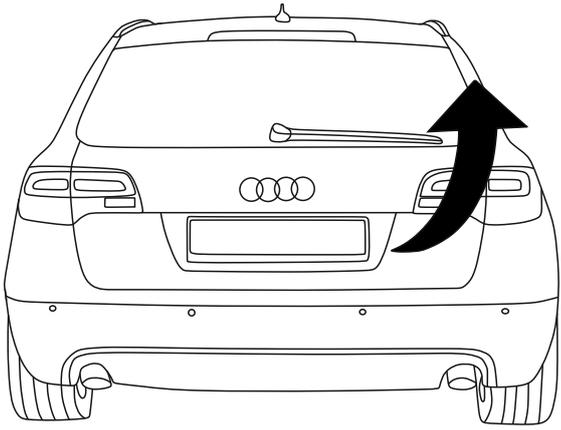


2

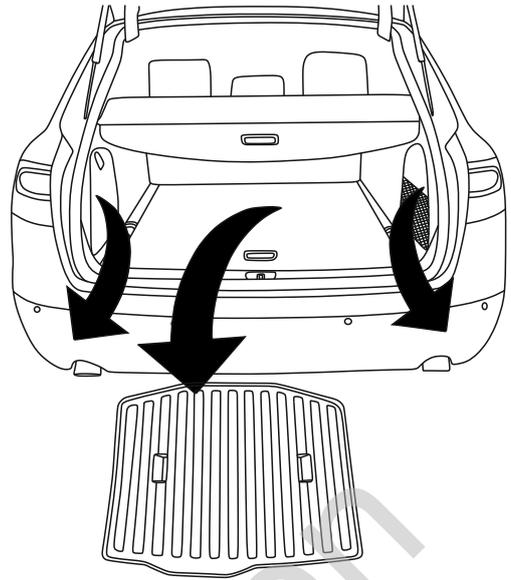


3

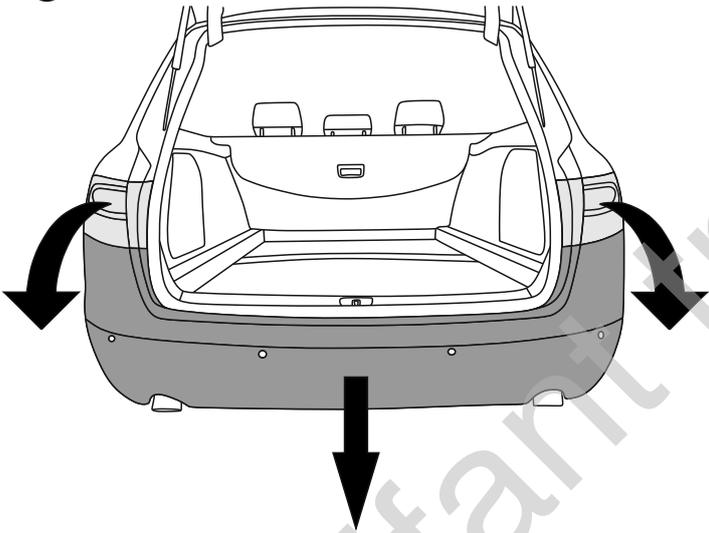


4






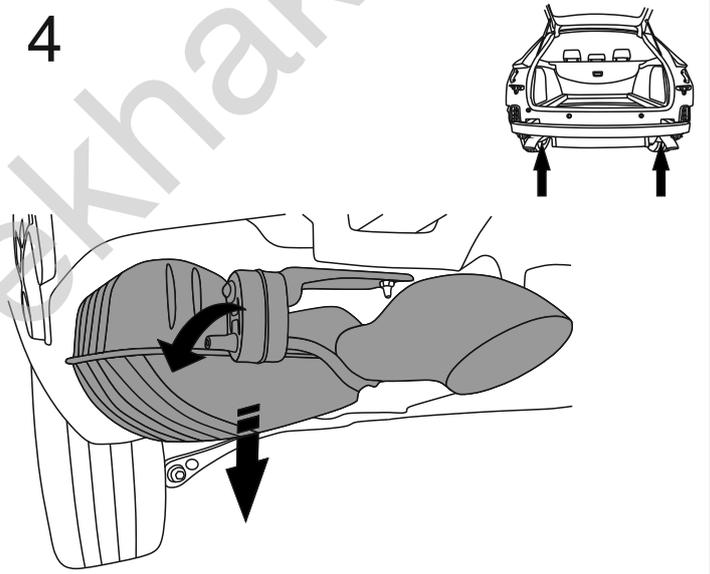


5

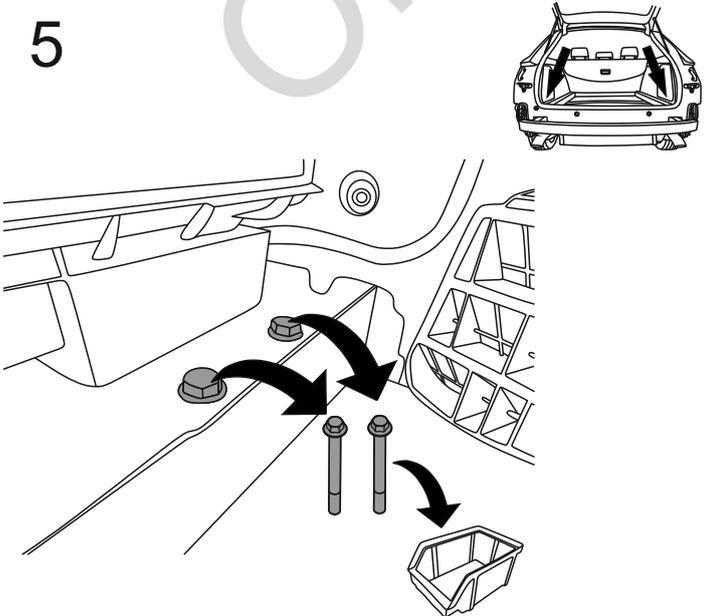


6

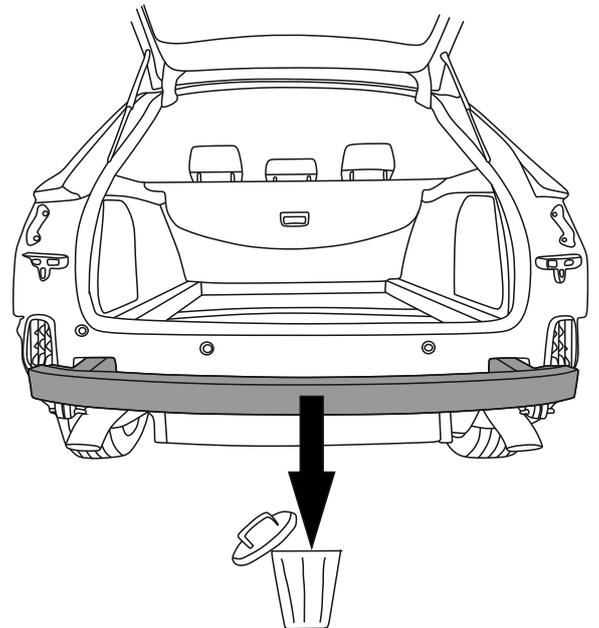


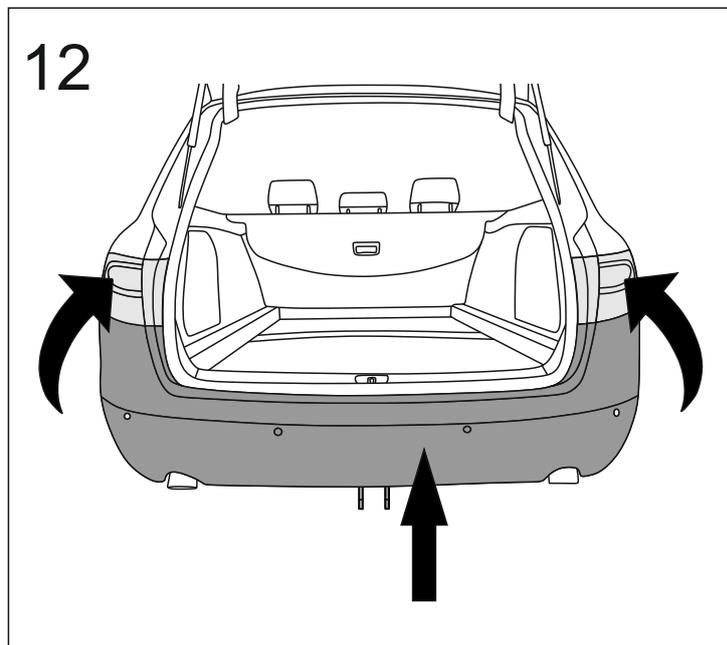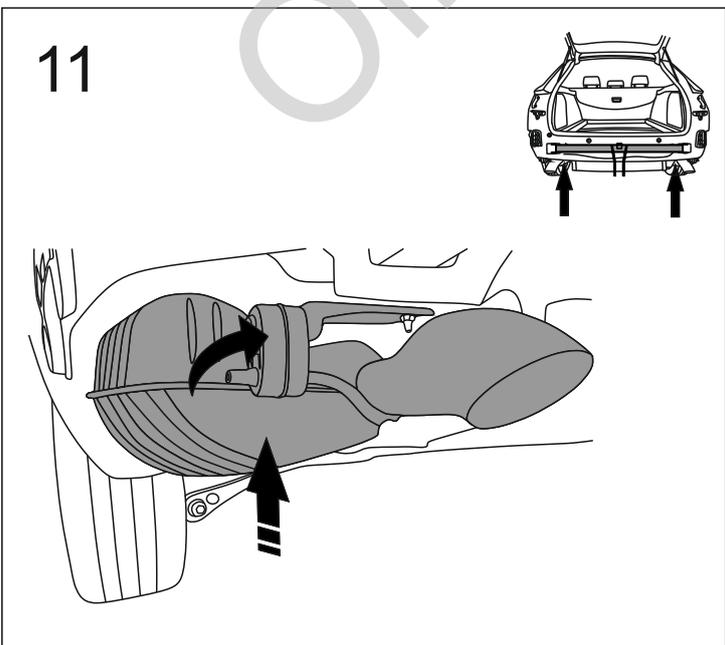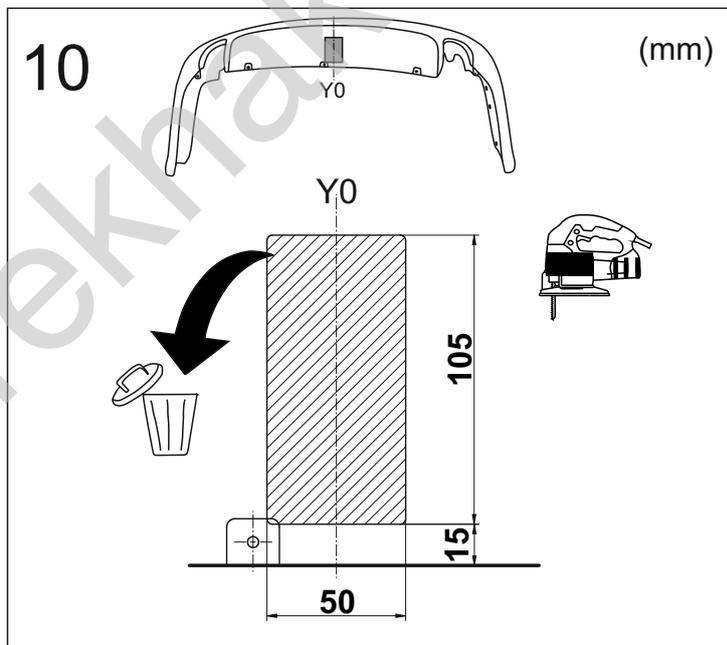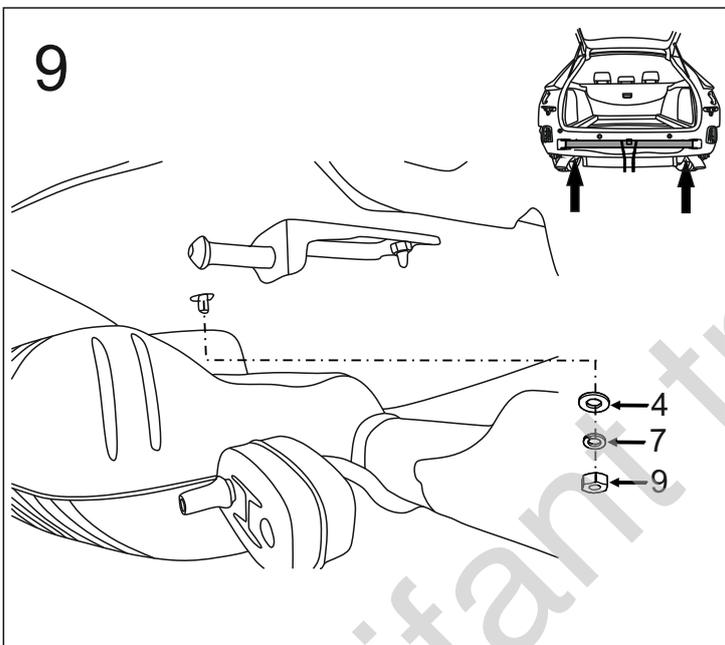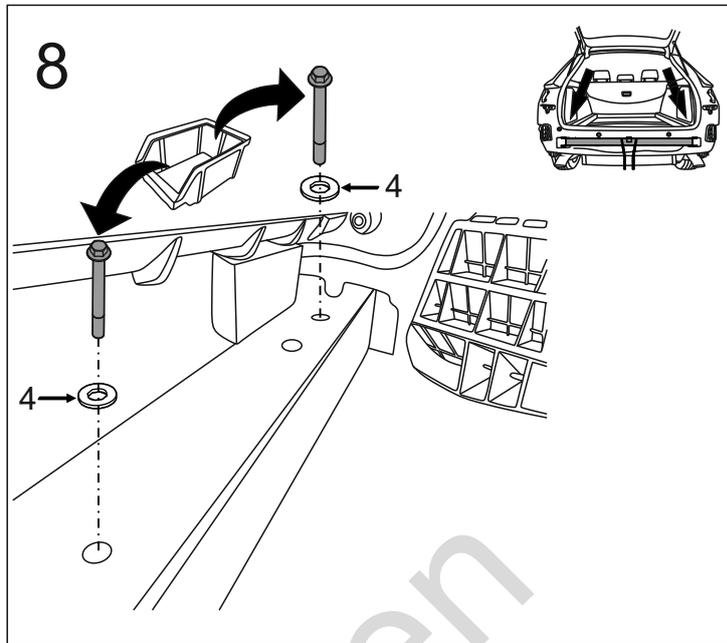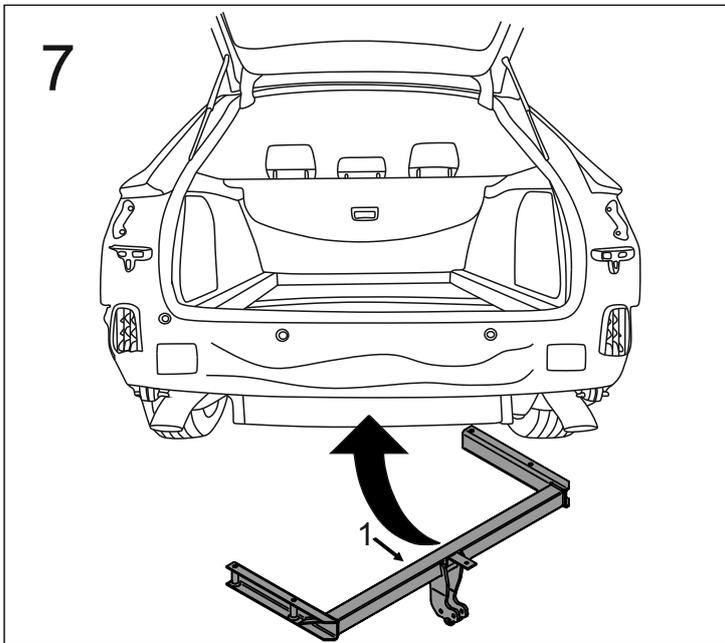

13

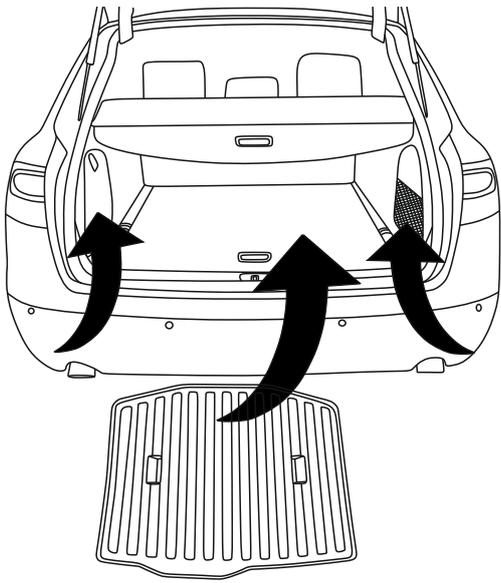

14<sub>1</sub>

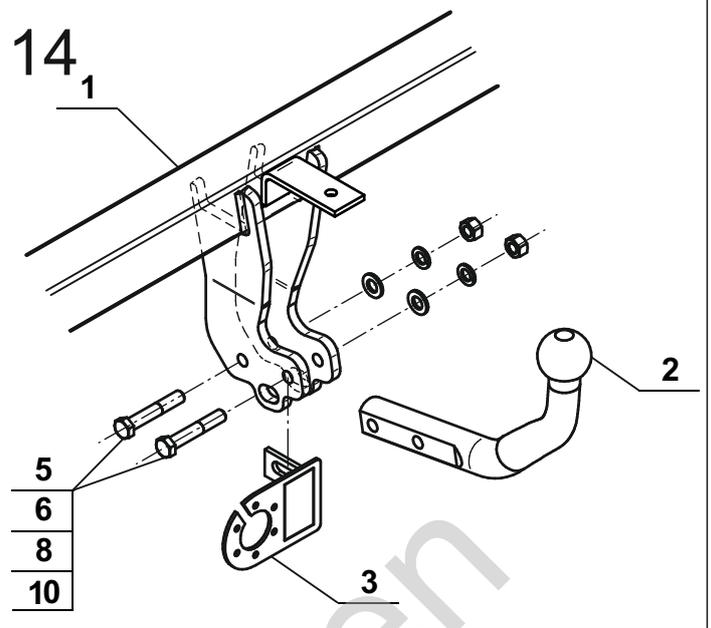

Olifant trekhaken