




TREKHAKEN • ATTELAGES • ANHÄNGERVORRICHTUNGEN • TOWBARS • ENHANCES • ANHÆNGERTRÆK

Montagehandleiding | instructions de montage | Einbauanleitung | Mounting instruction
Instrucciones de montaje | monteringsvejledning


Opel Mokka

10/'12-

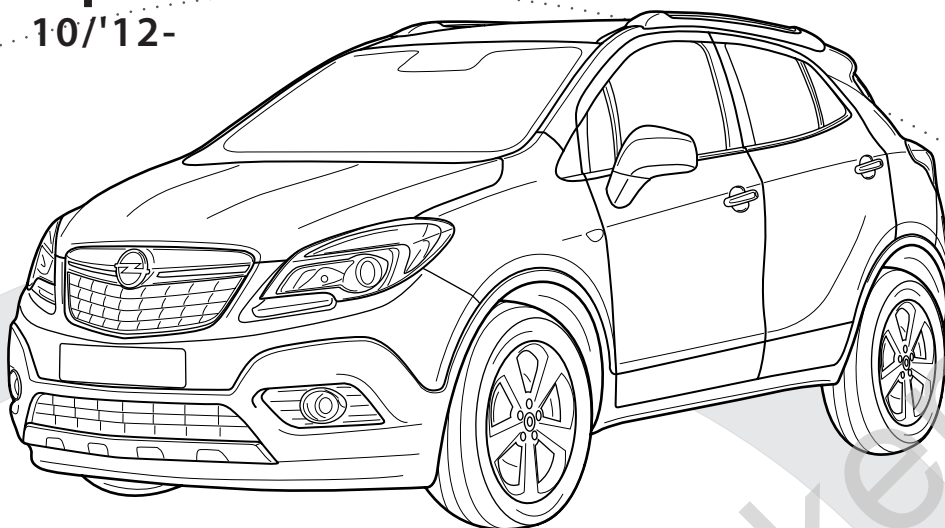


Opel Mokka X

'16-

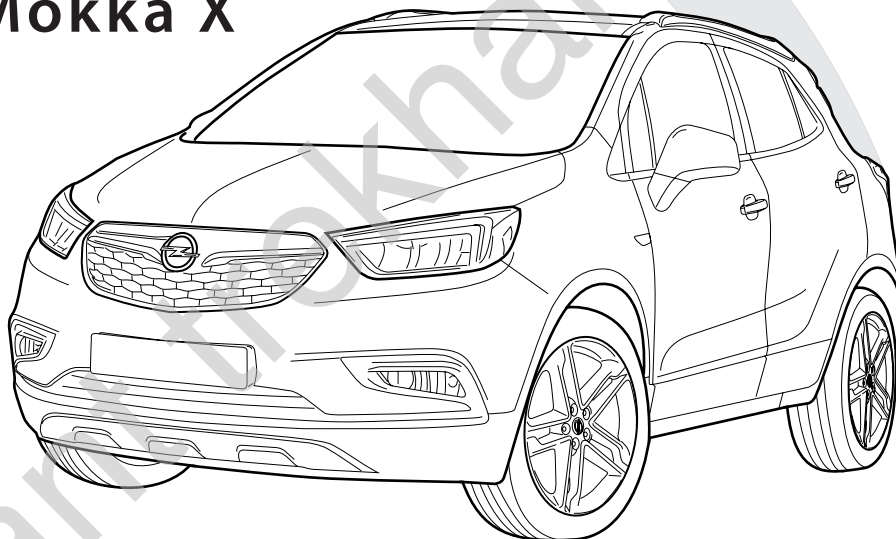

Chevrolet Trax

'13-

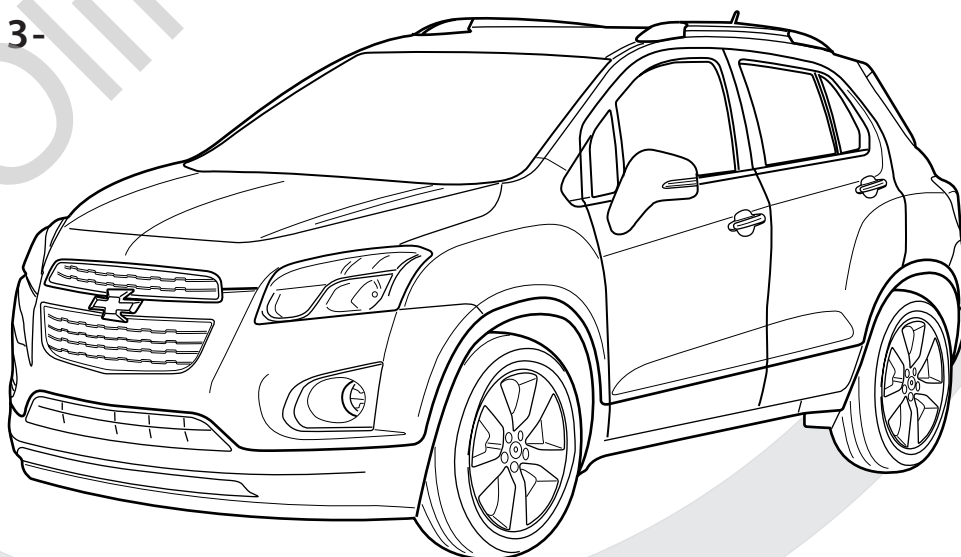

See the Certificate Of Conformity (COC) of your vehicle or contact your dealer to verify the max. trailer weight of your car!


MADE BY 	D 8,30	F	E6
BELGIUM	S 90	EC APPROVAL N° 55R-011026	
REF N° 1954	SERIE N°		
OMSCHRIJVING Opel Mokka 10/'12- & Opel Mokka X '16- & Chevrolet Trax '13-			

$$D = \frac{\text{max kg (car)} \times \text{max kg (trailer)}}{\text{max kg (car)} + \text{max kg (trailer)}} \times 0.00981 \leq 8,3 \text{ kN}$$

$$S = \text{hook} = 90 \text{ kg} + \text{trailer} = 1500 \text{ kg}$$



	M 6	M 8	M 10		M 12			M 14		M 16
	1	1,25	1,5	(1,25)	1,75	(1,5)	(1,25)	1,75	(1,5)	2
8.8	11,3 Nm	27,3 Nm	54,0 Nm	57,0 Nm	93,0 Nm	97,0 Nm	101,0 Nm	148,0 Nm	159,0 Nm	230,0 Nm
10.9	16,5 Nm	40,1 Nm	79,0 Nm	83,0 Nm	137,0 Nm	143,0 Nm	149,0 Nm	218,0 Nm	234,0 Nm	338,0 Nm
12.9	19,3 Nm	46,9 Nm	93,0 Nm	98,0 Nm	160,0 Nm	167,0 Nm	174,0 Nm	255,0 Nm	274,0 Nm	395,0 Nm

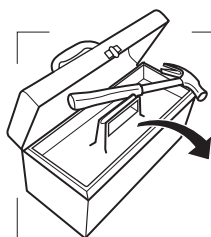

8



15



17




19







TX20




PH2

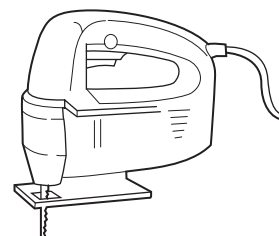

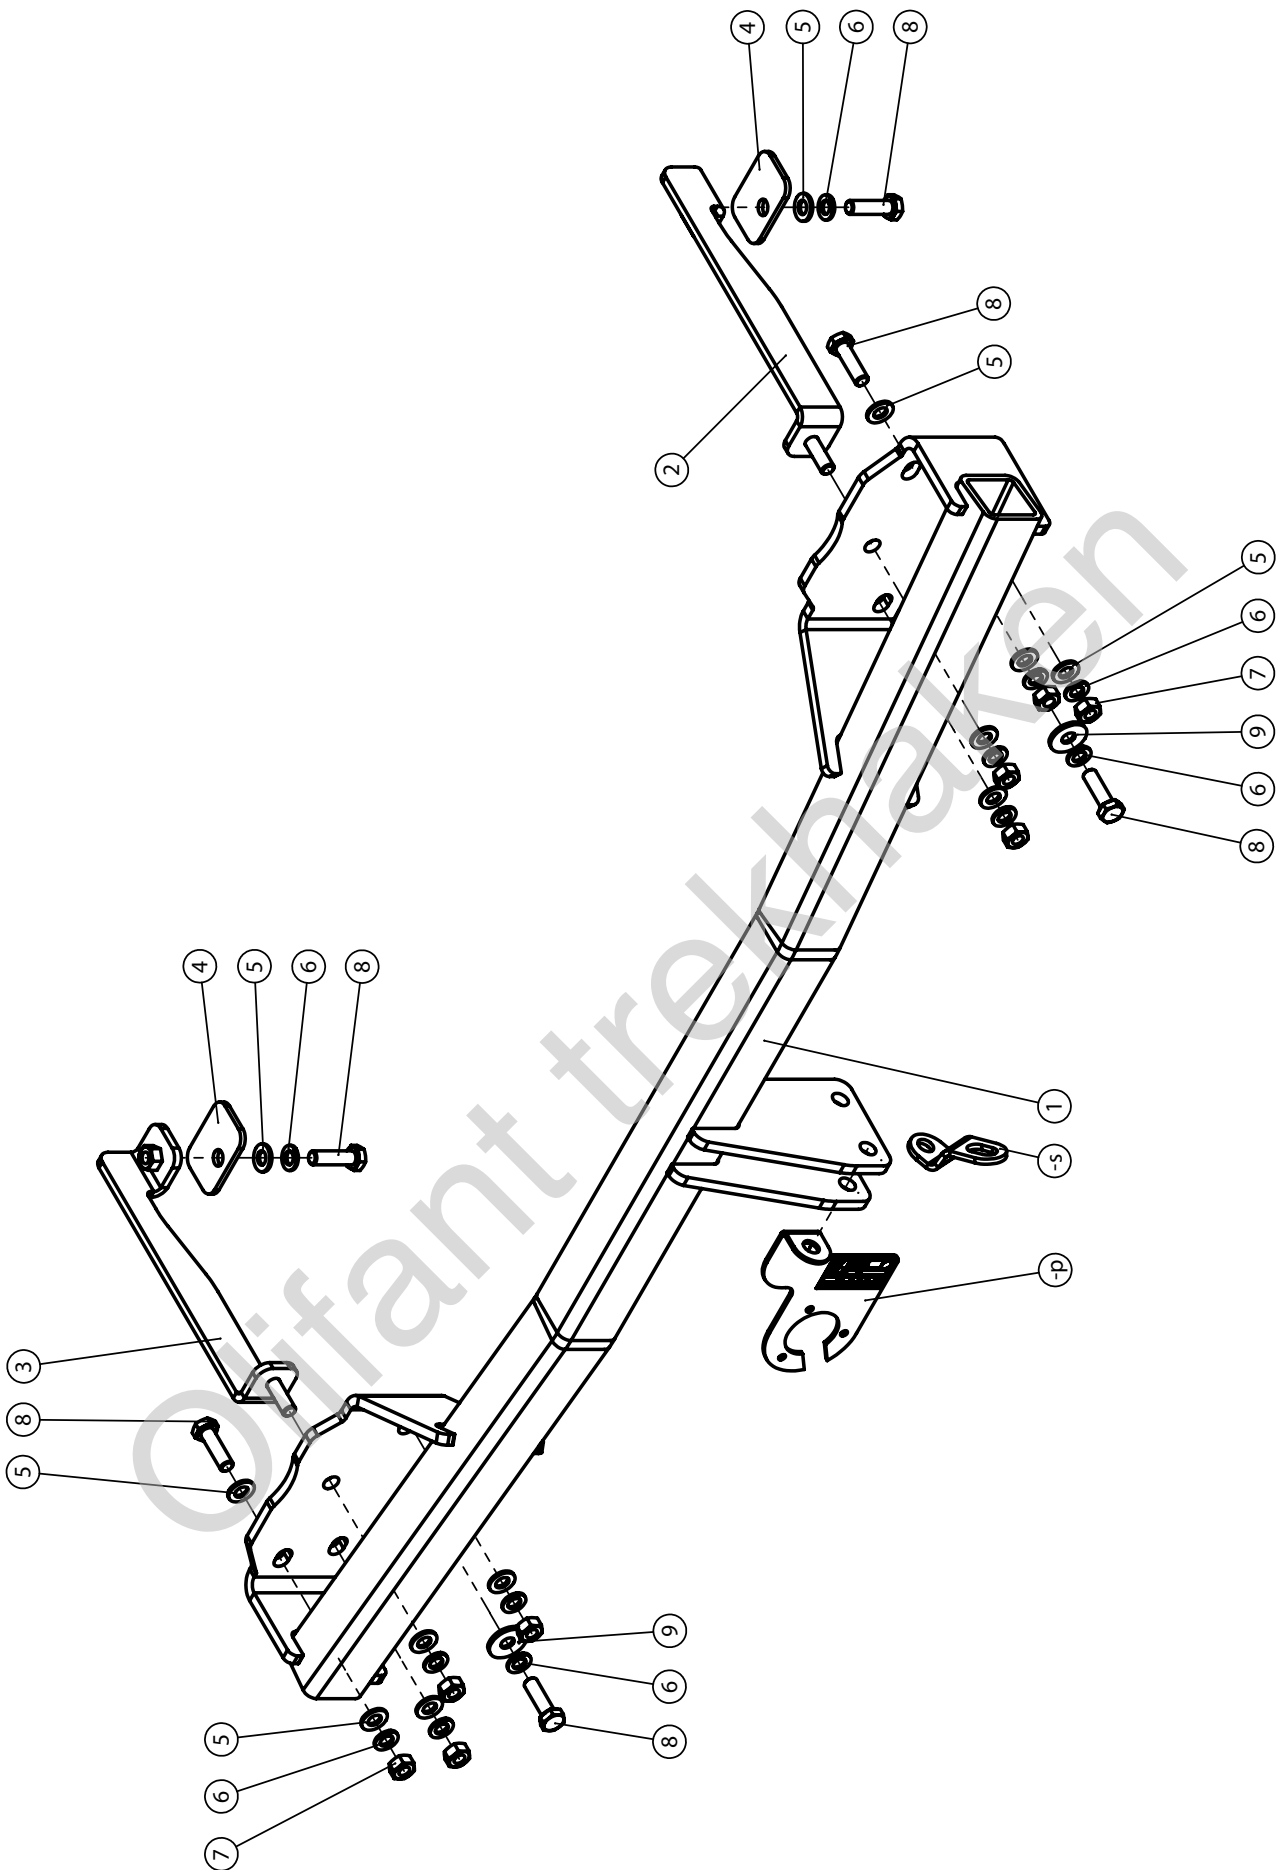

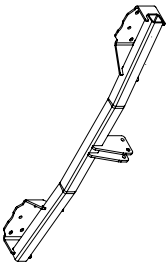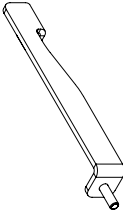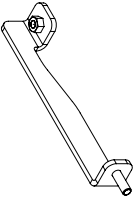
1		X1	GDW REF. 1954
2		X1	GDW REF. 2
3		X1	GDW REF. 3
4		X2	GDW REF. 4
5		X12	DIN125-A10-140HV-ELVZ
6		X12	DIN 128A-M10
7		X8	DIN 934-M10
8		X6	DIN933 10X35
9		X2	DIN9021-A10-140HV-ELVZ
-S		X1	GDW REF. 900.053
-P		X1	GDW REF. P04

Geleverd met - Livré avec - Delivered with Geliefert mit - Elementos adjuntos-Leveres med		
	X1	944.M034
	X2	GDW REF. 900.008
	X2	GDW REF. 900.011 Ø 21,3 X 11,7
	X4	DIN931-M12 X 70
	X4	DIN985-M12


1

OPEL MOKKA '12


OPEL Mokka X '16

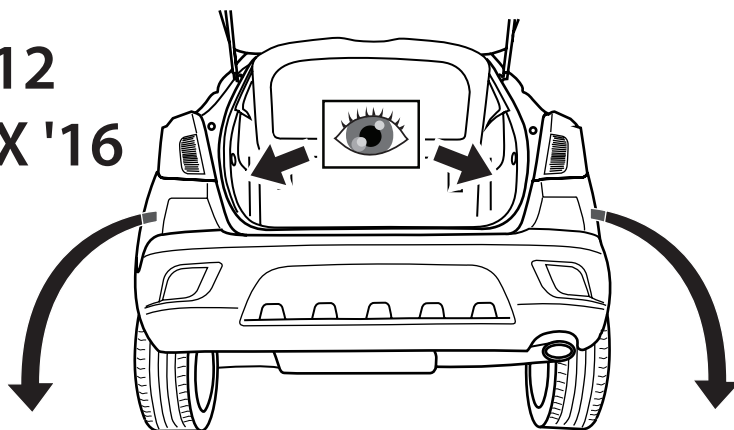


1

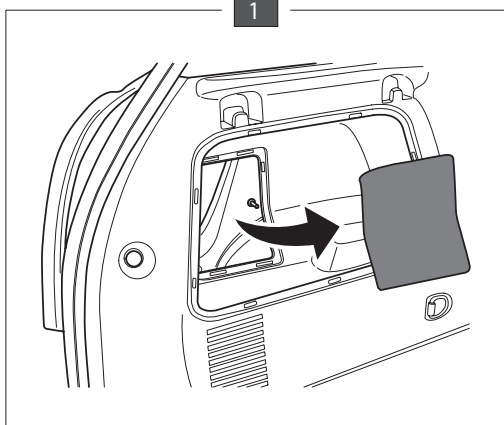

2

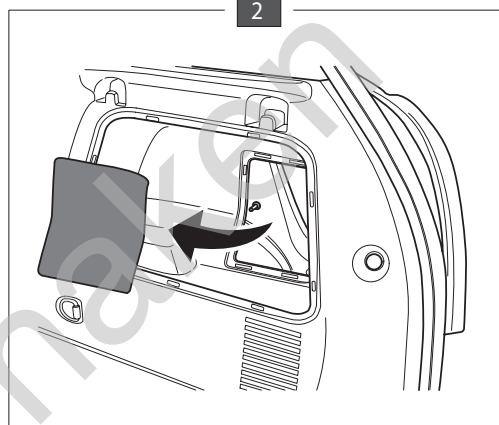


2

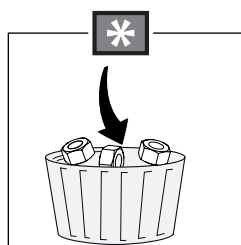


OPEL Mokka '12


OPEL Mokka X '16

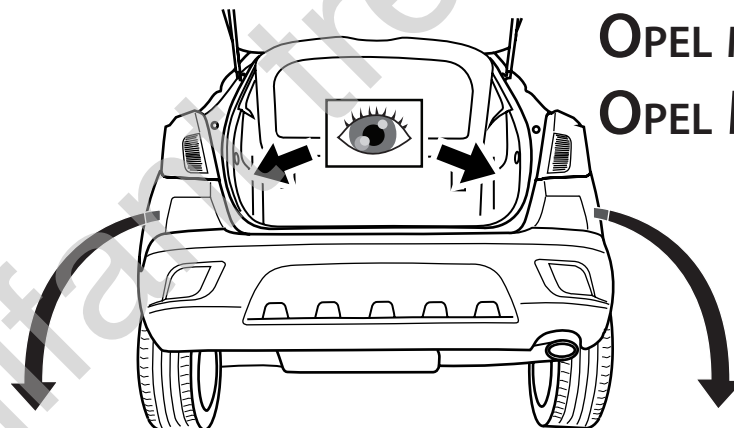


1

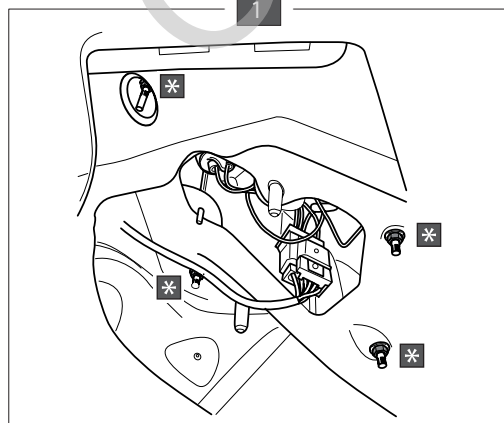



8

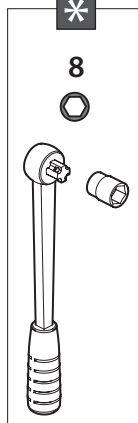




2

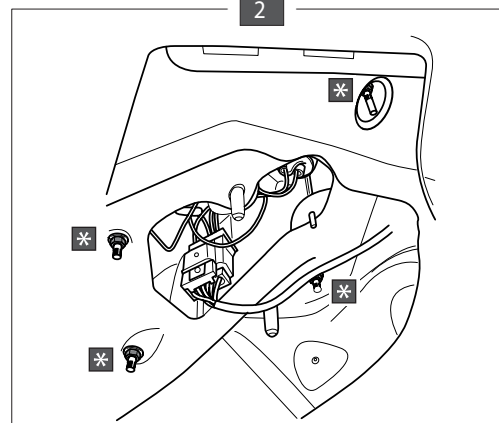


OPEL MOKKA '12 OPEL Mokka X '16

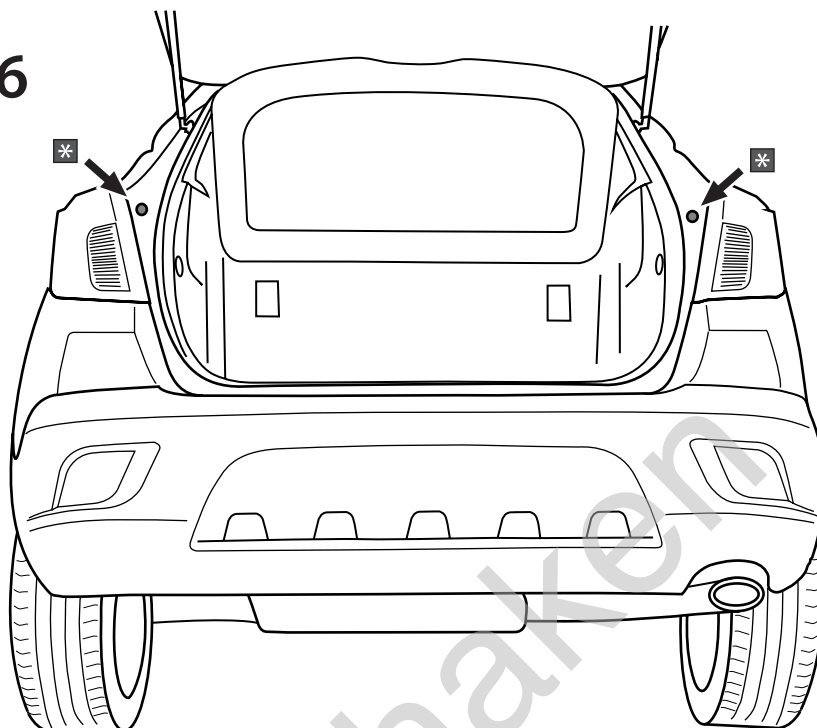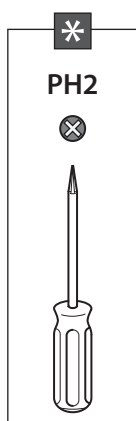


Chevrolet Trax '13

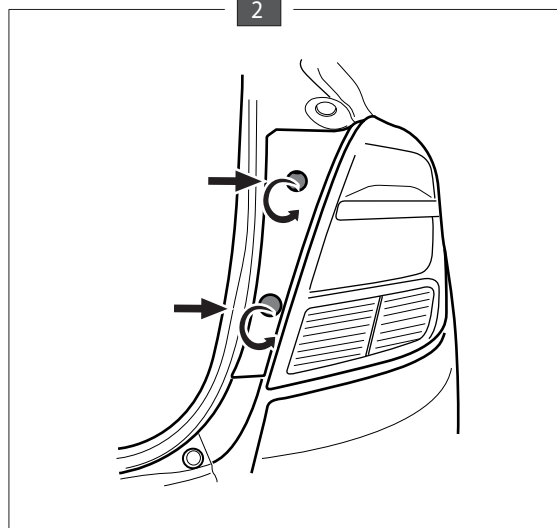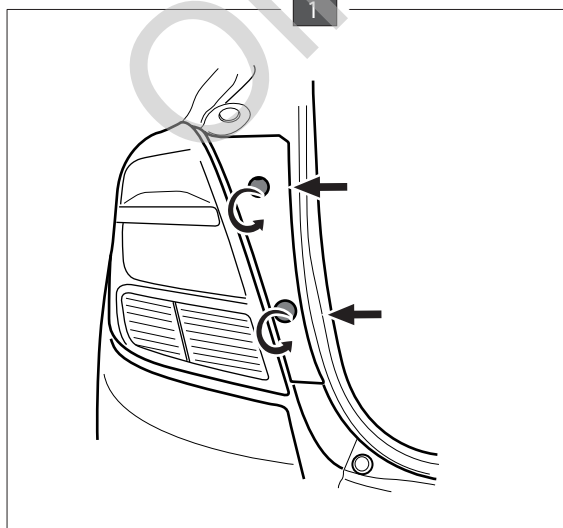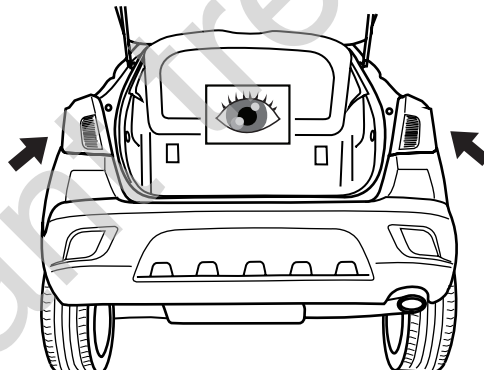

Chevrolet Trax '13

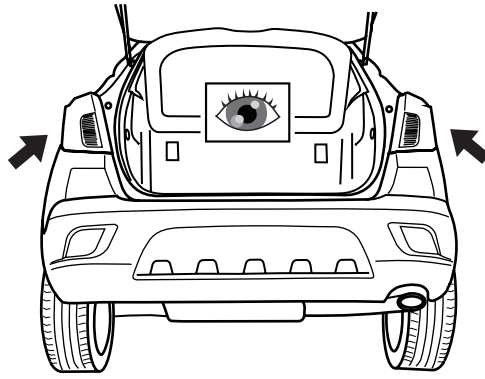


1

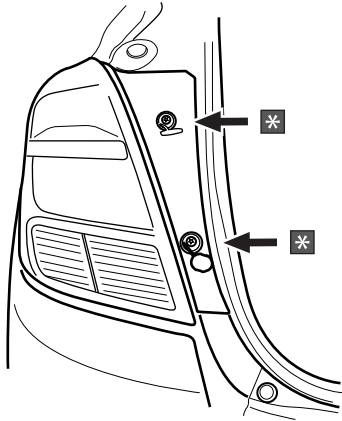


✱
PH2











2



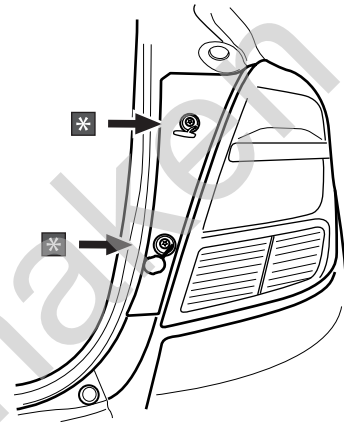


6

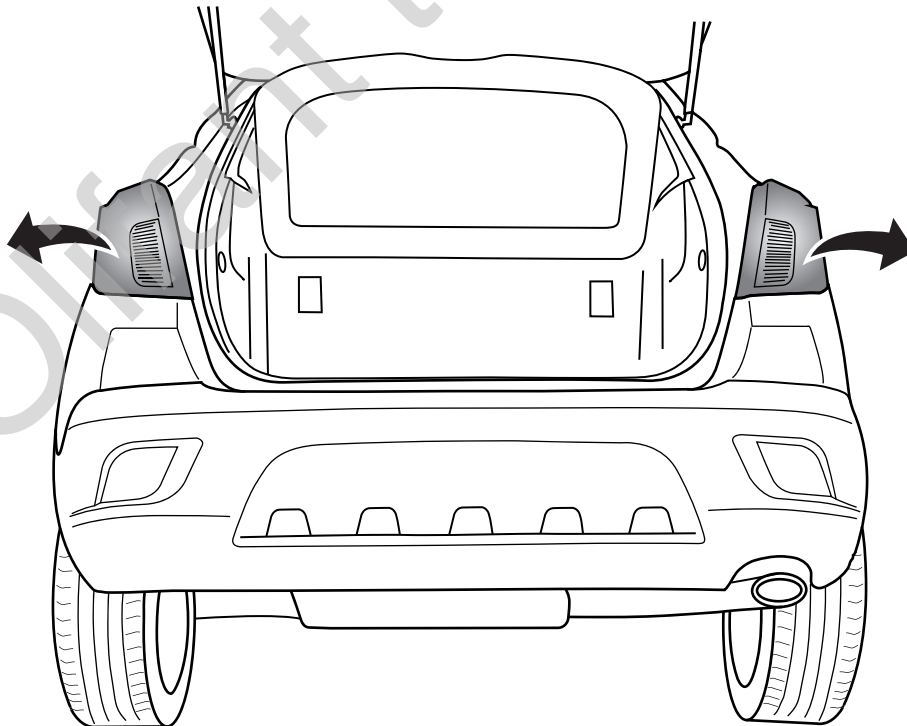


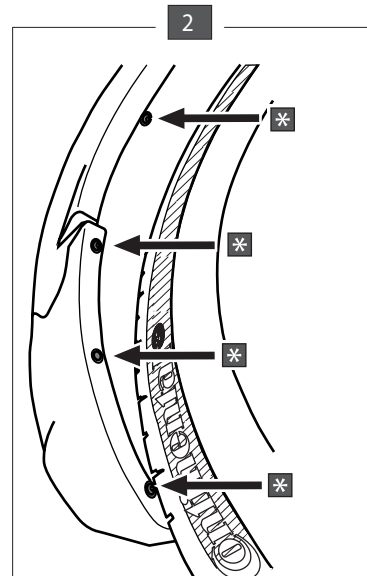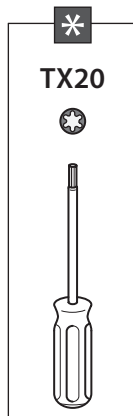
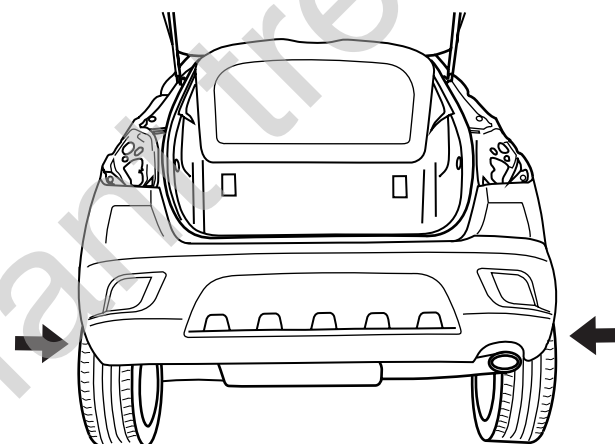
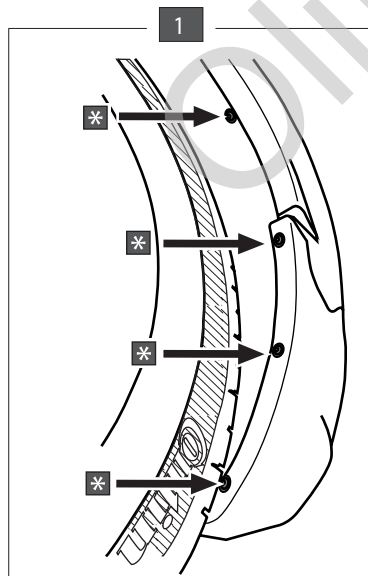
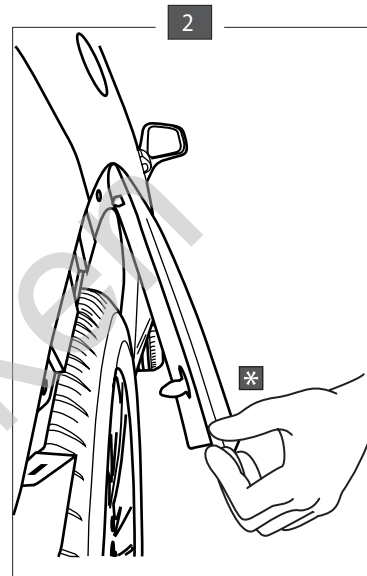
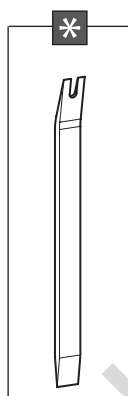
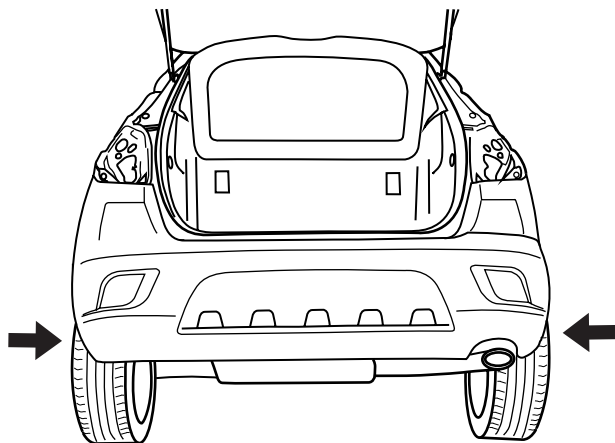
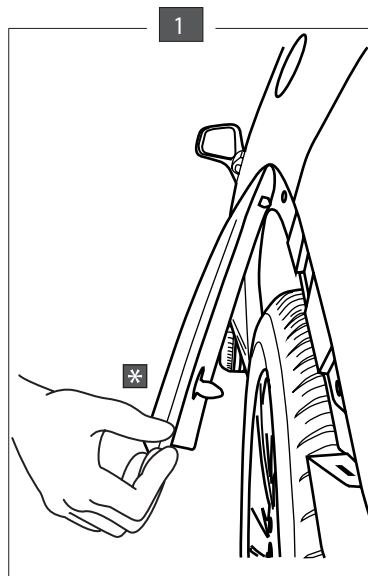







9

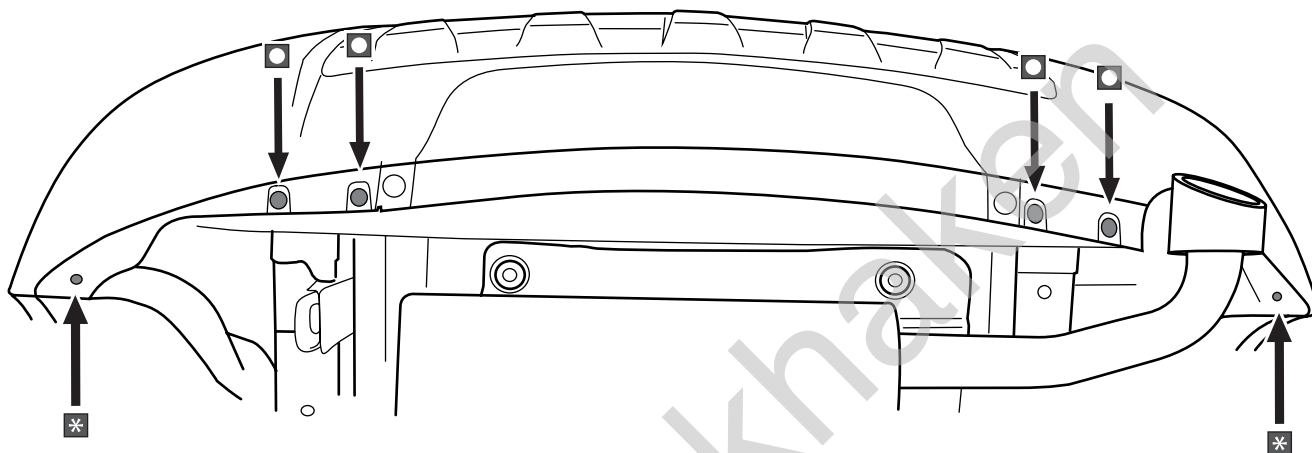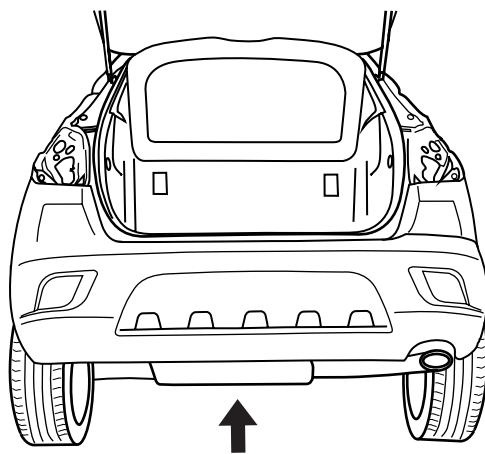
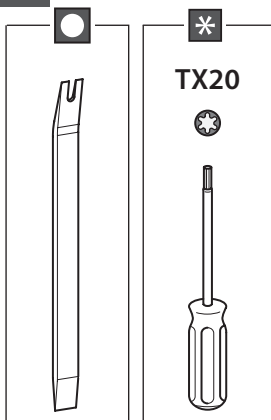


10





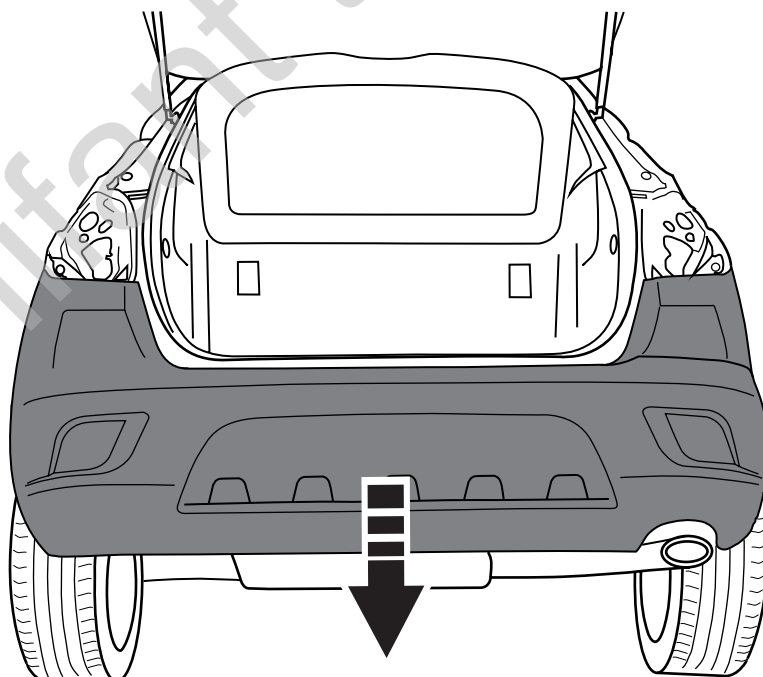


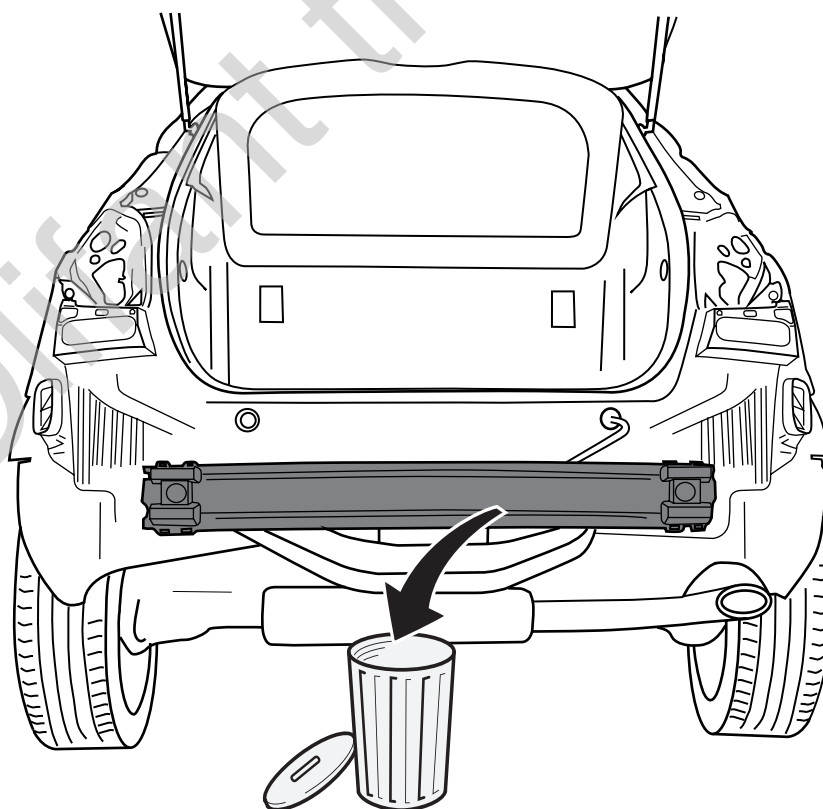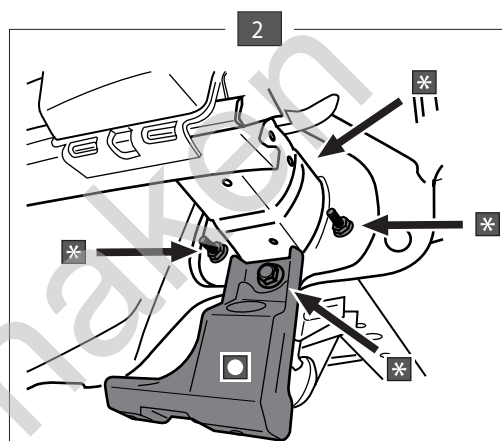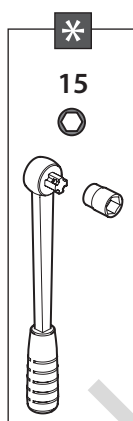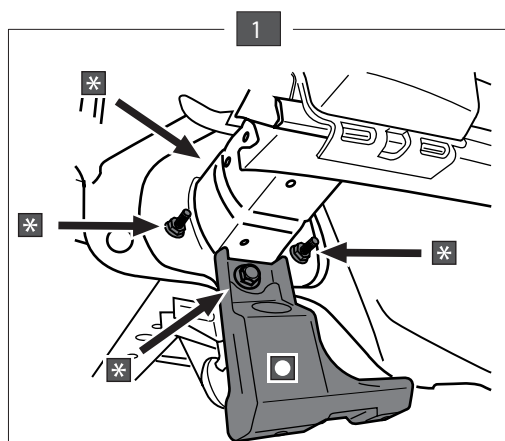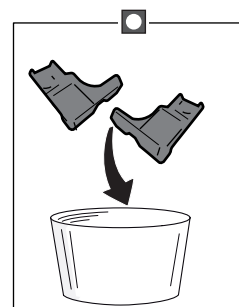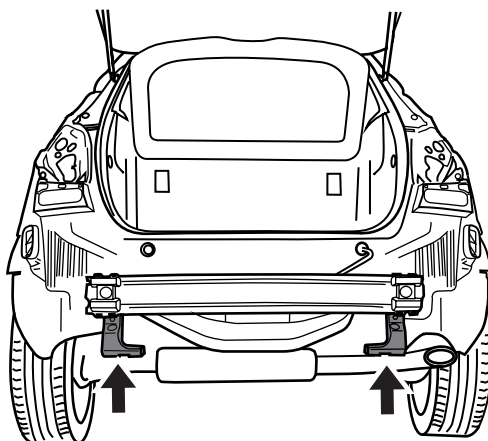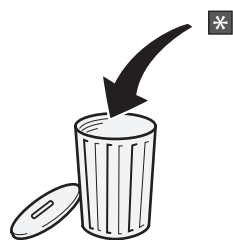

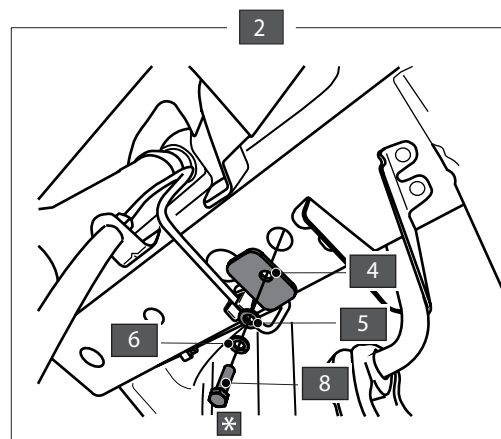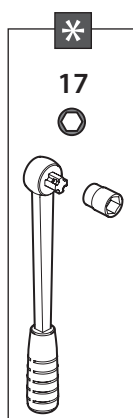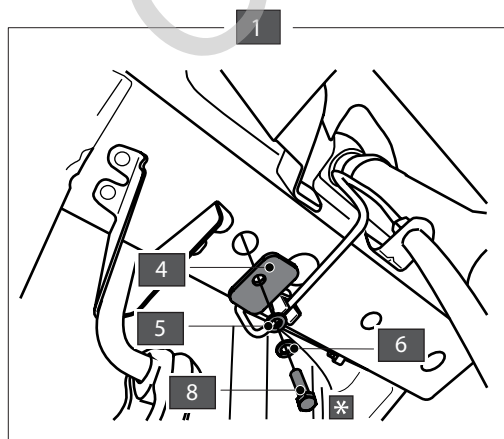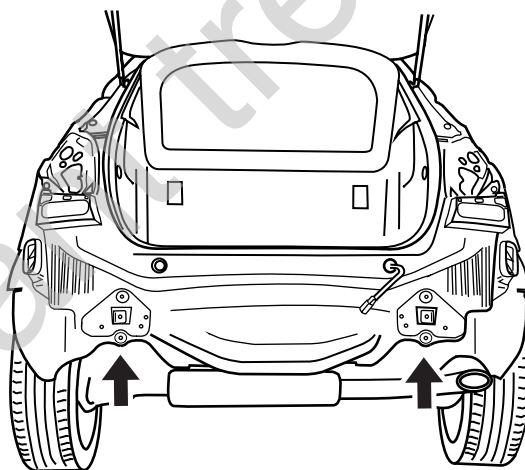
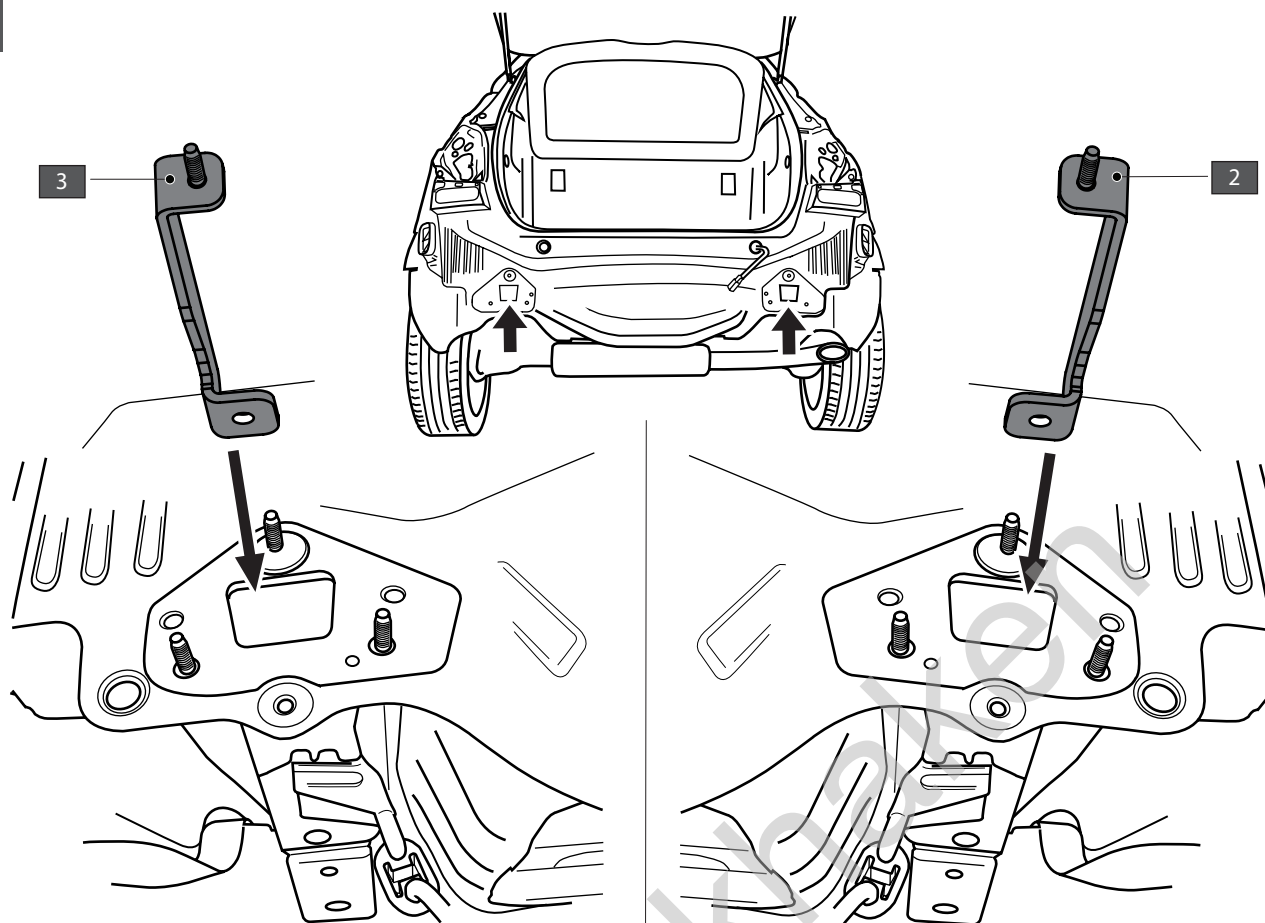


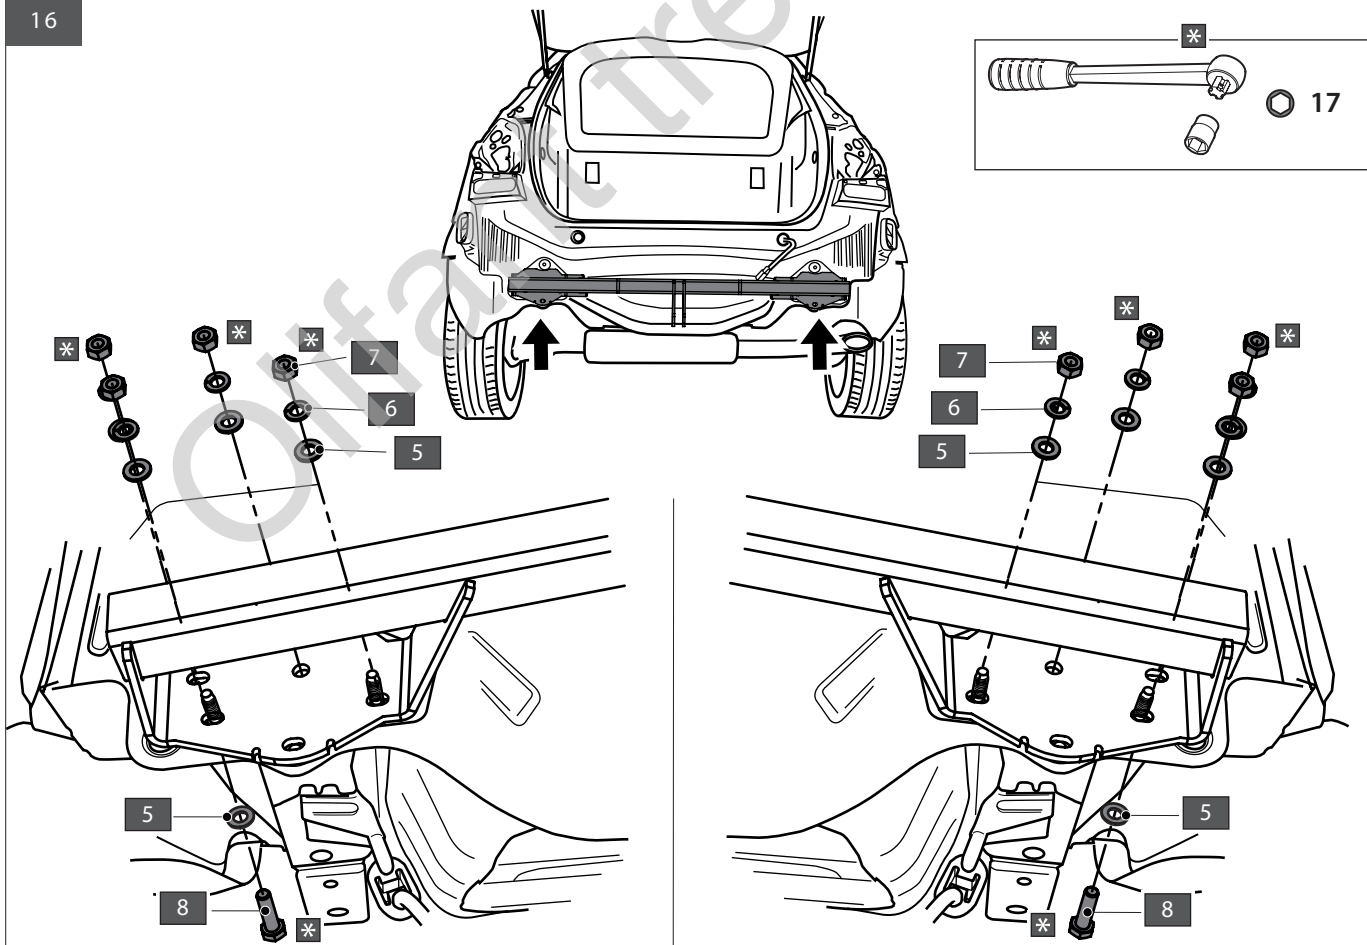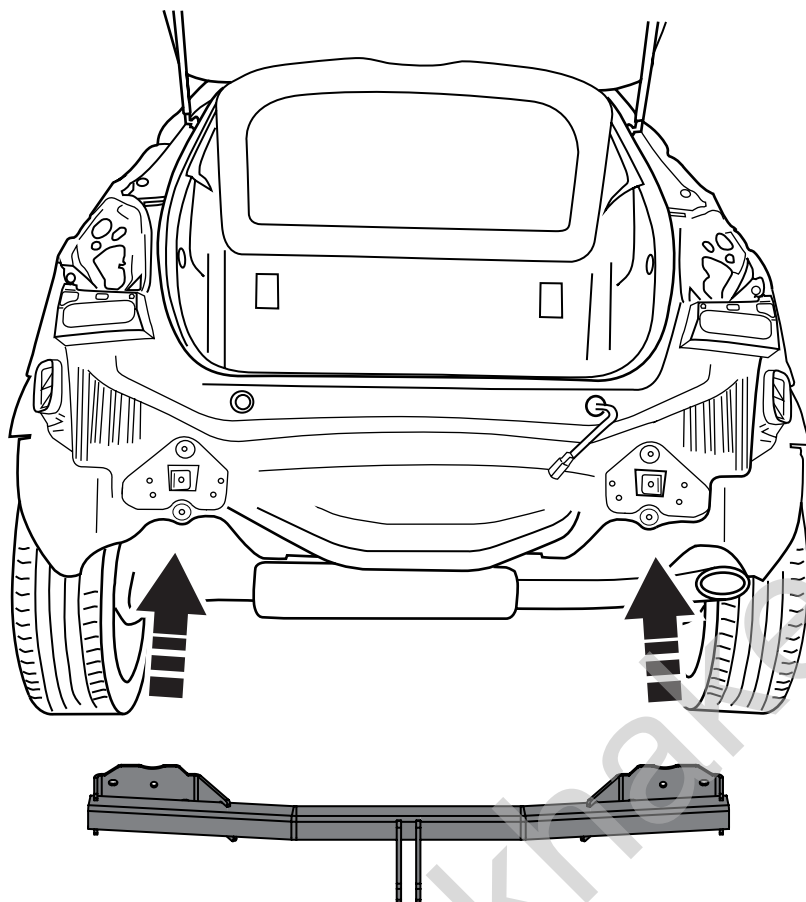

17

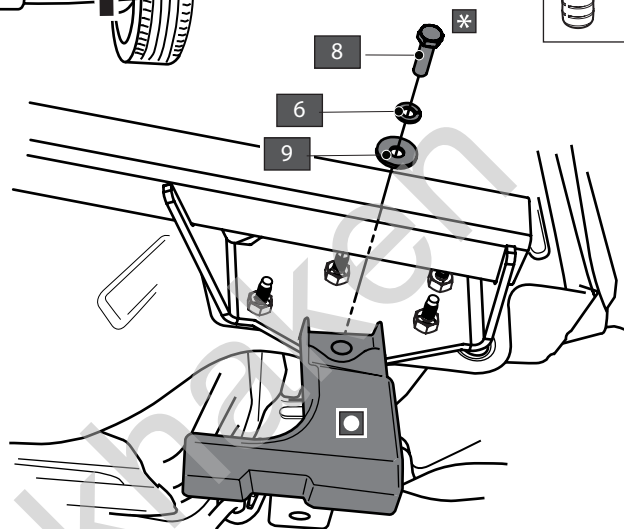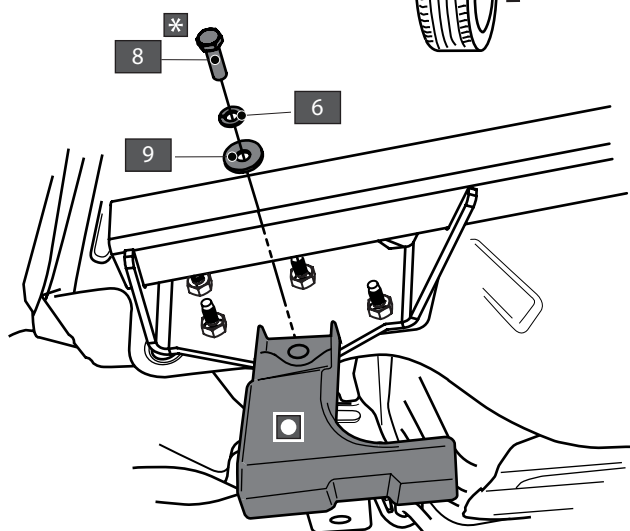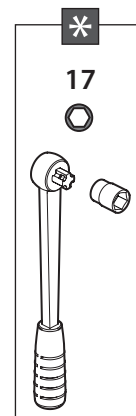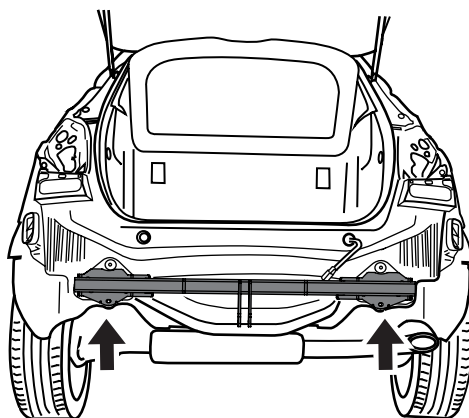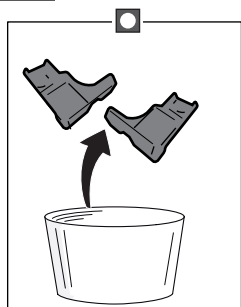

18

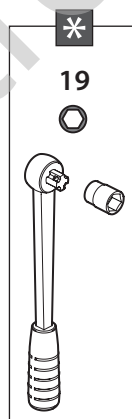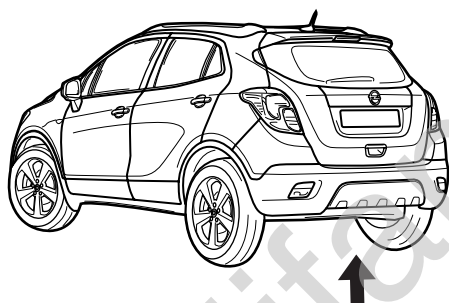


B X2 GDW REF. 900.008




C X2 GDW REF. 900.011
Ø 21.3 X 11.7

E X2 DIN931-M12 X 70




F X2 DIN985-M12



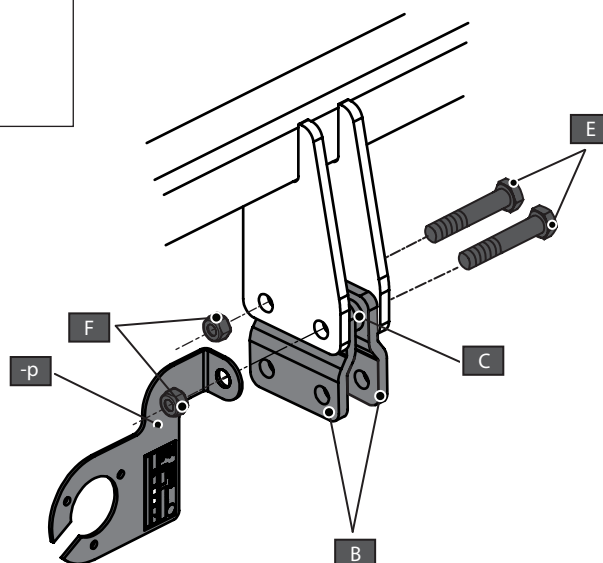




Chevrolet Trax '13 For the type T45

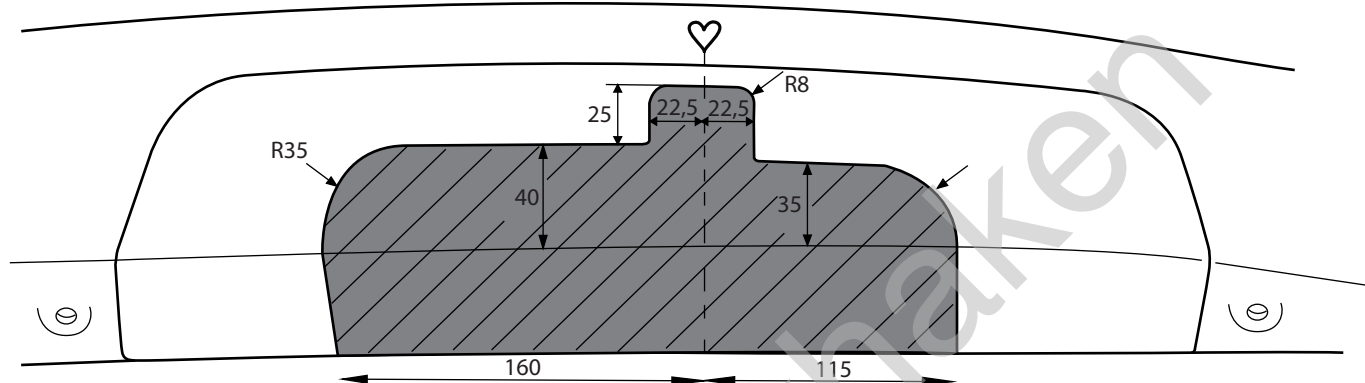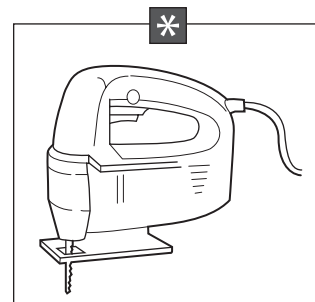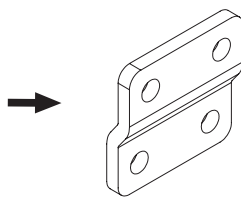

Chevrolet Trax '13 For the type T36

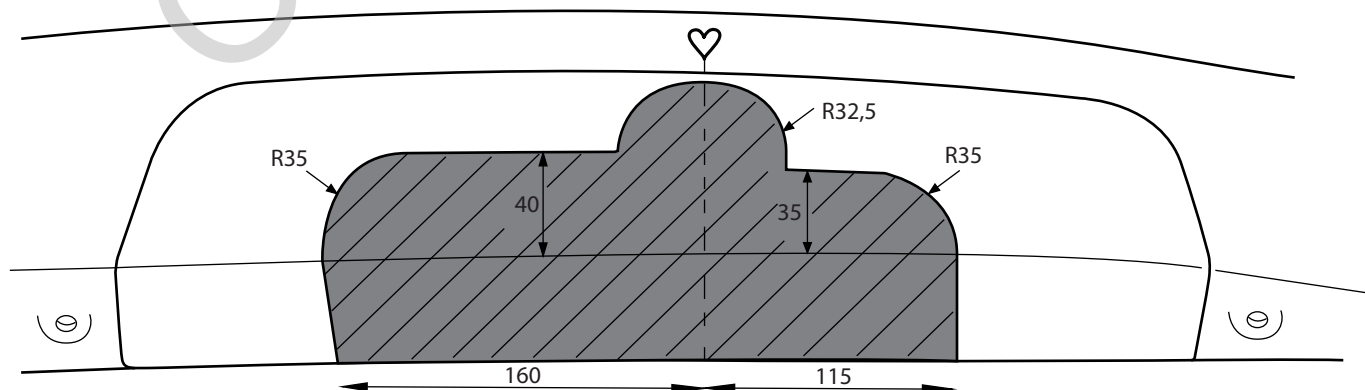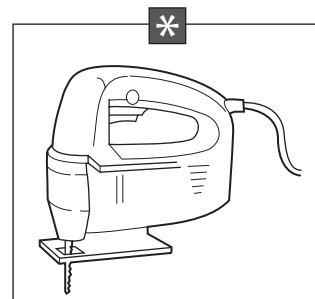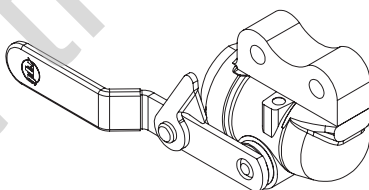

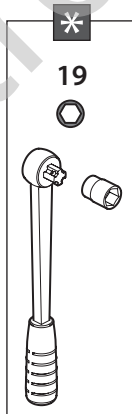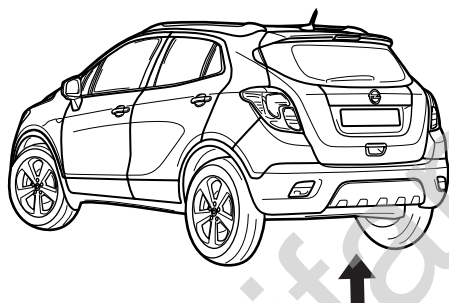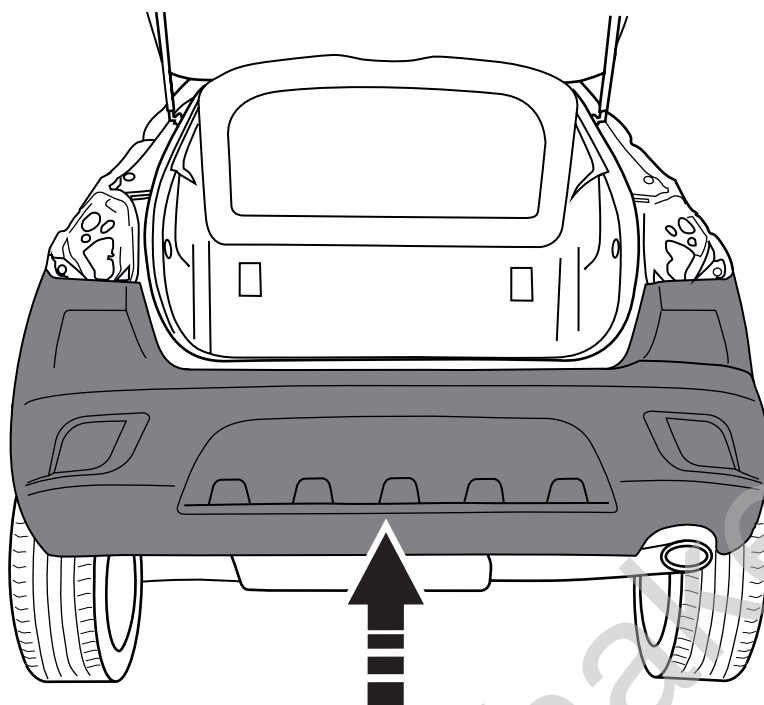

A		X1	944.M034
D		X1	GDW REF. 900.053
E		X2	DIN931-M12 X 70
F		X2	DIN985-M12

