

Chevrolet Cruze (Kombi/Estate)

(2012 - →)

C-265


- PL** **Zaczep Kulowy** Instrukcja montażu i eksploatacji
- GB** **Tow bar** Installation and operating instructions
- D** **Die Anhängerkupplung** Montage- und Gebrauchsanleitung
- ES** **Gancho de remolque** Las instrucciones de instalación y de operación
- RU** **Фаркоп** Инструкция по установке и эксплуатации ТСУ
- FR** **Attelage** Notice de montage et d'utilisation
- IT** **Gancio traino** Istruzioni di montaggio
- CZ** **Tažné zařízení** Návod na montáž a použití
- RO** **Cârlig de remorcare** Instrucția de montaj și exploatare
- SE** **Dragkulan** Monterings- och bruksanvisningar.




YES	NO
☒	☐



YES	NO
☐	☒

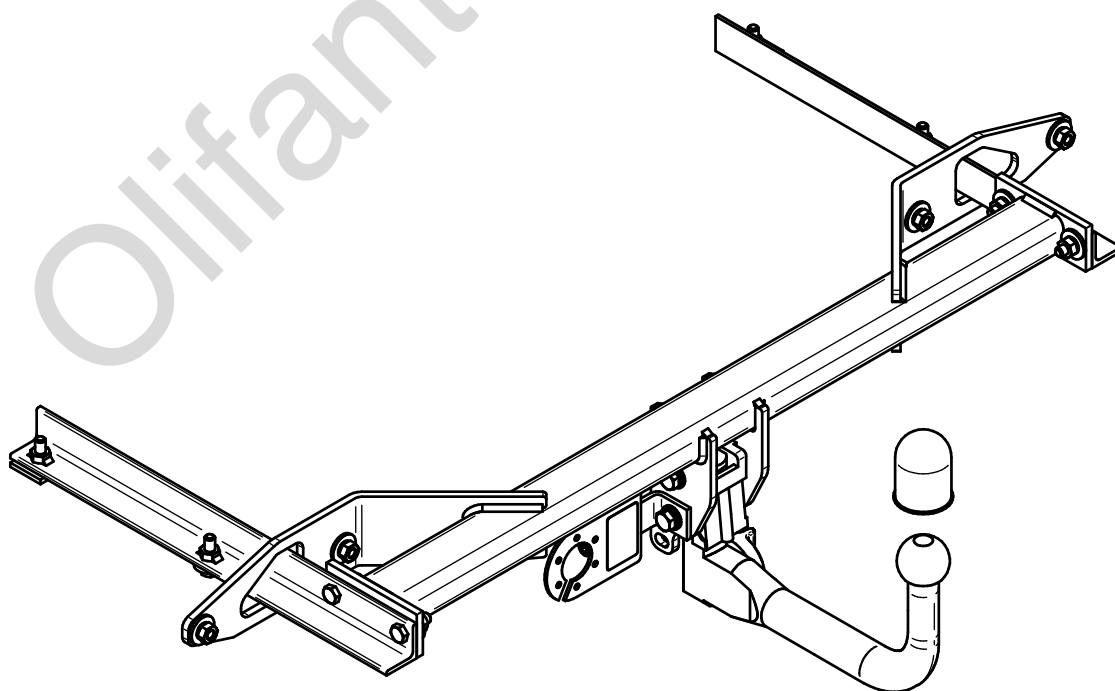

Typ: C-265
A50-X
E20 55R-01 3530
D = 9,6 kN
S = 75 kg

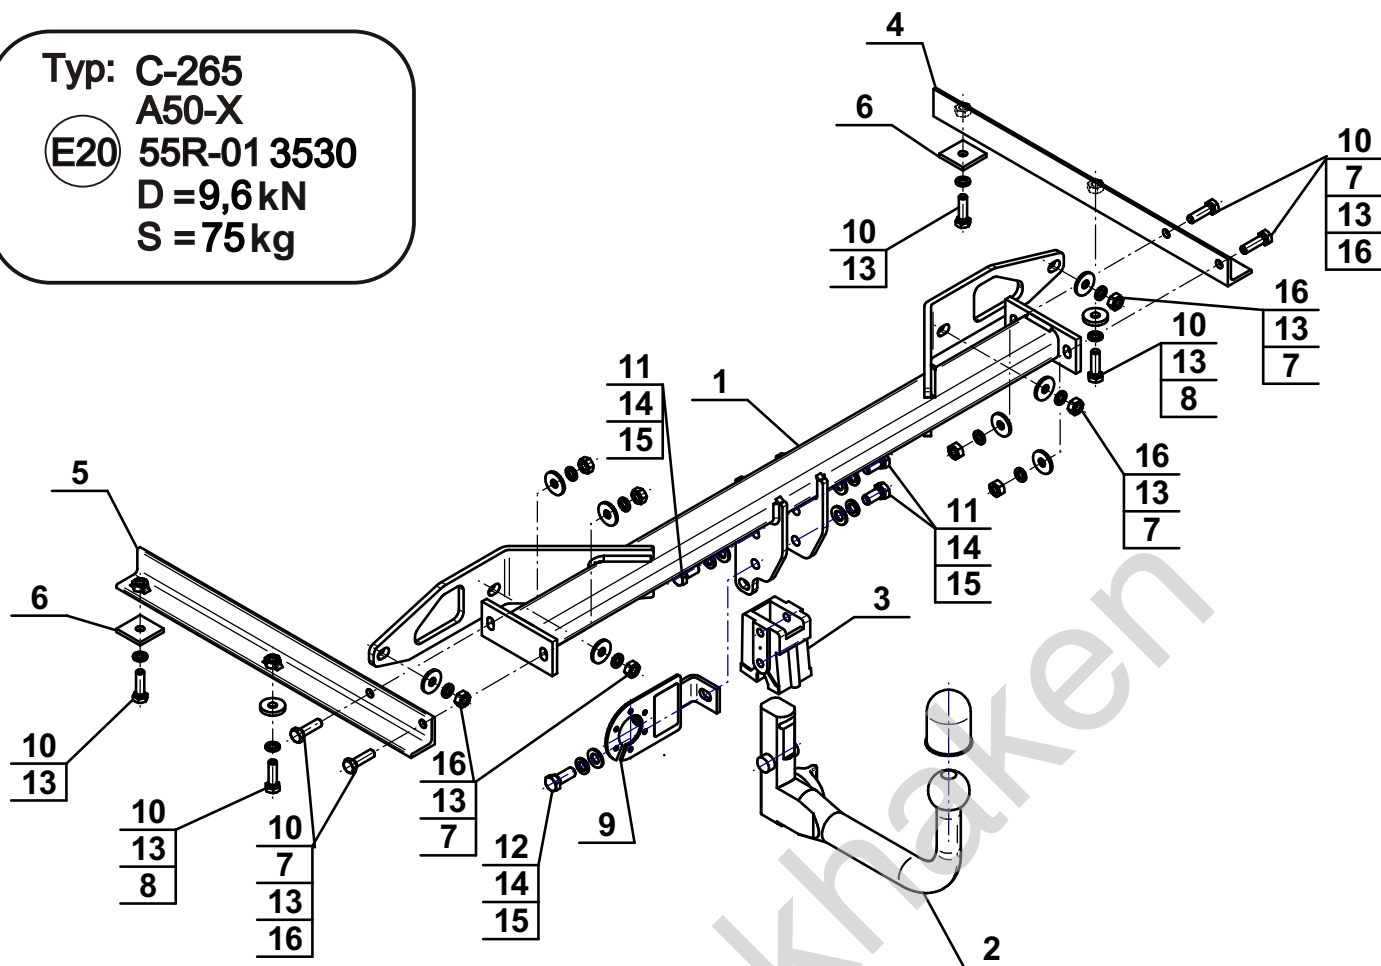


1		x1
2		x1
3		x1
4		x1
5		x1
6		x2
7		x8
8		x2
9		x1

10		M10x35	(PN/M-82105) (8.8)	x8
11		M12x25	(PN/M-82105) (8.8)	x3
12		M12x30	(PN/M-82105) (8.8)	x1
13		Ø10,2		x12
14		Ø12,2		x4
15		Ø13,0		x4
16		M10 (8)		x8




8.8	
M6 - 10 (Nm)	M12 - 85 (Nm)
M8 - 25 (Nm)	M14 - 135 (Nm)
M10 - 50 (Nm)	M16 - 200 (Nm)


1

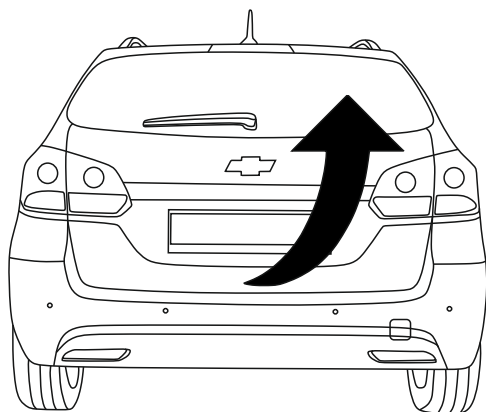


2

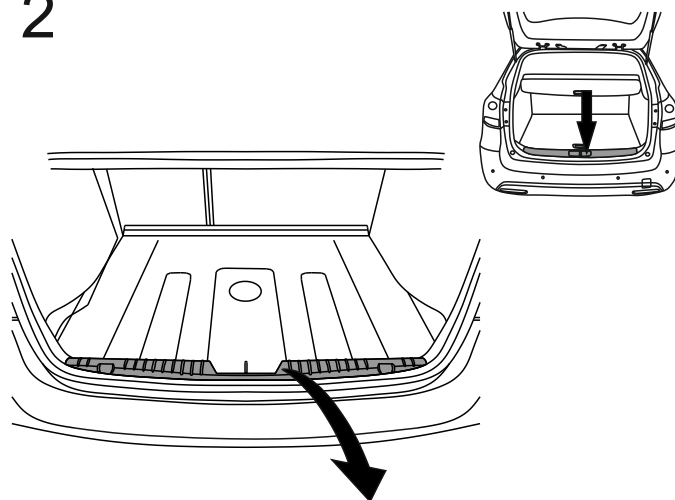


3

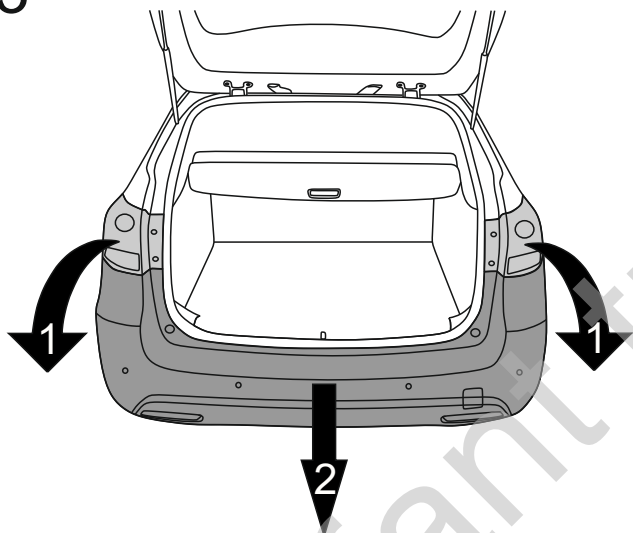


4

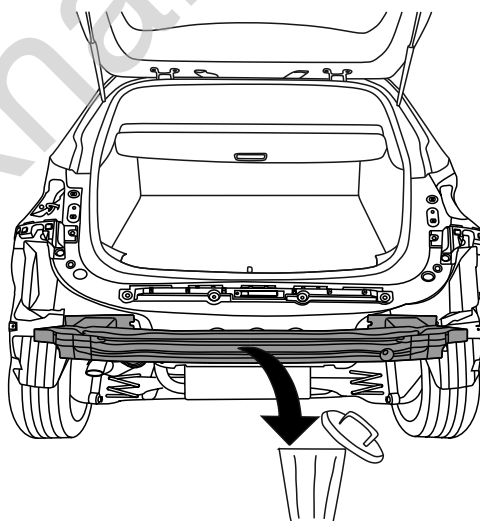


5

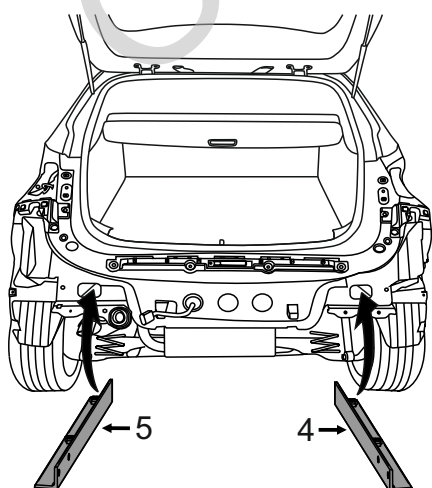


6

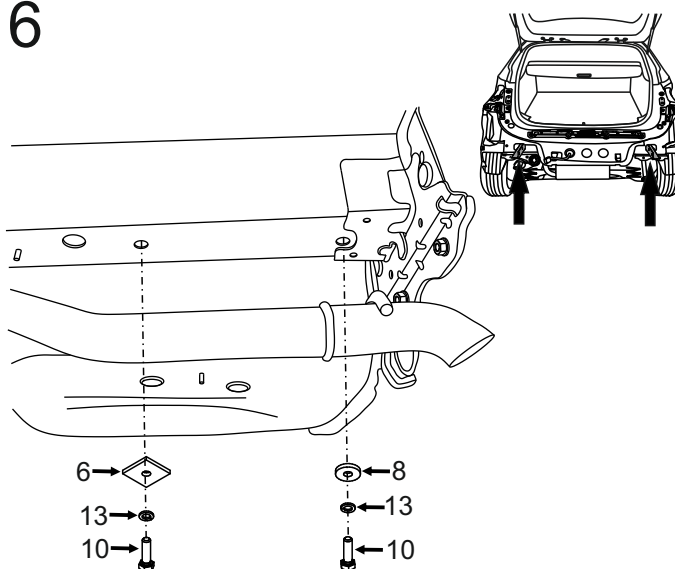


7

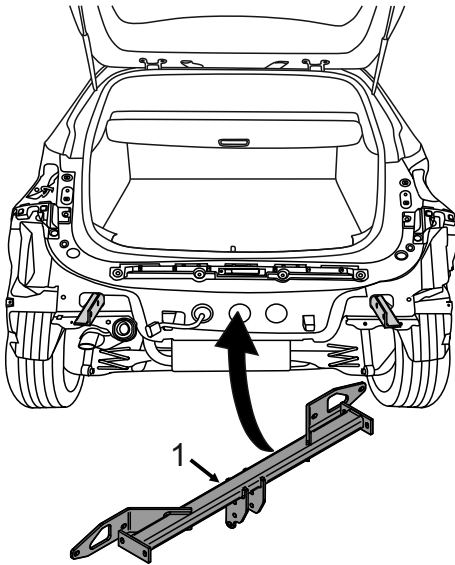


8

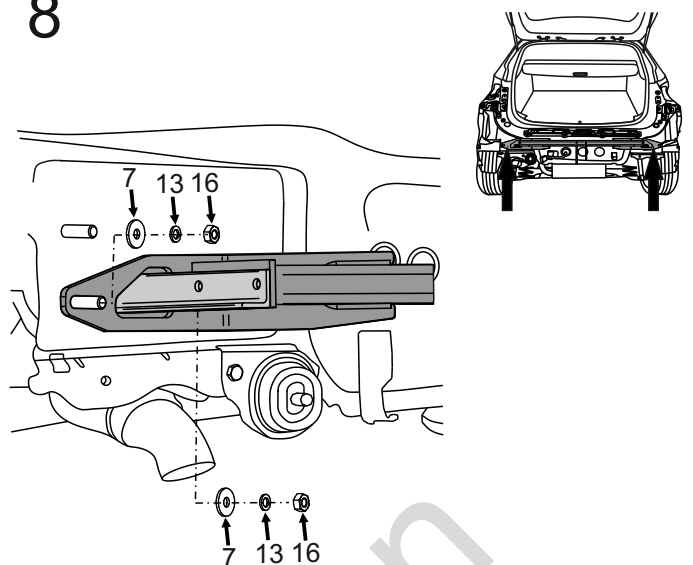


9

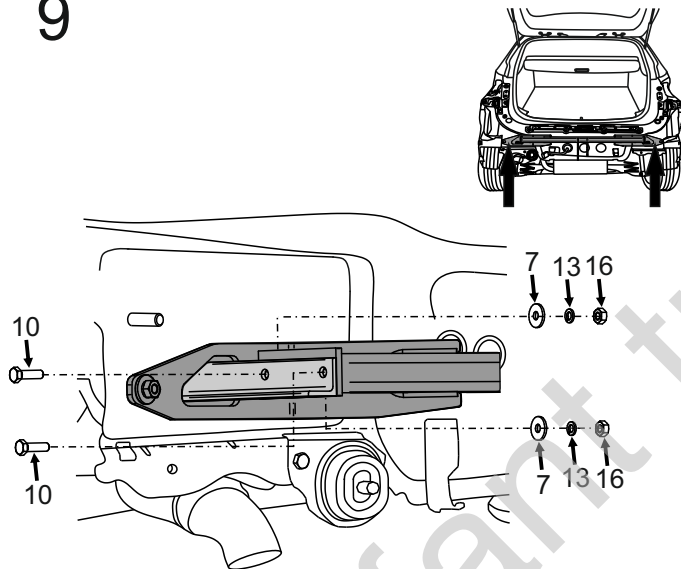


10

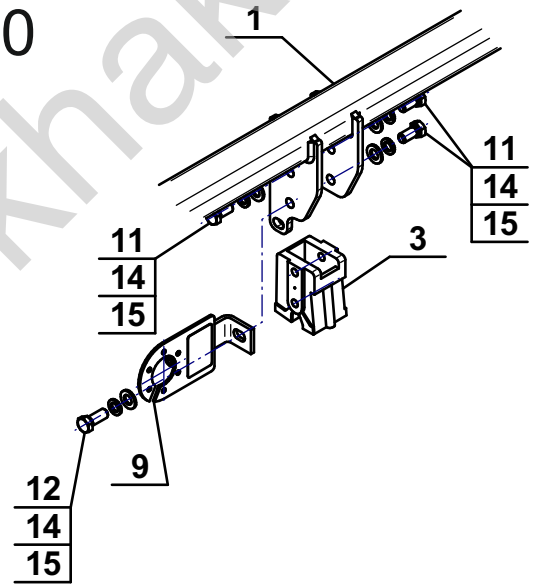


11

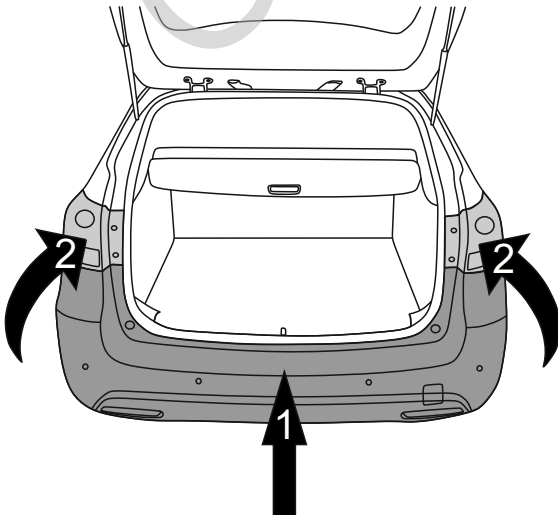

12

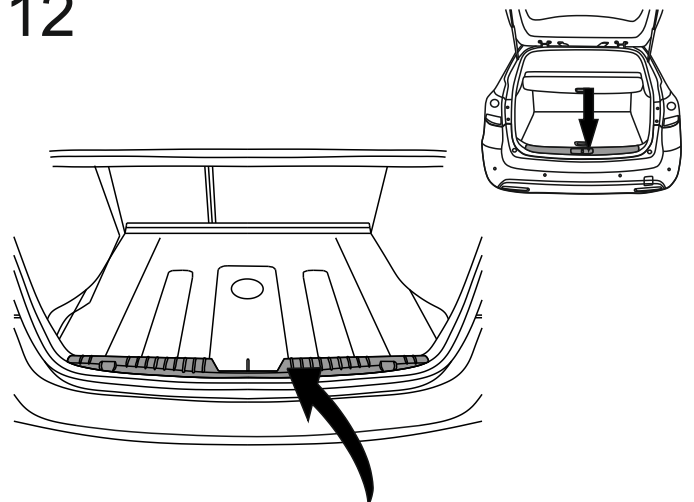

13

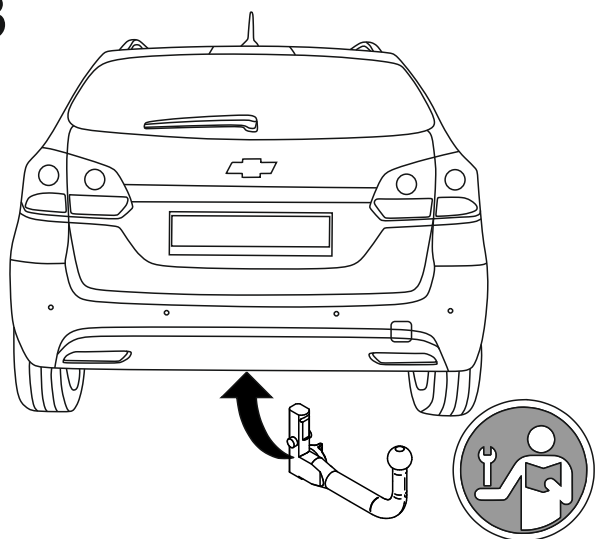

Olifant trekhaken