

Ford Transit Connect

(2003 - 2013)

F-295

- PL** **Zaczep Kulowy** Instrukcja montażu i eksploatacji
- GB** **Tow bar** Installation and operating instructions
- D** **Die Anhängerkupplung** Montage- und Gebrauchsanleitung
- ES** **Gancho de remolque** Las instrucciones de instalación y de operación
- RU** **Фаркоп** Инструкция по установке и эксплуатации ТСУ
- FR** **Attelage** Notice de montage et d'utilisation
- IT** **Gancio traino** Istruzioni di montaggio
- CZ** **Tažné zařízení** Návod na montáž a použití
- RO** **Cârlig de remorcare** Instrucția de montaj și exploatare
- SE** **Dragkulan** Monterings- och bruksanvisningar.



YES

☐


NO

☒




YES

☐

NO

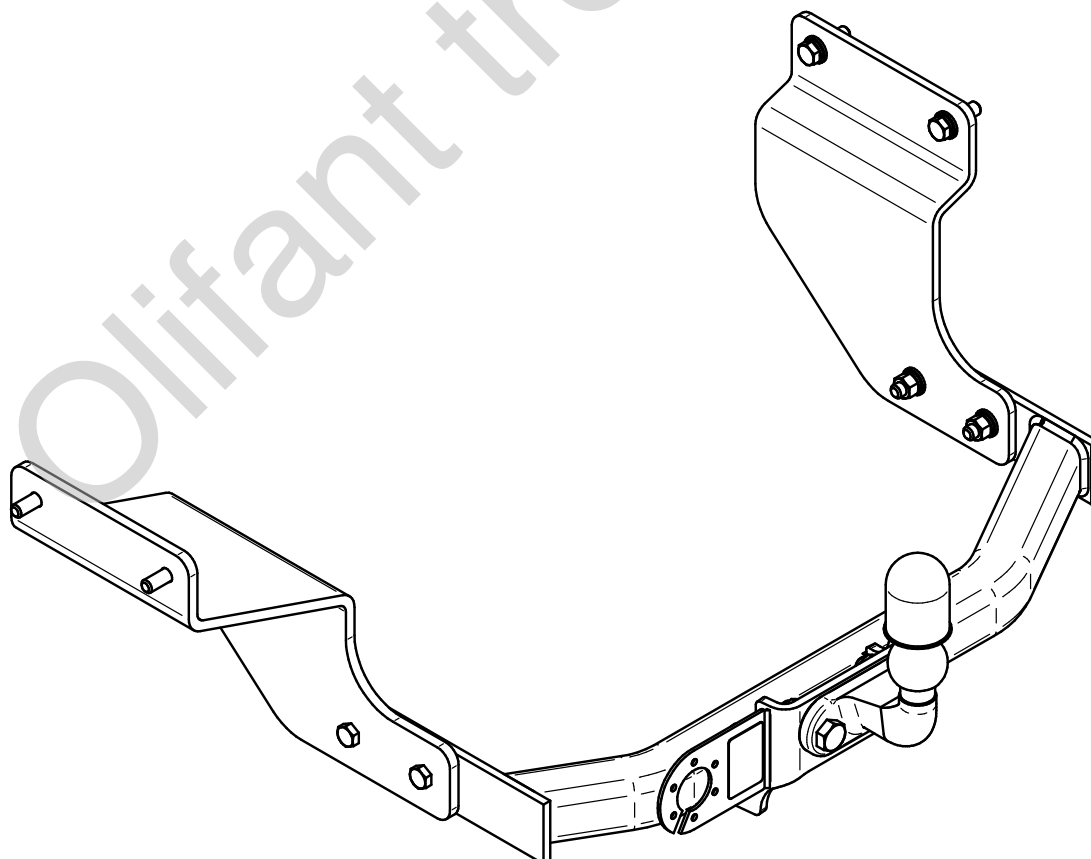☒


Typ: F-295
A50-X
e20 00-1601
D=8,1kN
S=75kg

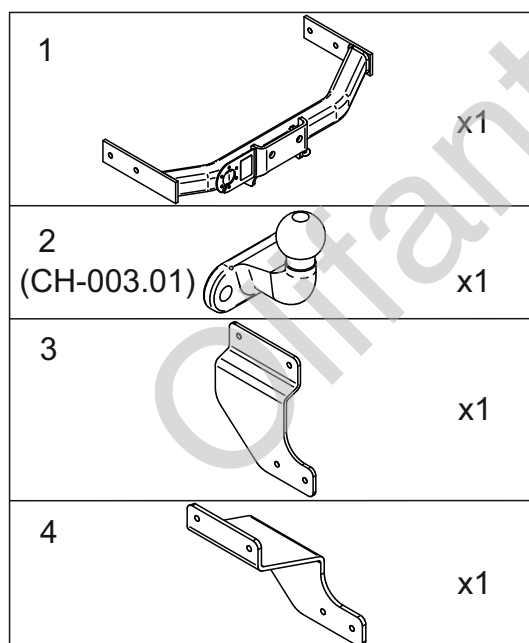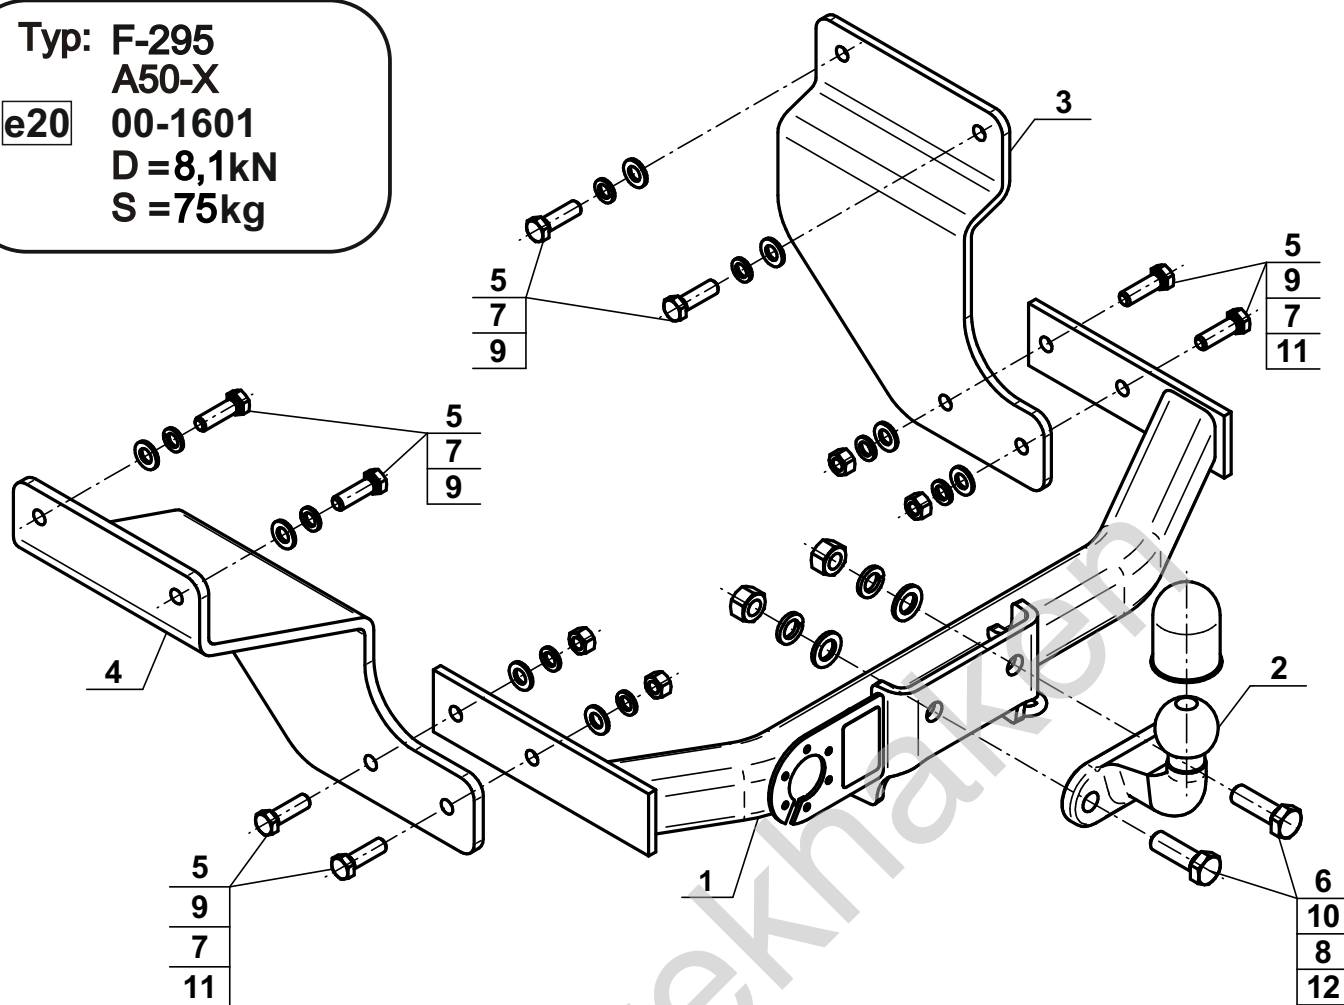


5		M12x40 (PN/M-82105) (8.8)	x8
6		M16x50 (PN/M-82105) (8.8)	x2
7		Ø12,2	x8
8		Ø16,3	x2
9		Ø13,0	x8
10		Ø17,0	x2
11		M12 (8)	x4
12		M16 (8)	x2




8.8	
M6 - 10 (Nm)	M12 - 85 (Nm)
M8 - 25 (Nm)	M14 - 135 (Nm)
M10 - 50 (Nm)	M16 - 200 (Nm)


1

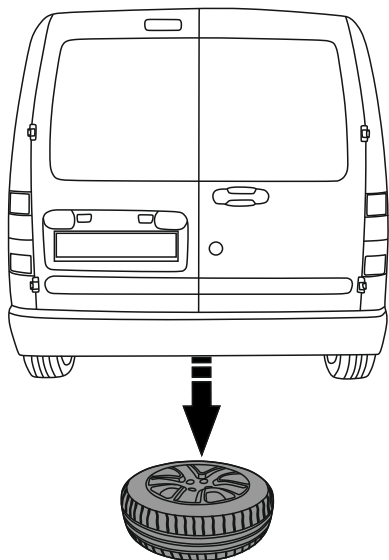


2

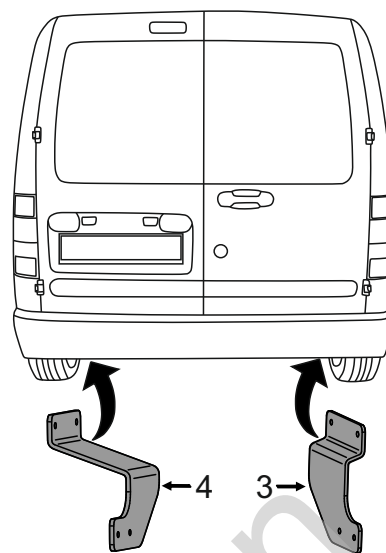


3

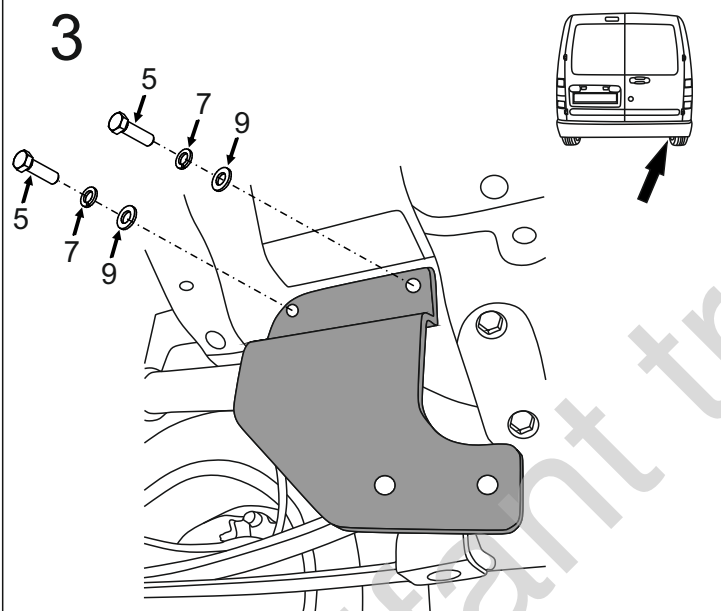


4

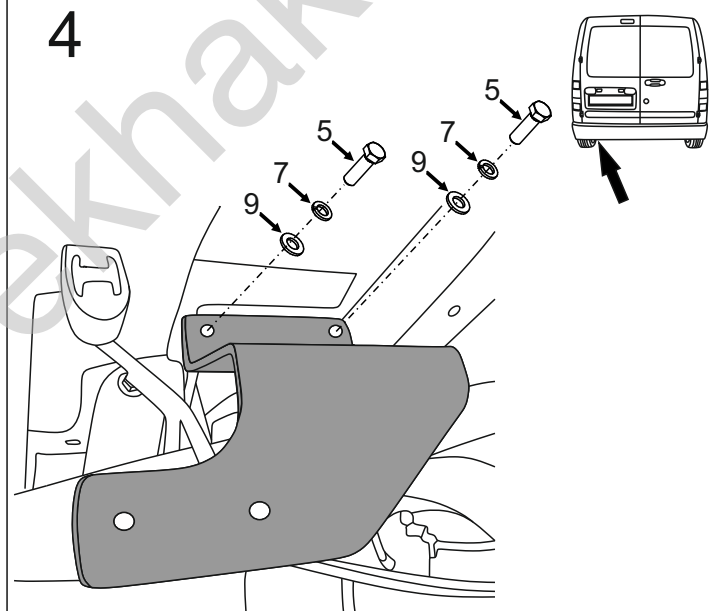


5

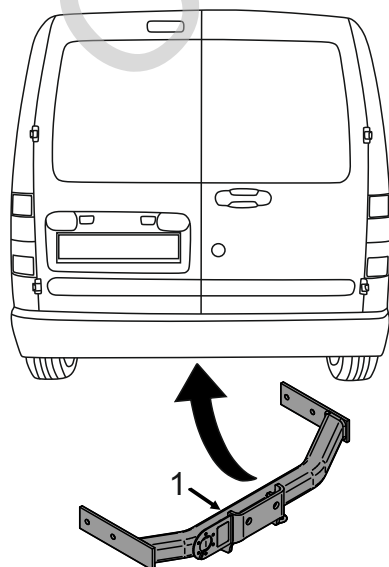


6

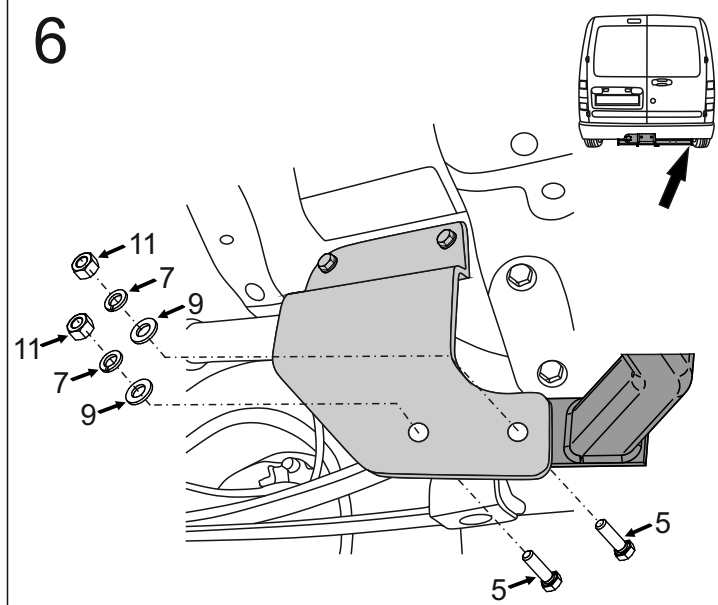

7

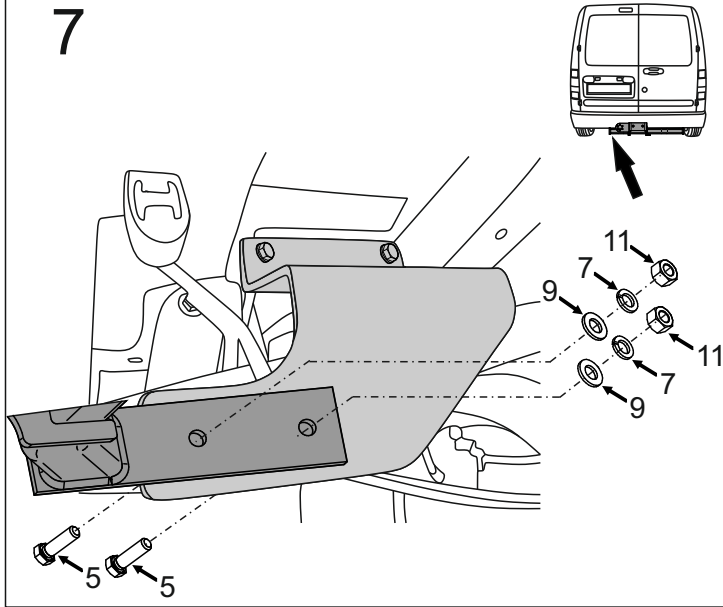

8

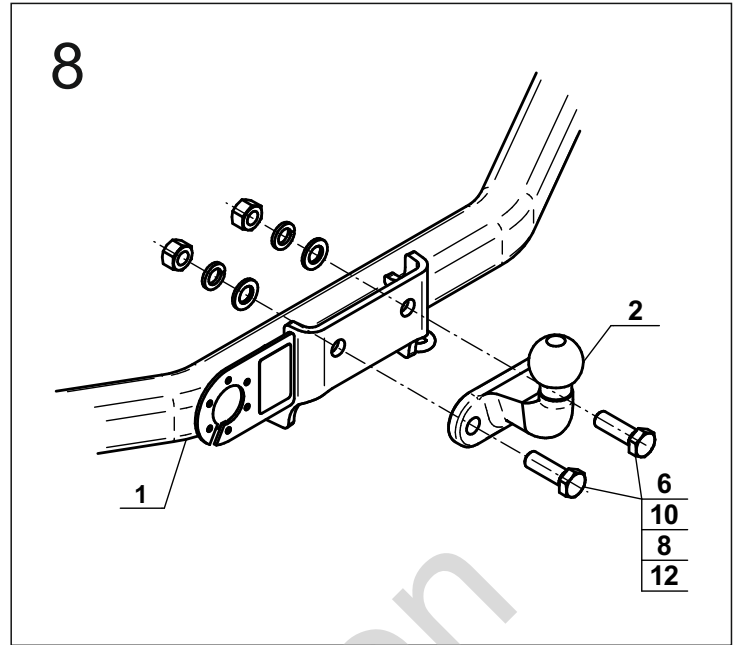

9

