

Jaguar XF (4D) (X260)

(2015 - →)

J-010

PL **Zaczepek Kulowy** Instrukcja montażu i eksploatacji

GB **Tow bar** Installation and operating instructions

D **Die Anhängerkupplung** Montage- und Gebrauchsanleitung

ES **Gancho de remolque** Las instrucciones de instalación y de operación

RU **Фаркоп** Инструкция по установке и эксплуатации ТСУ



FR **Attelage** Notice de montage et d'utilisation

IT **Gancio traino** Istruzioni di montaggio



CZ **Tažné zařízení** Návod na montáž a použití

RO **Cârlig de remorcare** Instrucția de montaj și exploatare

SE **Dragkulan** Monterings- och bruksanvisningar.

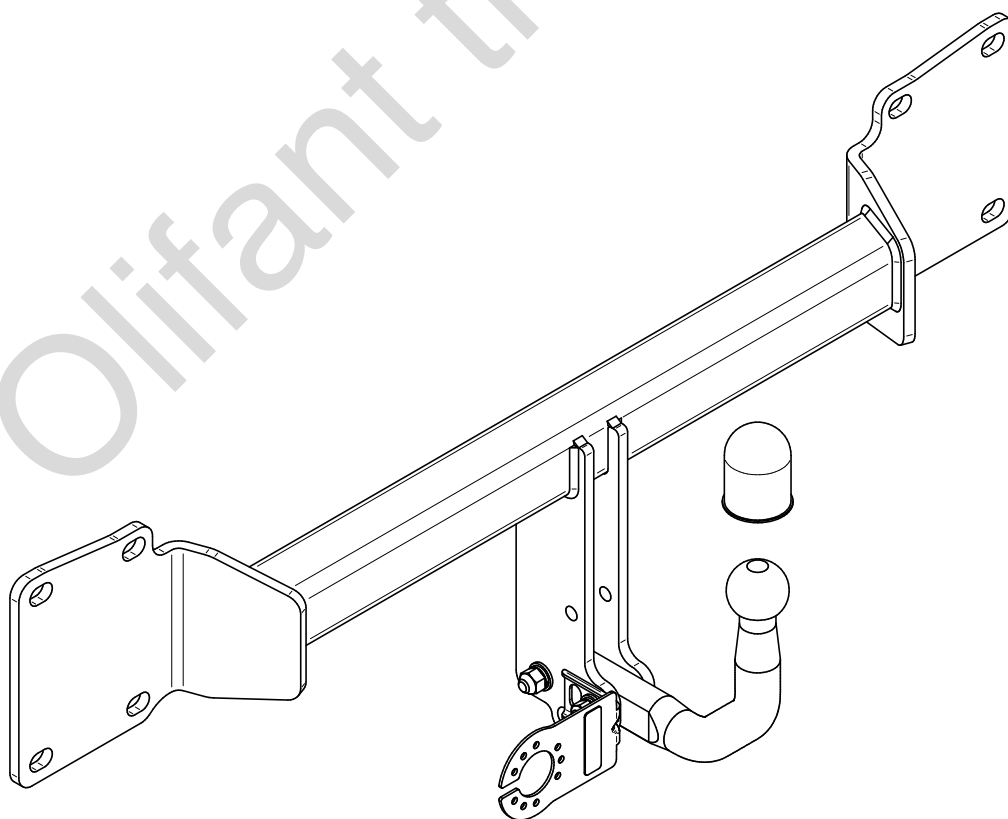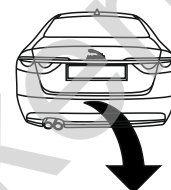

Typ: J-010
A50-X
E20 55R-01 5686
D = 11,5 kN
S = 110kg

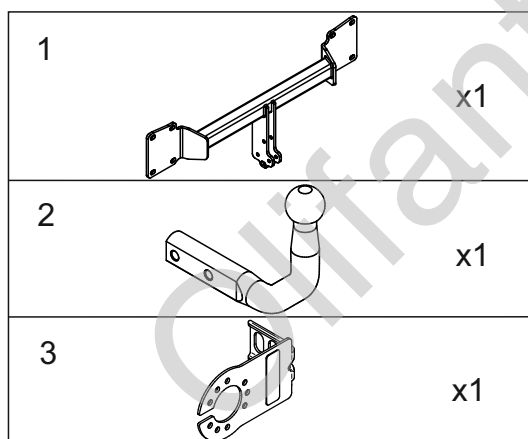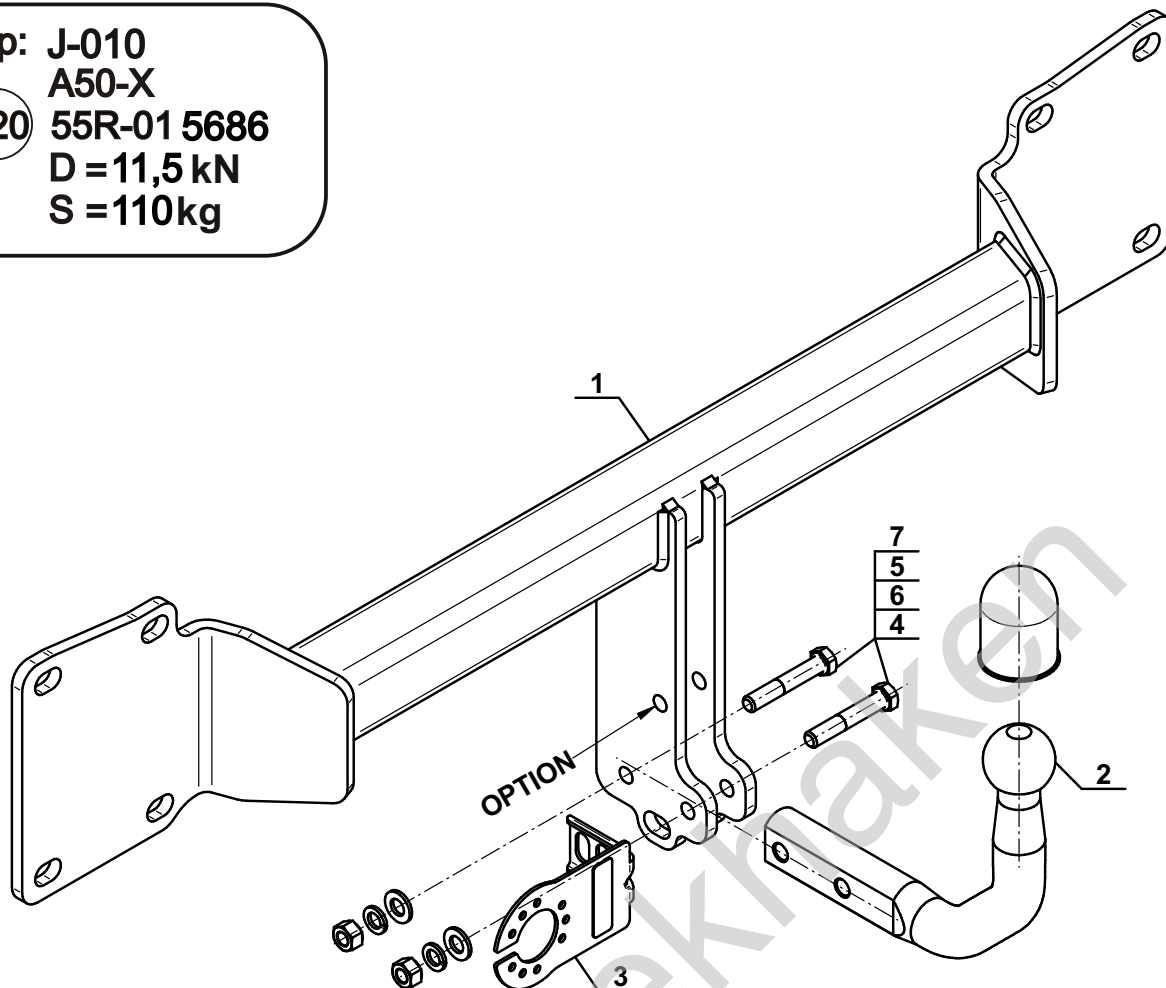

4		M12x70 (PN/M-82101) (8.8)	x2
5		Ø12,2	x2
6		Ø13,0	x2
7		M12 (8)	x2


OPTION

	1x	M12x35	1x	Ø12,2	1x	M12
	1x	Ø13,0				
(CZ-051.00)						




8.8	
M8 - 25 (Nm)	M14 - 135 (Nm)
M10 - 50 (Nm)	M16 - 200 (Nm)
M12 - 85 (Nm)	


1

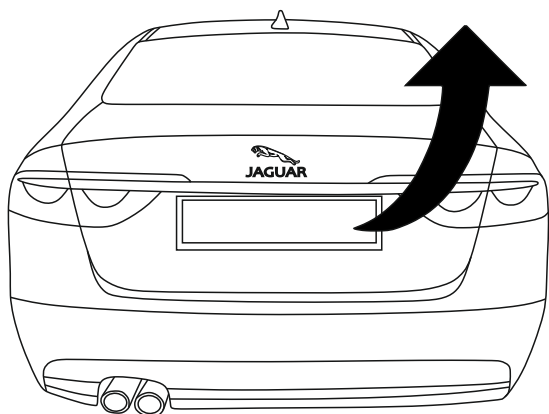


2

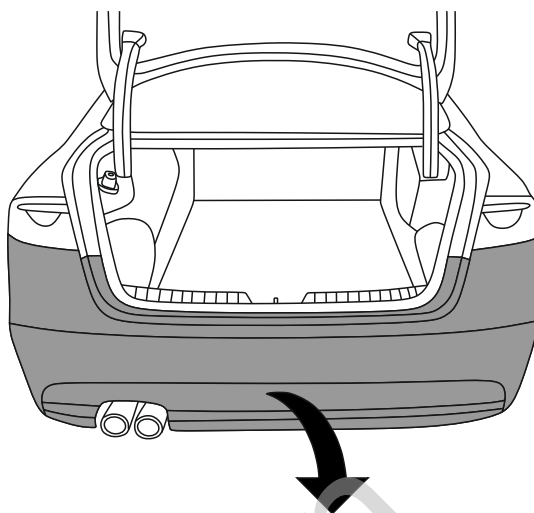


3

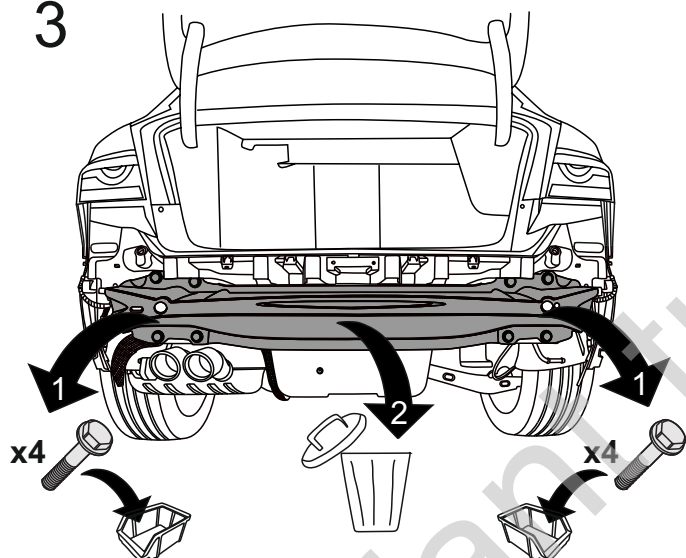


4

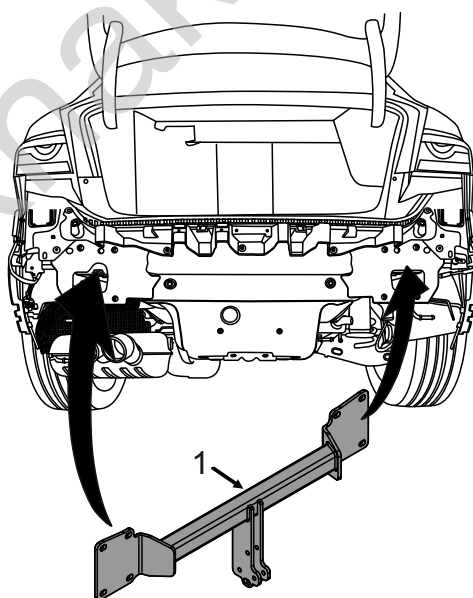


5

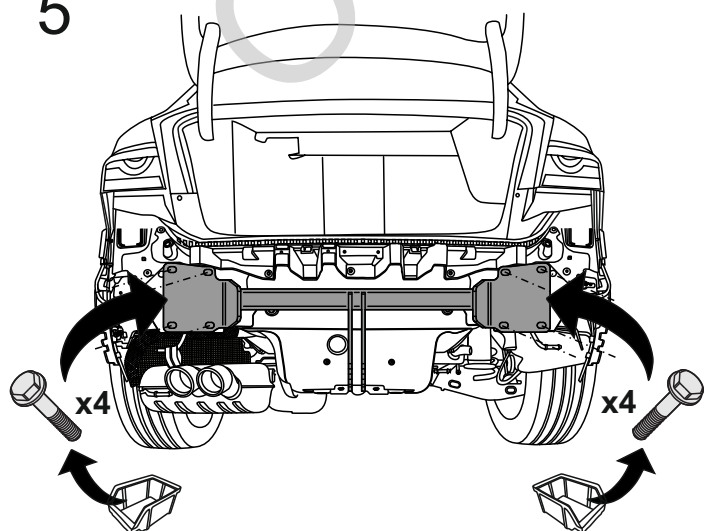


6

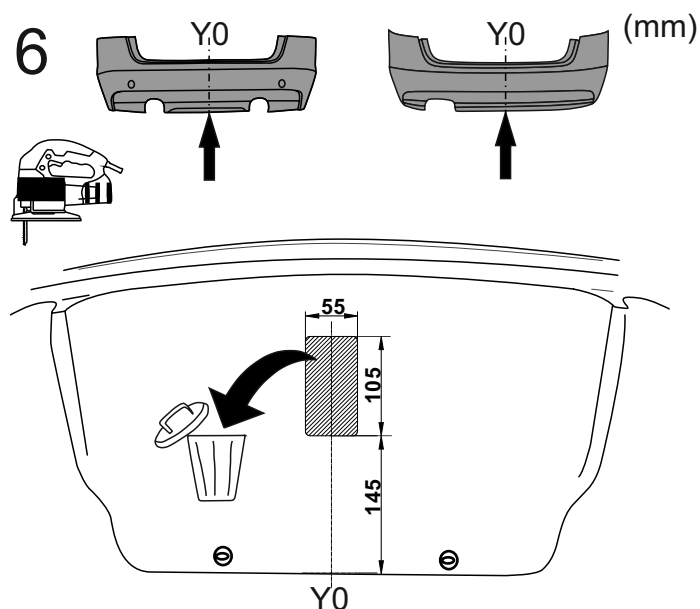

7

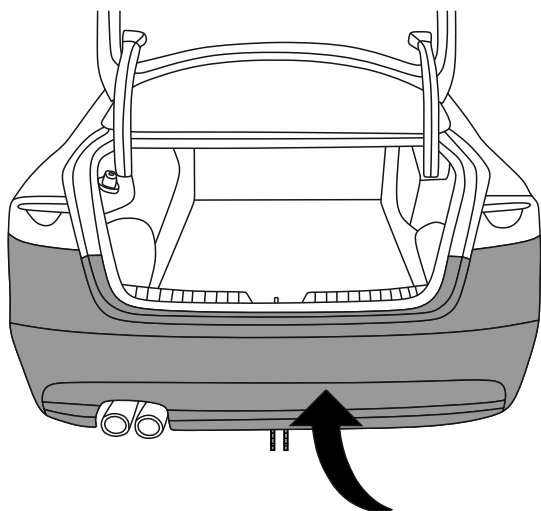


8

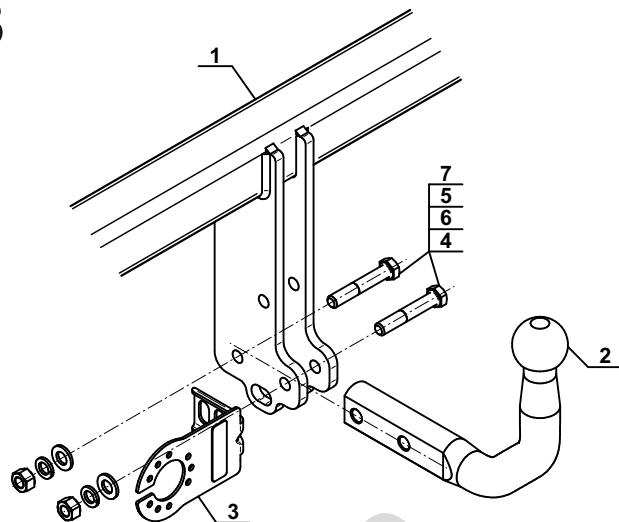

OPTION

1

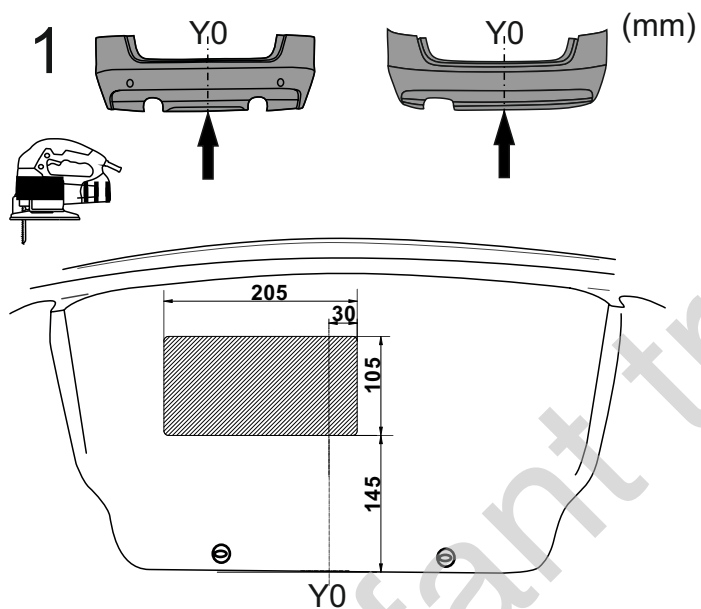

2

