


33-100 Tarnów ul.Przemysłowa 27a
www.steinhof.pl

Renault Kangoo III (+AdBlue)	(06/2021 - →)
Renault Kangoo III E-Tech (EV)	(06/2021 - →)
Nissan Townstar (XFK), (+AdBlue)	(12/2021 - →)
Mercedes-Benz Citan II (W420), (+AdBlue)	(09/2021 - →)
Mercedes-Benz Citan II Tourer (W420), (+AdBlue)	(09/2021 - →)
Mercedes-Benz T-Class (W420), (+AdBlue)	(05/2022 - →)

R-151


- PL** **Zaczep Kulowy** Instrukcja montażu i eksploatacji
- GB** **Tow bar** Installation and operating instructions
- D** **Die Anhängerkupplung** Montage- und Gebrauchsanleitung
- ES** **Gancho de remolque** Las instrucciones de instalación y de operación
- RU** **Фаркоп** Инструкция по установке и эксплуатации ТСУ
- FR** **Attelage** Notice de montage et d'utilisation
- IT** **Gancio traino** Istruzioni di montaggio
- CZ** **Tažné zařízení** Návod na montáž a použití
- RO** **Cârlig de remorcare** Instrucția de montaj și exploatare
- SE** **Dragkulan** Monterings- och bruksanvisningar.

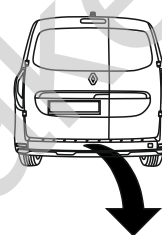


YES	NO
☒	☐






YES	NO
☒	☐

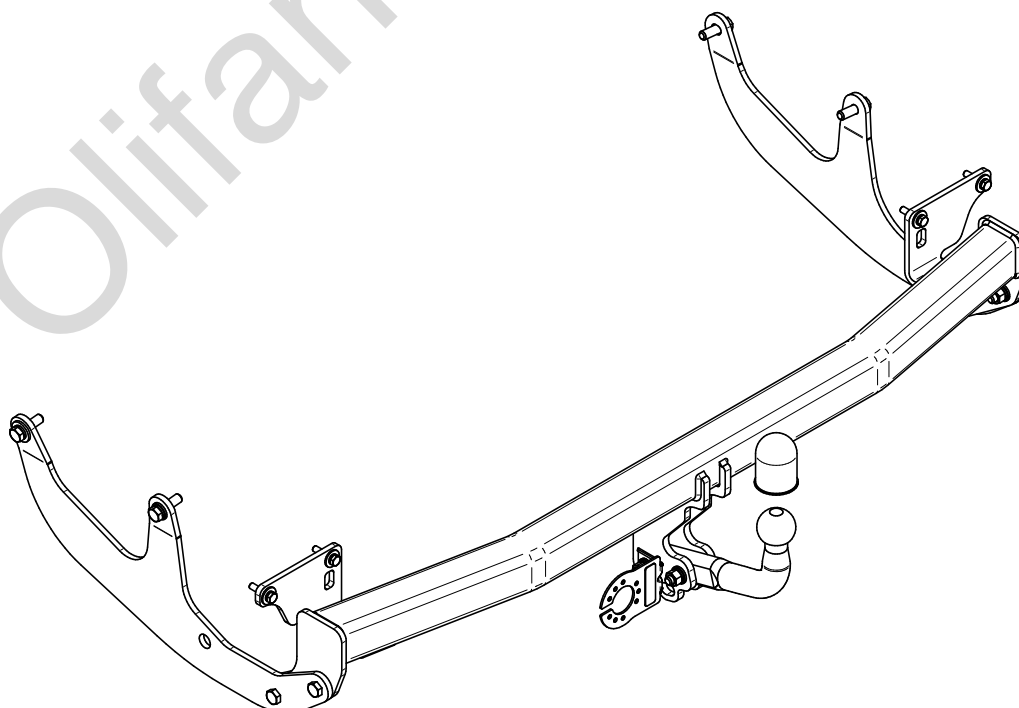

Typ: R-151
A50-X
E₂₀ 55R-03 7186
D=9,5kN
S=90kg

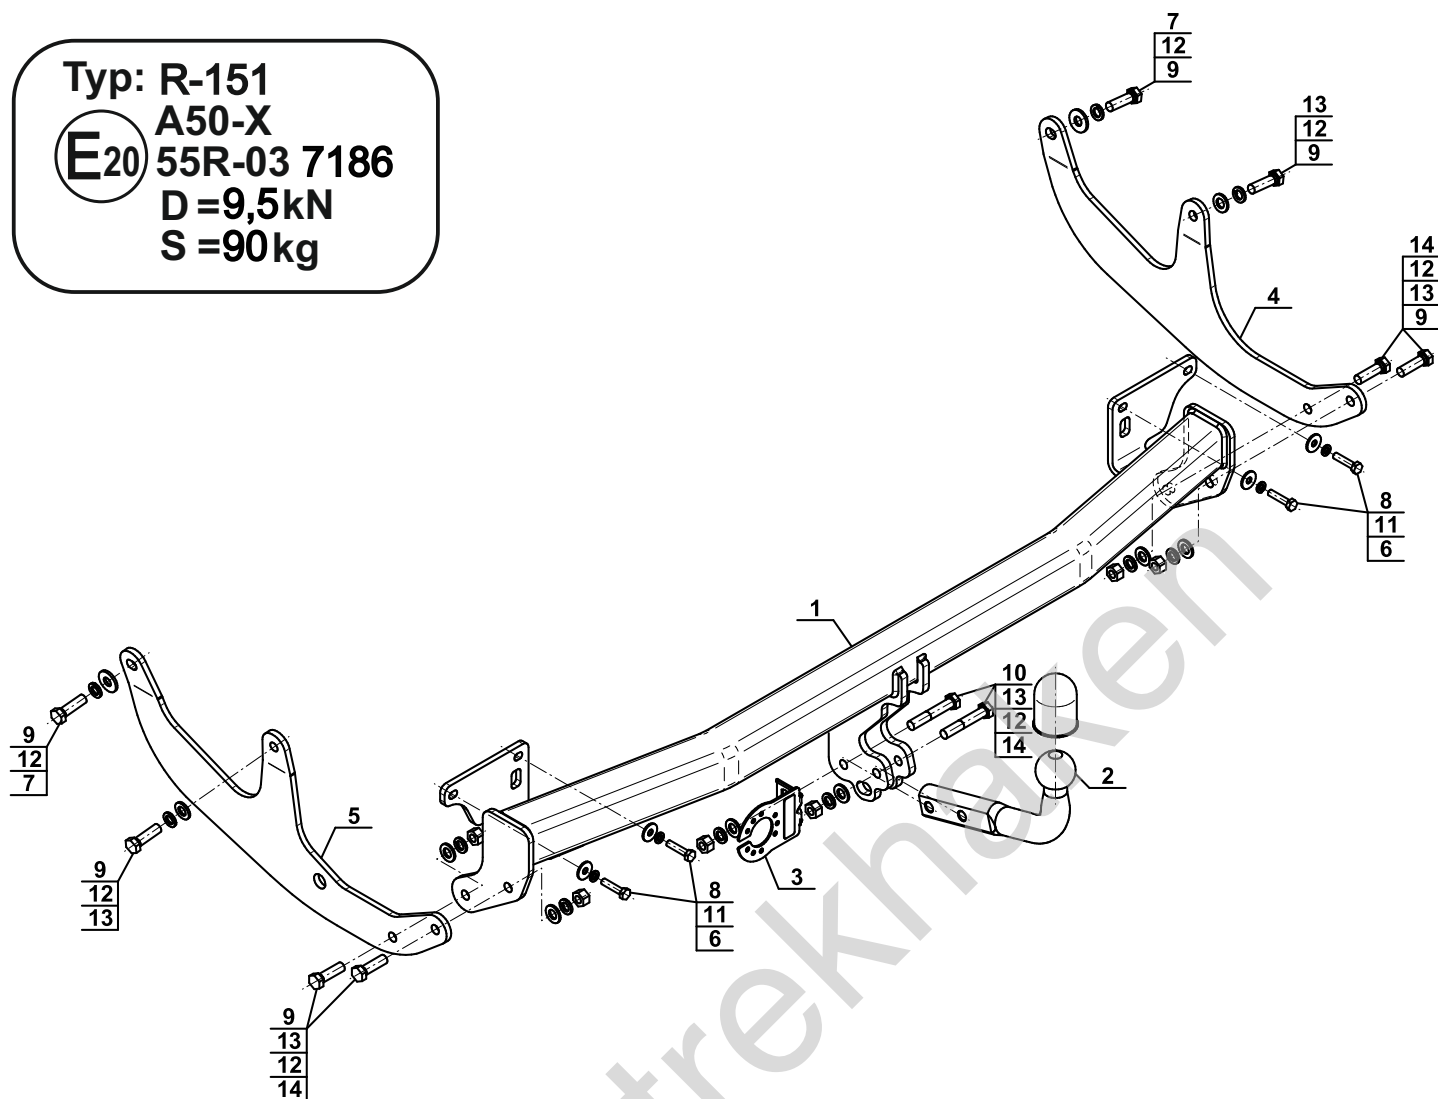

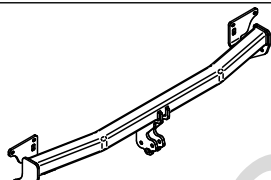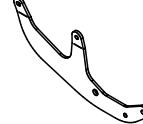
1		x1
2		x1
3		x1
4		x1
5		x1

6		Ø24/Ø8,5x2	x4
7		Ø30/Ø12,5x3	x2
8		M8x35 (ISO 4017) (8.8)	x4
9		M12x40 (ISO 4017) (8.8)	x8
10		M12x70 (ISO 4014) (8.8)	x2
11		Ø8,2	x4
12		Ø12,2	x10
13		Ø13,0	x8
14		M12 (8)	x6




8.8	
M6 - 10 (Nm)	M12 - 85 (Nm)
M8 - 25 (Nm)	M14 - 135 (Nm)
M10 - 50 (Nm)	M16 - 200 (Nm)


1

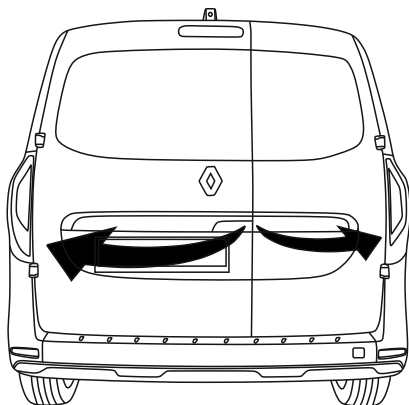


2

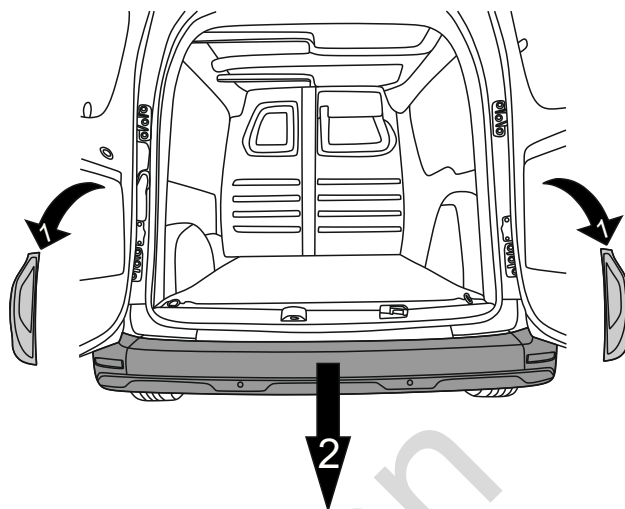


3

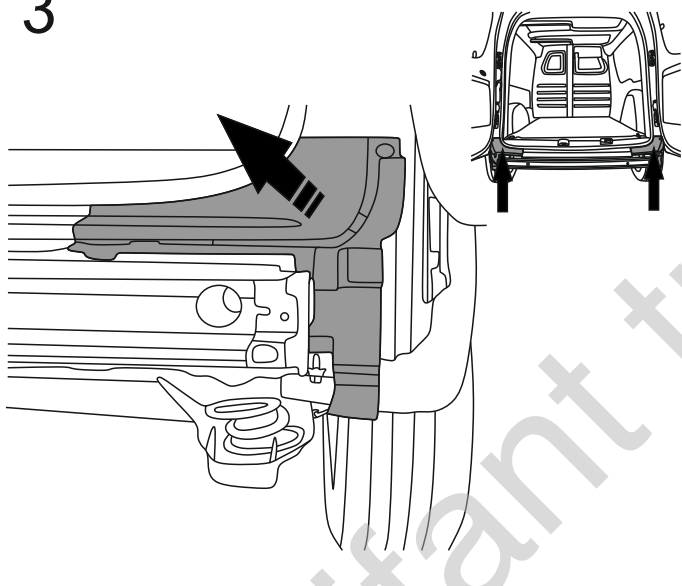


4

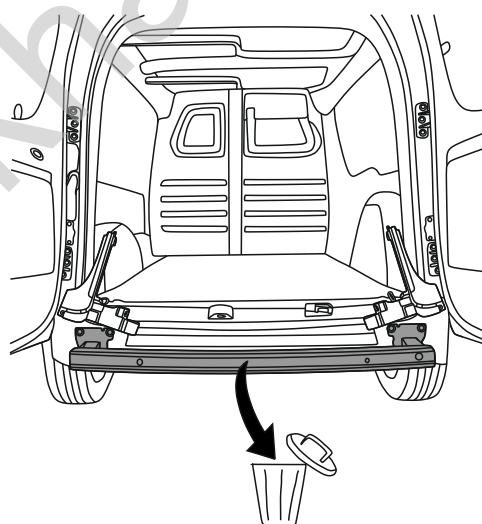


5

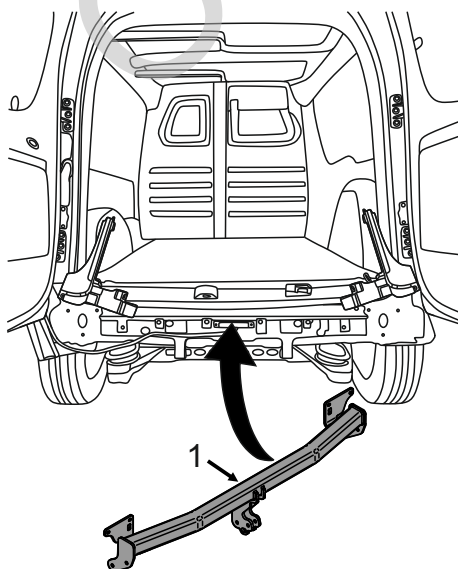


6

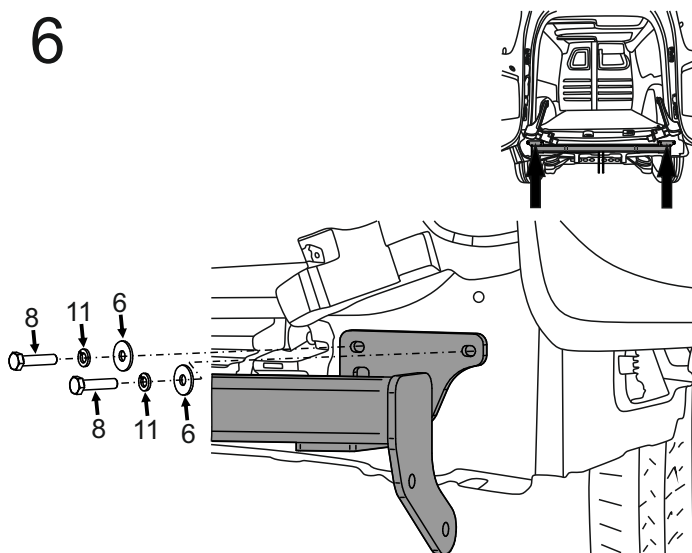


7

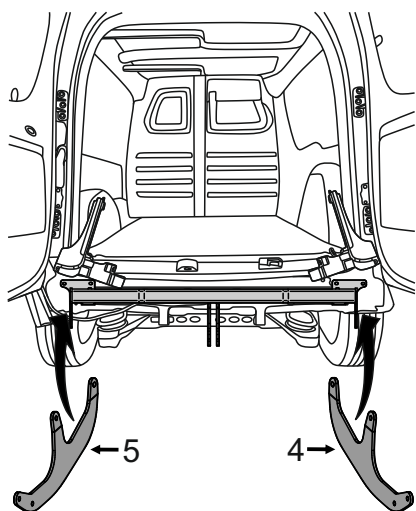


8

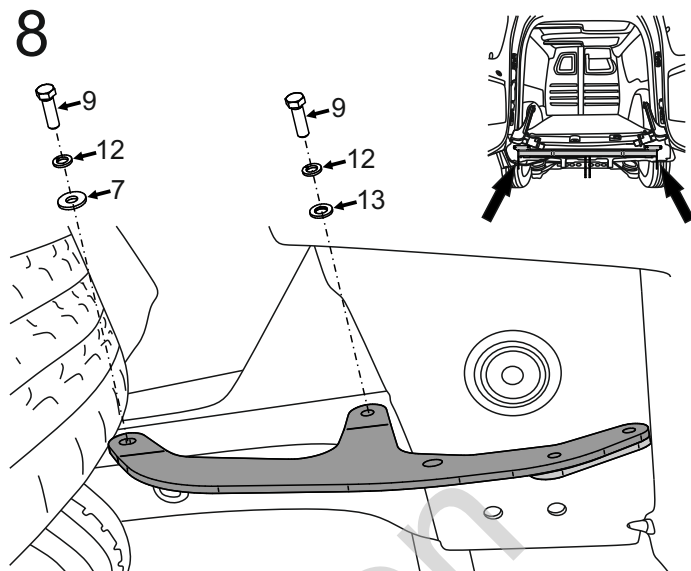


9

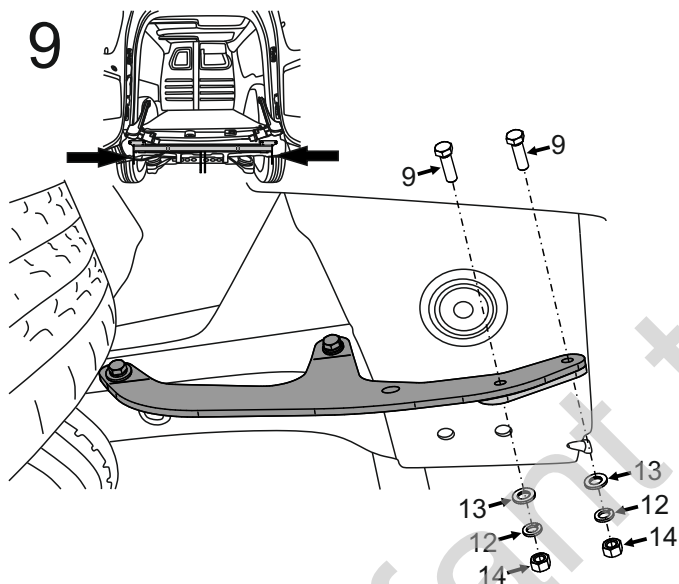


10

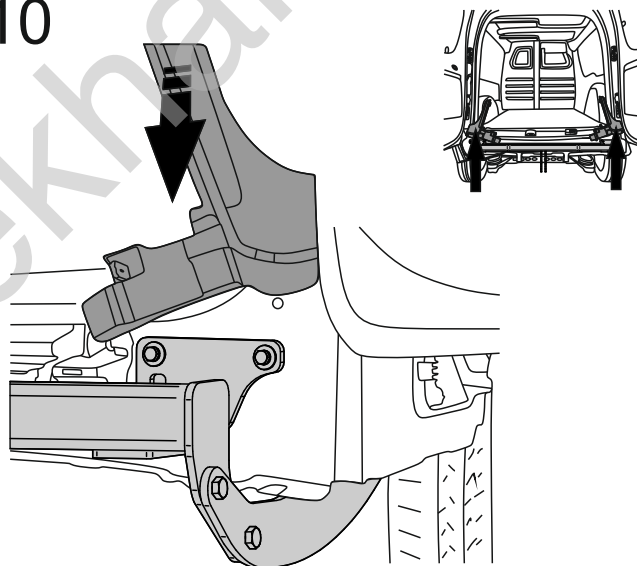

11

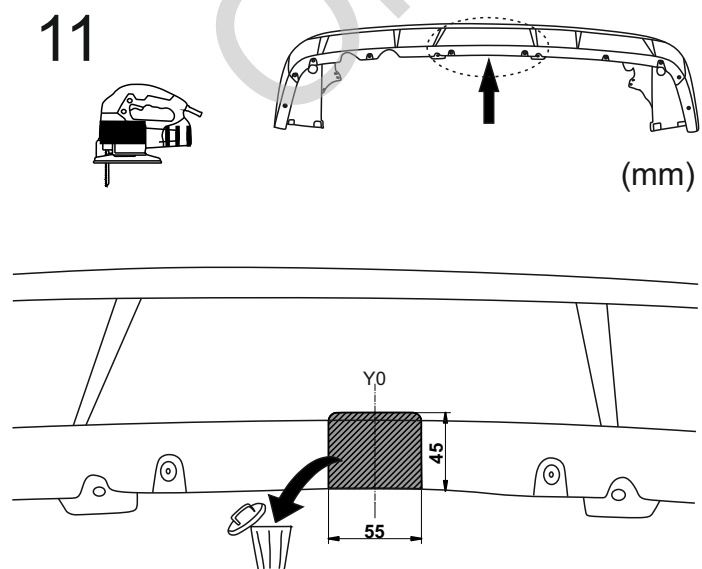

12

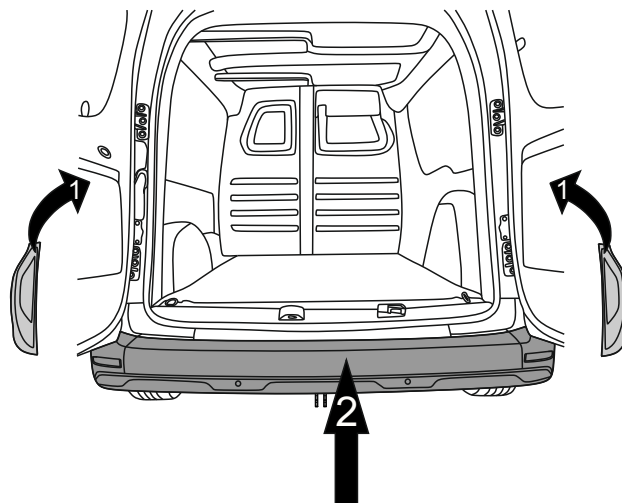

13

