


Nissan Qashqai (J11), (+Adblue)


(11/2018 - 04/2021)

N-111

- PL** **Zaczep Kulowy** Instrukcja montażu i eksploatacji
GB **Tow bar** Installation and operating instructions
D **Die Anhängerkupplung** Montage- und Gebrauchsanleitung
ES **Gancho de remolque** Las instrucciones de instalación y de operación
RU **Фаркоп** Инструкция по установке и эксплуатации ТСУ
FR **Attelage** Notice de montage et d'utilisation
IT **Gancio traino** Istruzioni di montaggio
CZ **Tažné zařízení** Návod na montáž a použití
RO **Cârlig de remorcare** Instrucția de montaj și exploatare
SE **Dragkulan** Monterings- och bruksanvisningar.

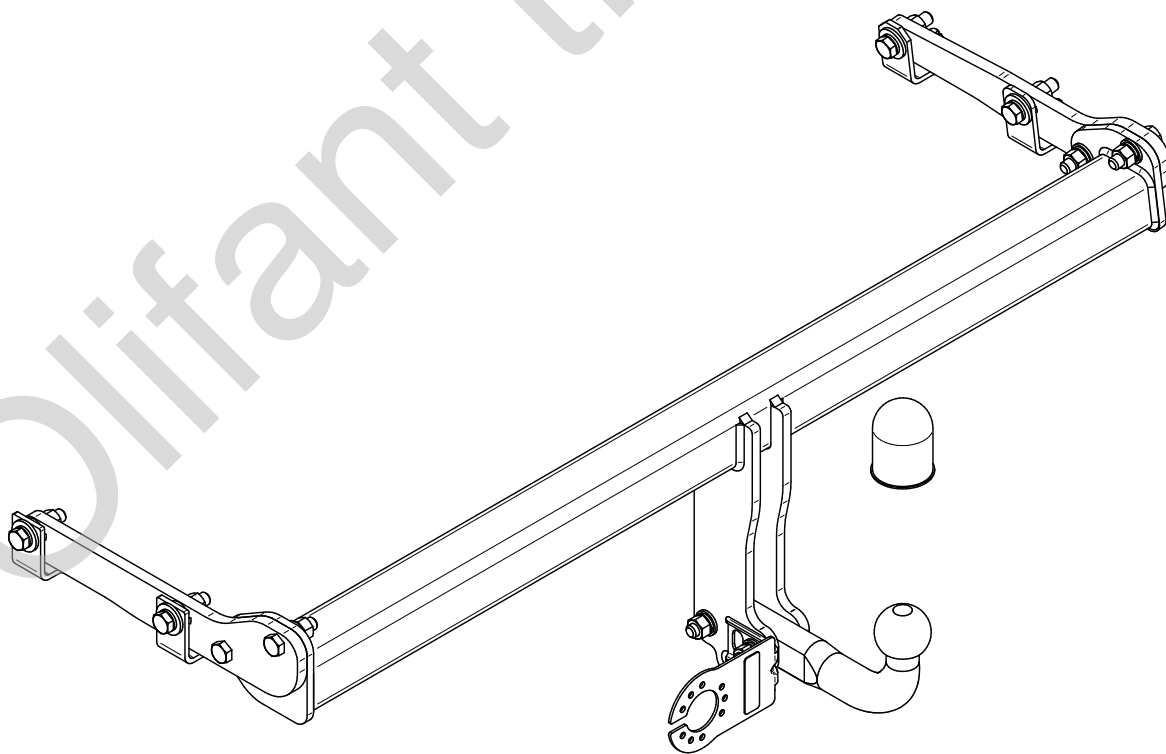

Typ: N-111
A50-X
E20 55R-01 5898
D = 10,3kN
S = 120kg

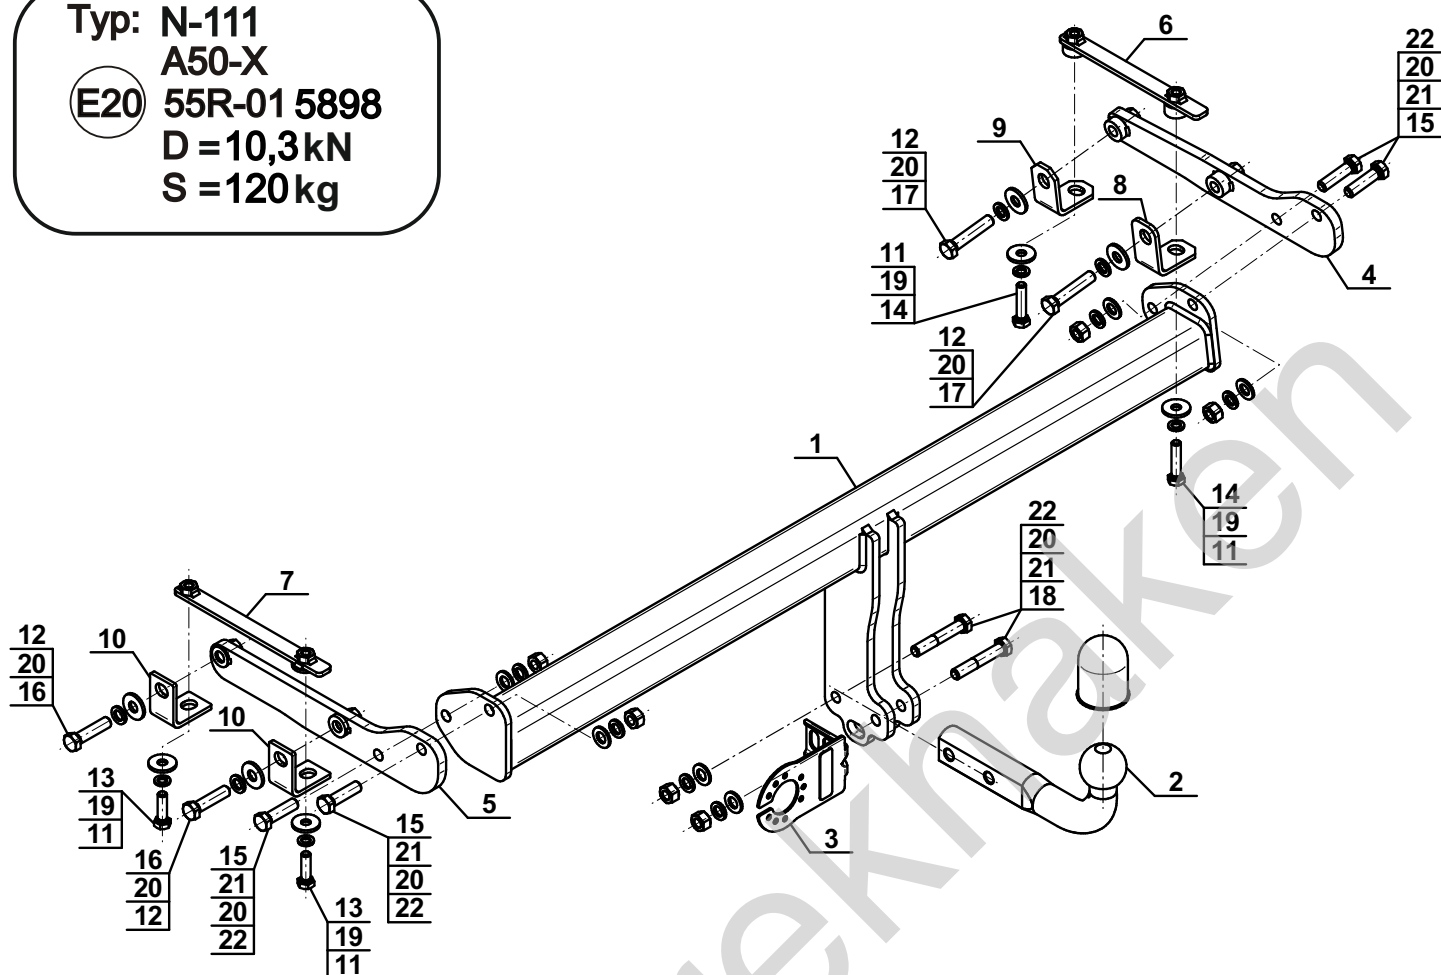


1		x1
2		x1
3		x1
4		x1
5		x1
6		x1
7		x1

8		35x5/119	x1
9		35x5/114	x1
10		35x5/107	x2
11		Ø30/Ø10,5x3	x4
12		Ø30/Ø12,5x3	x4
13		M10x35 (PN/M-82105) (8.8)	x2
14		M10x45 (PN/M-82105) (8.8)	x2
15		M12x45 (PN/M-82105) (8.8)	x4
16		M12x50 (PN/M-82105) (8.8)	x2
17		M12x60 (PN/M-82105) (8.8)	x2
18		M12x70 (PN/M-82101) (8.8)	x2
19		Ø10,2	x4
20		Ø12,2	x10
21		Ø13,0	x6
22		M12 (8)	x6




8.8	
M6 - 10 (Nm)	M12 - 85 (Nm)
M8 - 25 (Nm)	M14 - 135 (Nm)
M10 - 50 (Nm)	M16 - 200 (Nm)


1

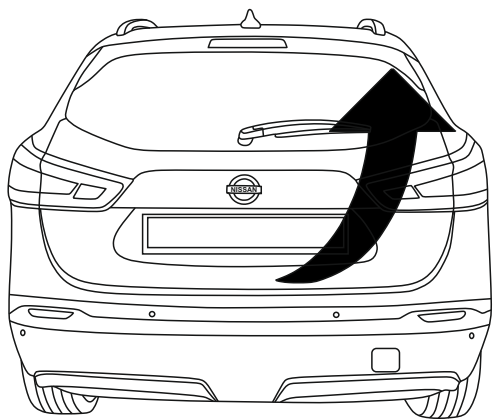


2

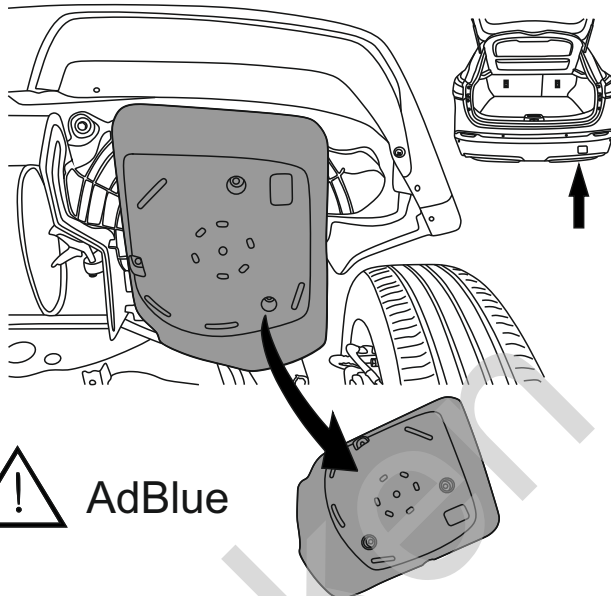


3

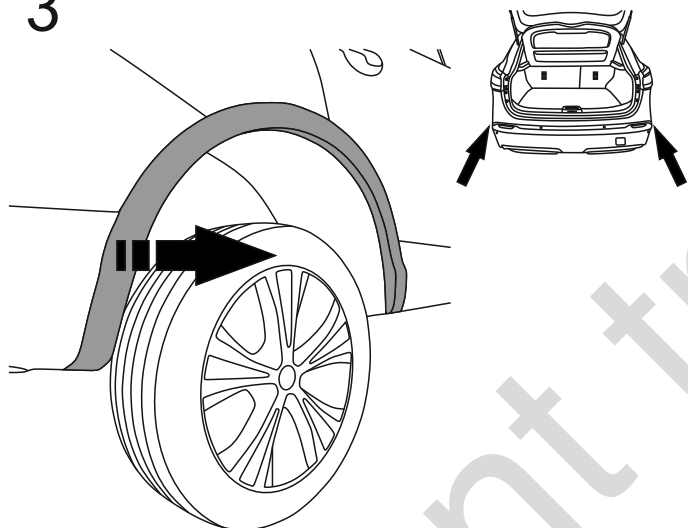


4

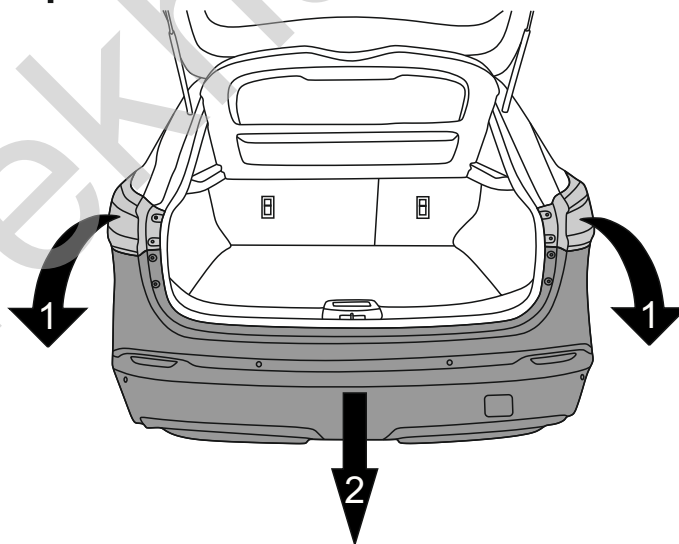


5

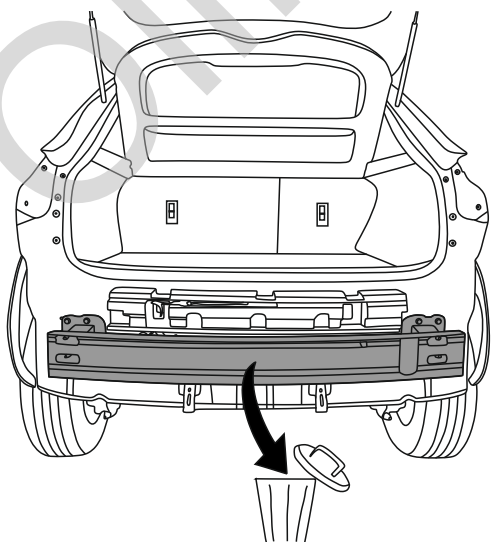


6

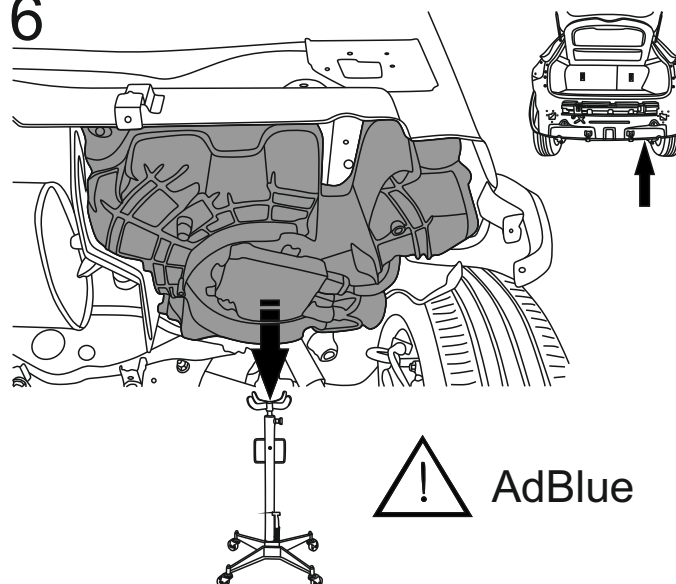


7

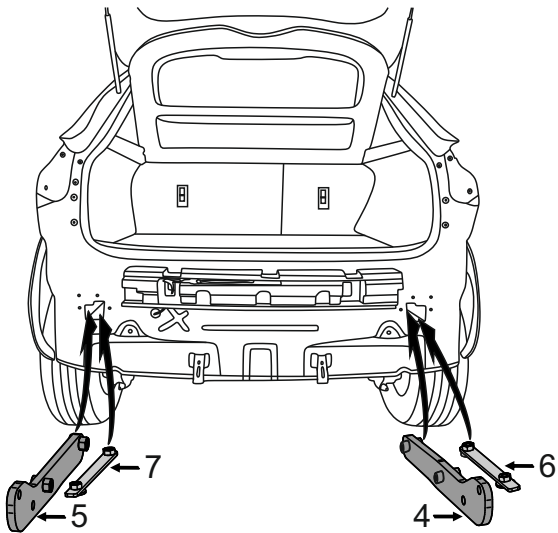


8

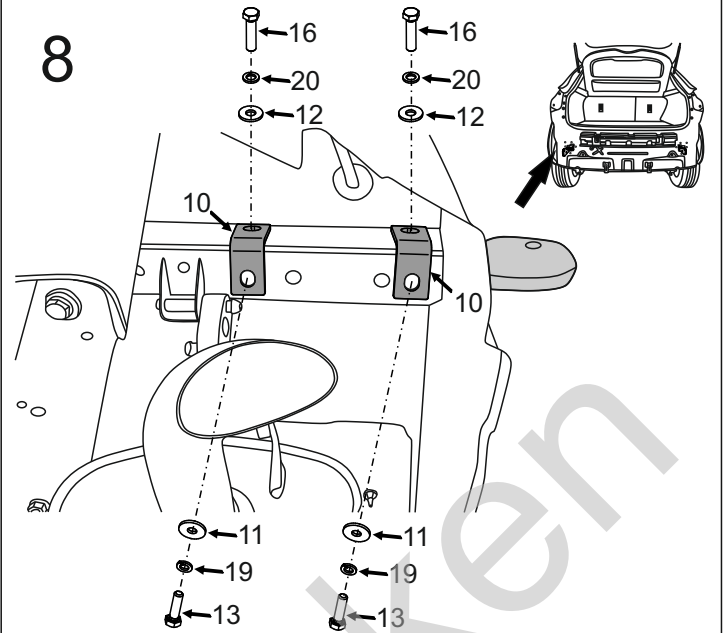


9

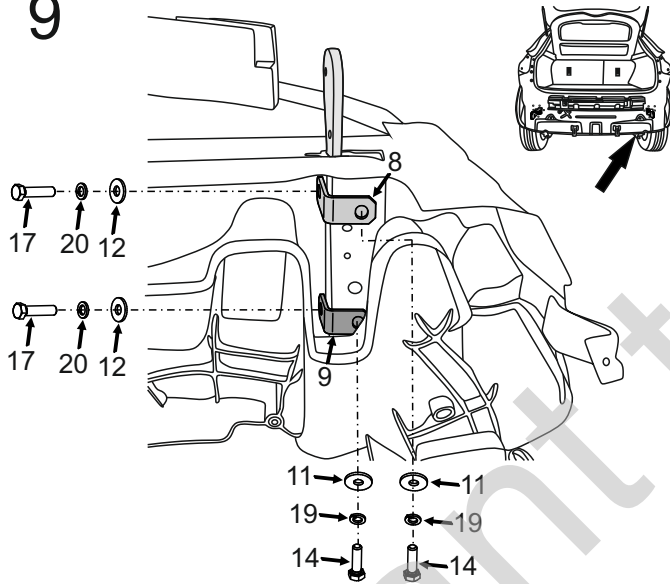


10

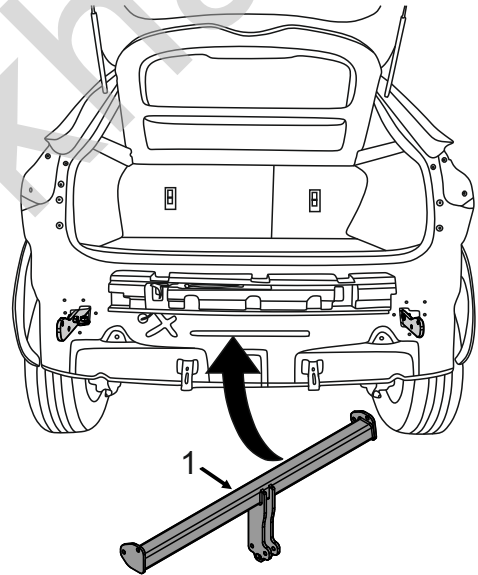


11

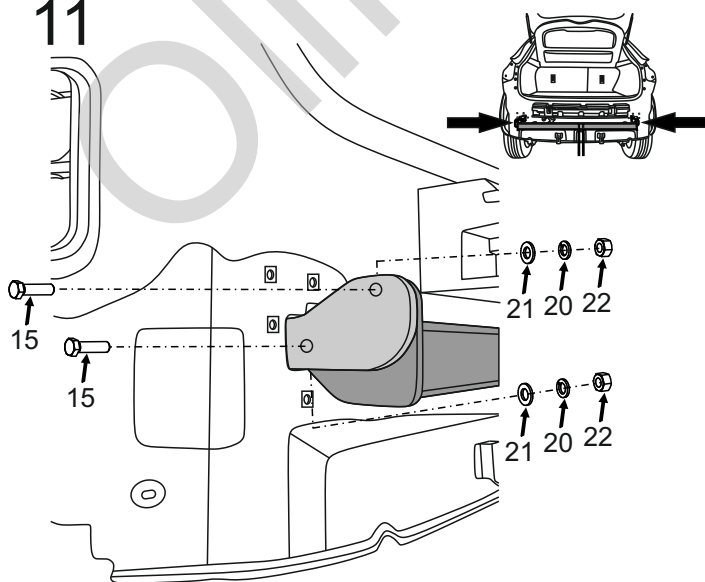


12

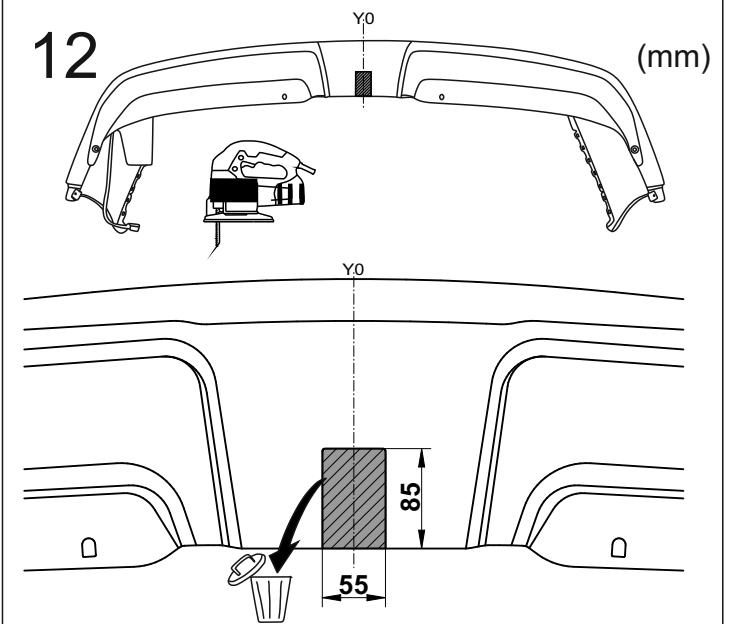


13

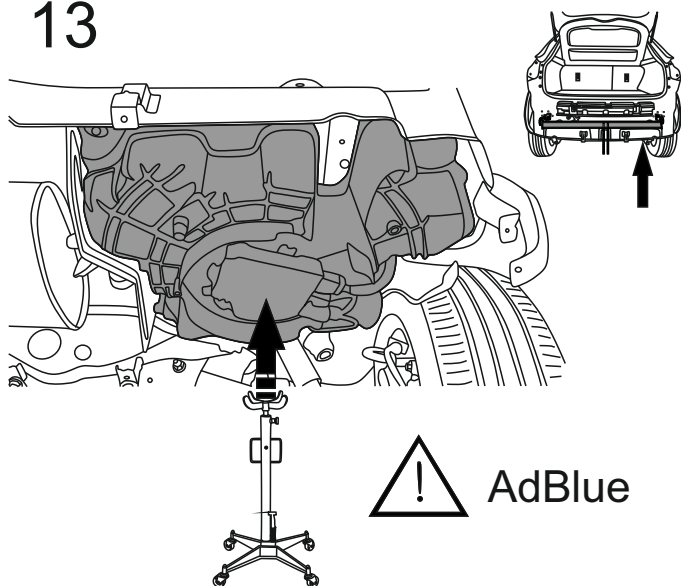


14

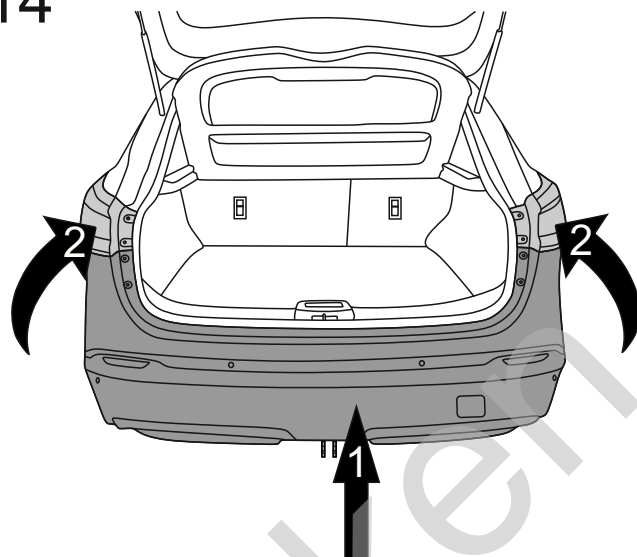

15

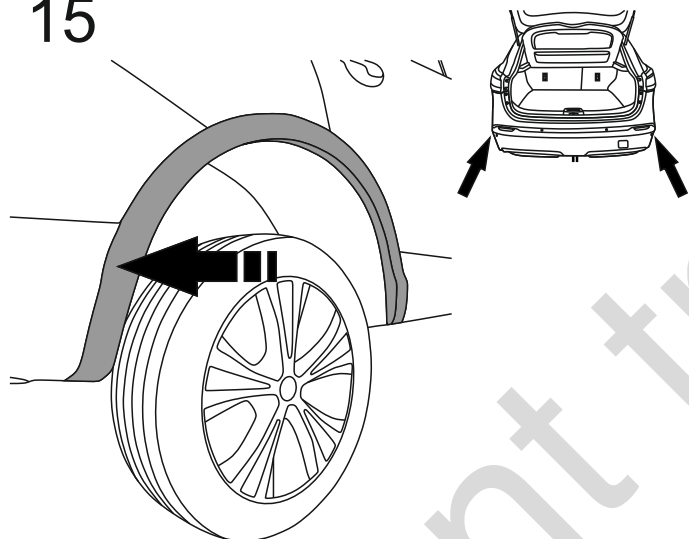

16

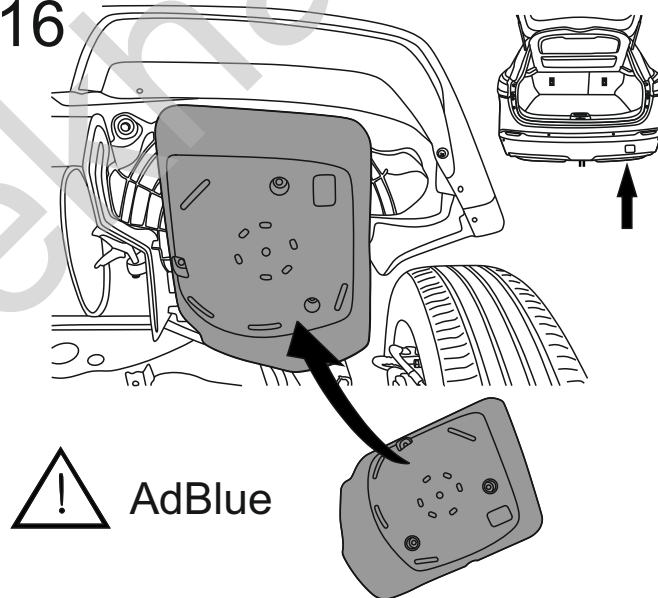

17

