

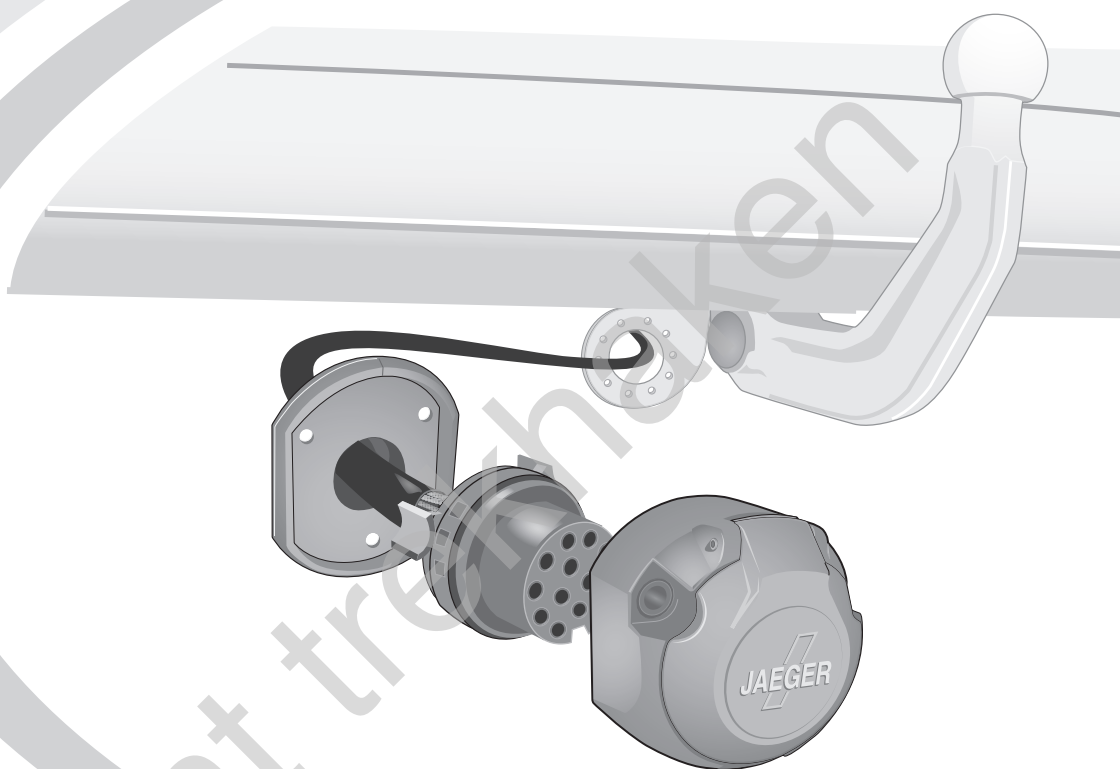
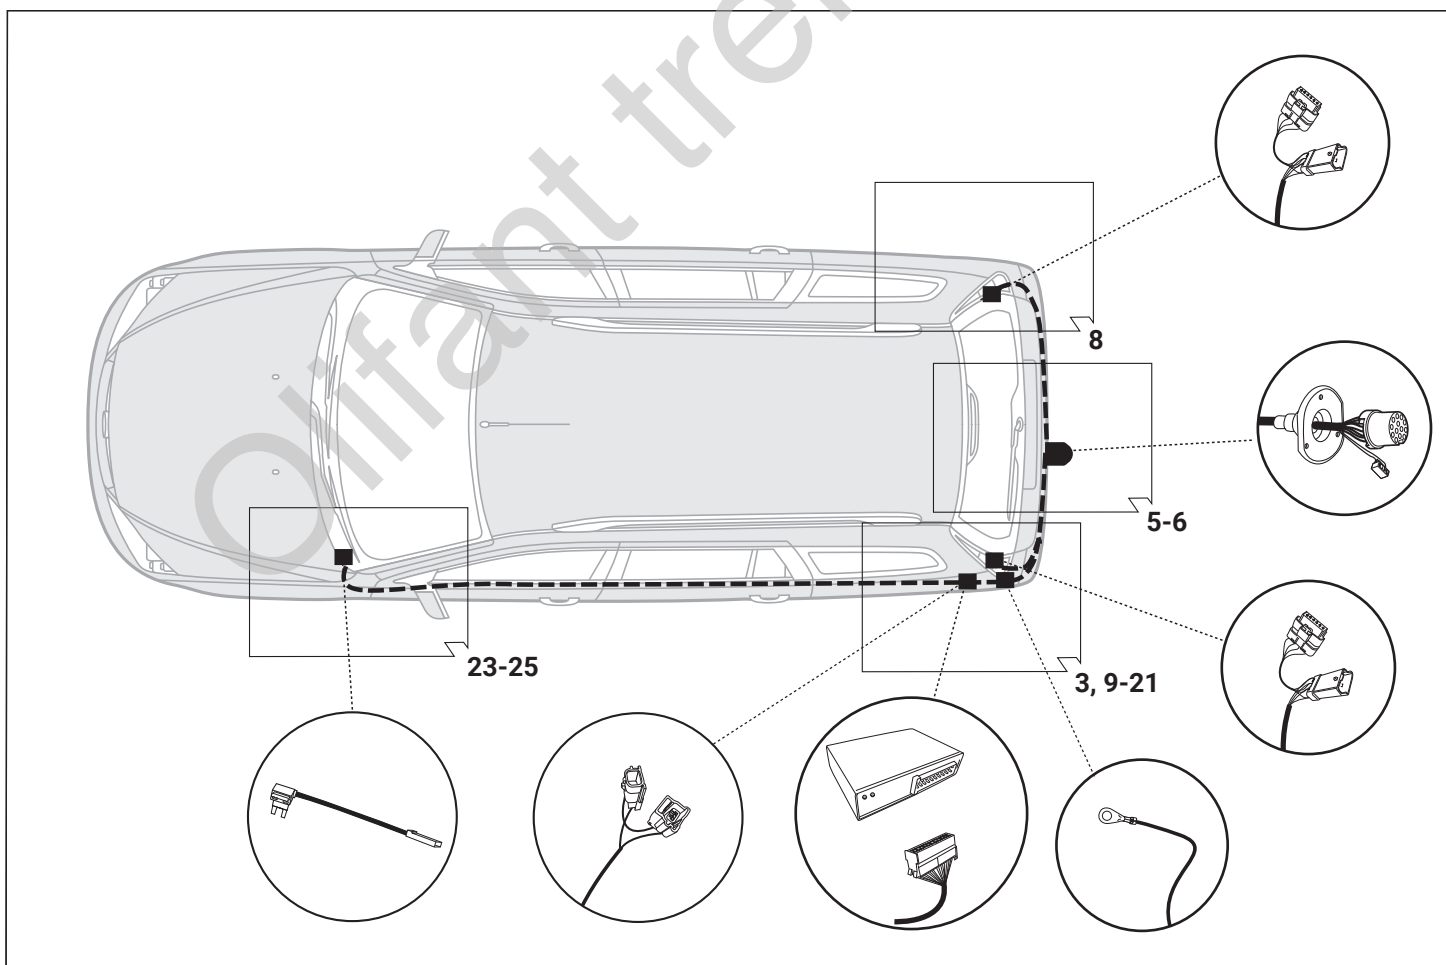
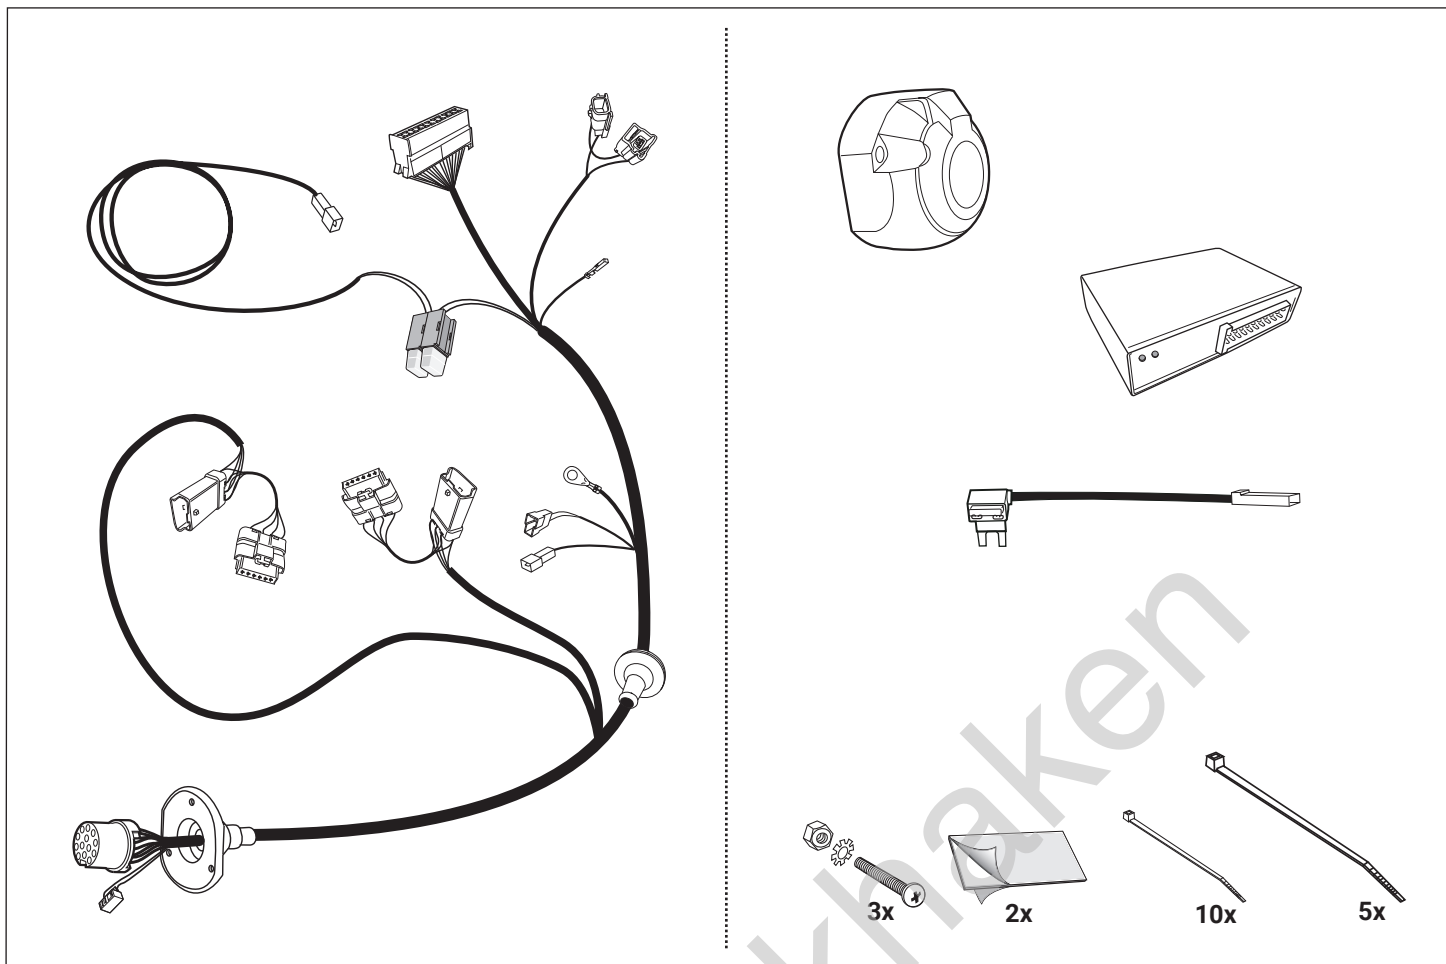
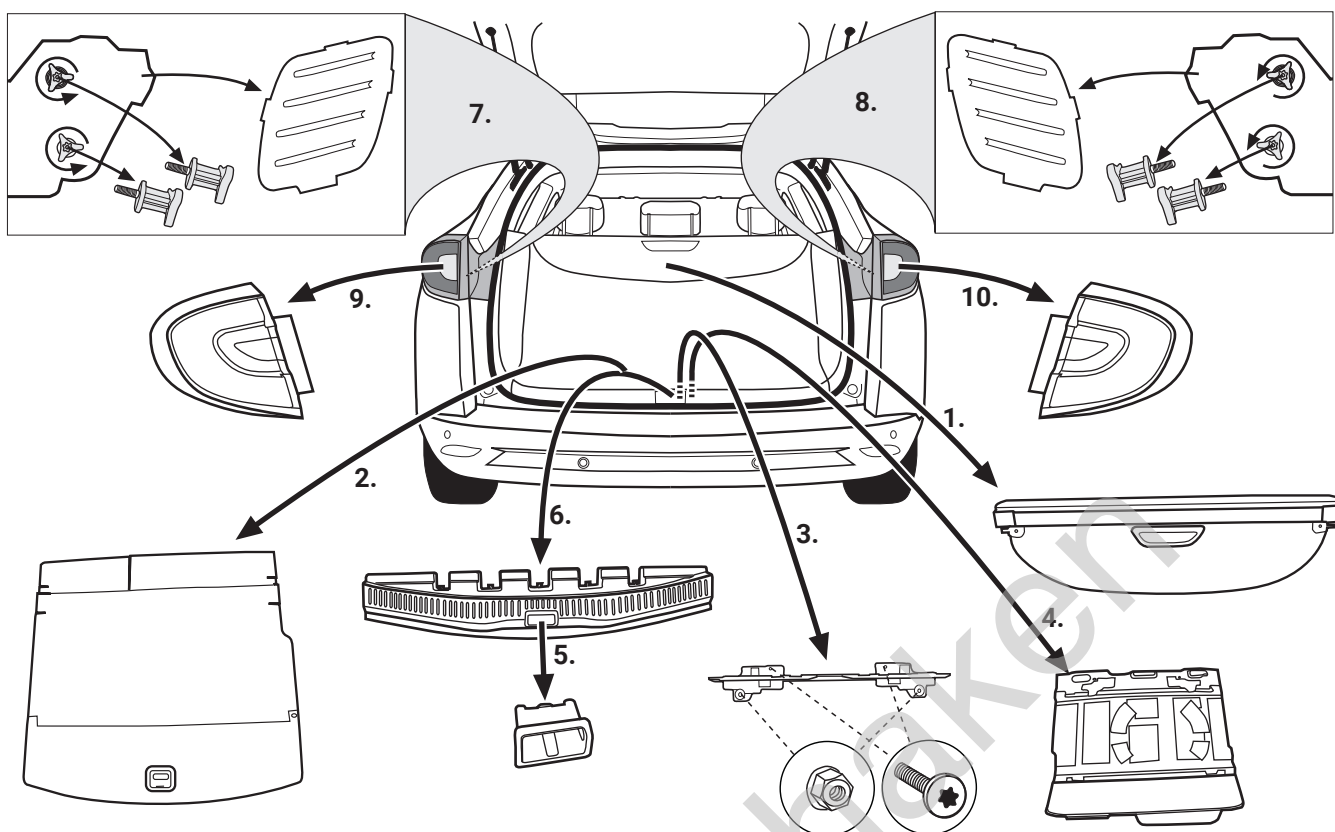


Megane Grandtour 06/09→08/16


D	Einbauanleitung Elektro-Einbausatz für Anhängerkupplung / 13-polig / 12 Volt / ISO 11446
GB	Fitting instructions Electric wiring kit for towbars / 13-pin / 12 Volt / ISO 11446
F	Instructions de montage Faisceau pour attelage / 13 broches / 12 Volt / ISO 11446
I	Istruzione di montaggio Cablaggio elettrico per ganci di traino / 13 poli / 12 Volt / ISO 11446
E	Instrucciones de montaje Kits eléctricos para enganches de remolques / 13 pins / 12 Volt / ISO 11446
NL	Montagehandleiding Elektro-inbouwset voor aanhangerkoppeling / 13-polig / 12 Volt / ISO 11446

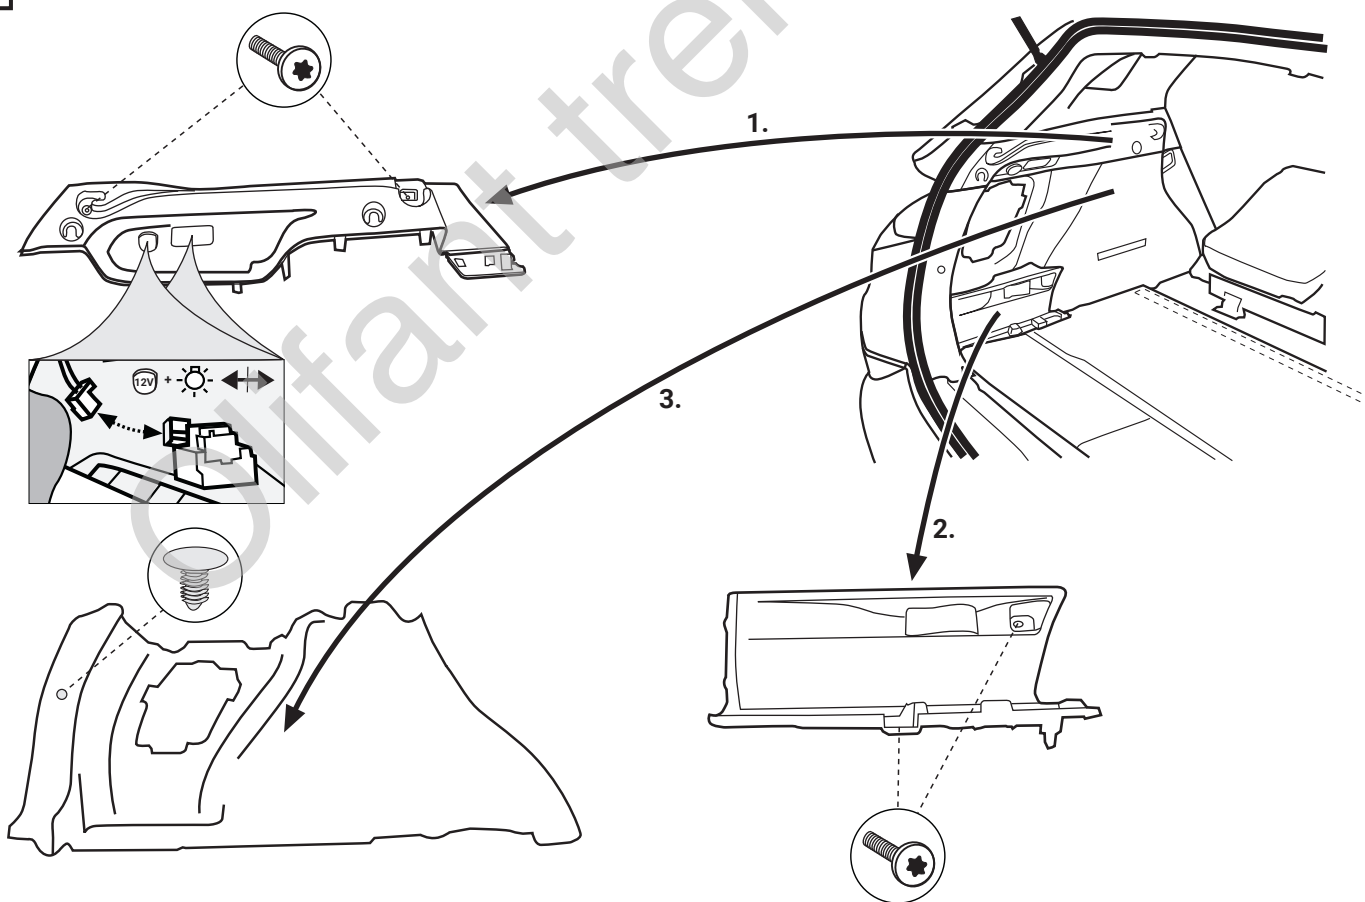


a**b**

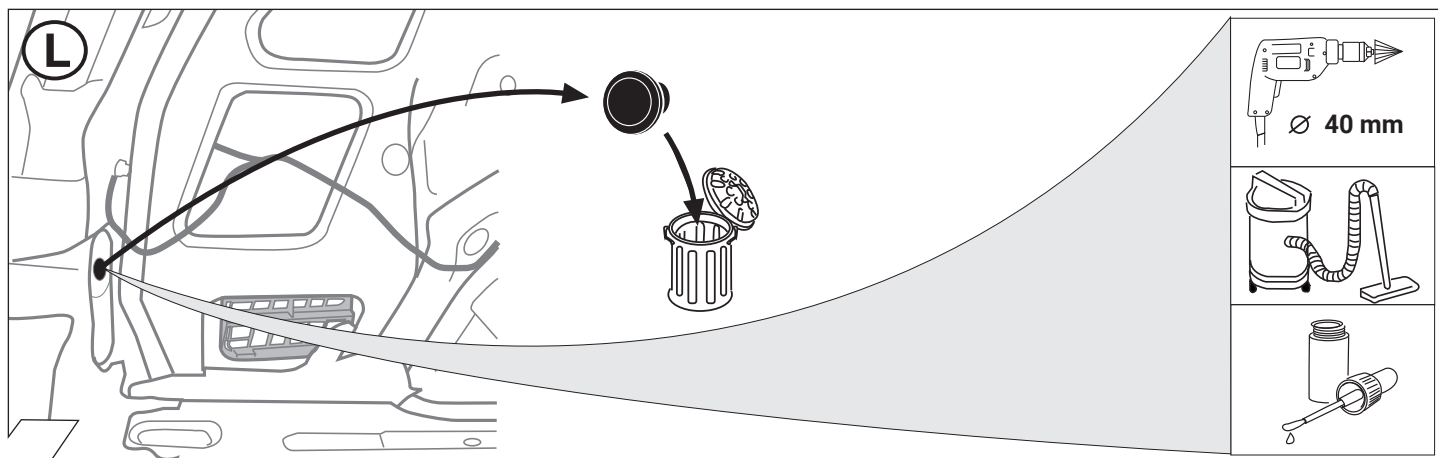

3

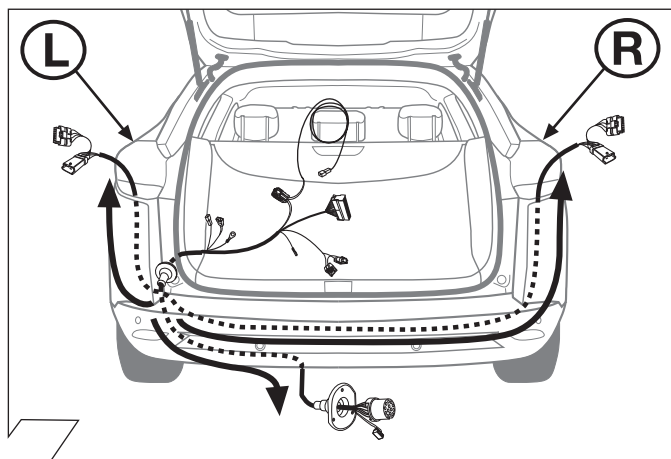

4

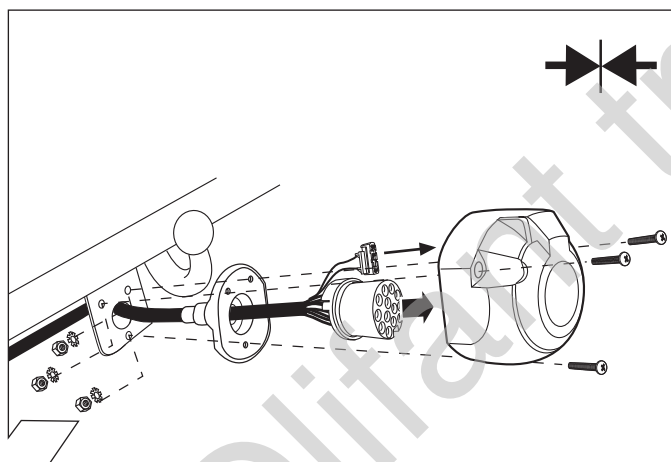


5

ISO 11446			
Belegung der Steckdose / Maximale Ausgangsleistung Socket configuration / Maximum power output Correspondance des contacts de la prise / Puissance de sortie maximale Abbinamento della presa / Uscita di alimentazione massima Indeling van de stekkerdoos / maximaal uitgangsvermogen			
1/L	BK/WT	21W	
2	WT	42W	
1-8	3/31	BR	
4/R	BK/GN	21W	
5/58-R	GY/RD	52W	
STOP	6/54	BK/RD	63W
7/58-L	GY/BK	52W	
Reverse	8	BL/RD	42W
B+30	9	RD	240W
10	YL	180W	
10	11	YL/BR	
12			
9	13	RD/BR	


6

	GB	D	E	F	I	P	NL	DK	N	S	FIN	CZ	H	PL
BK	Black	Schwarz	Negro	Noir	Nero	Preto	Zwart	Sort	Svart	Svart	Musta	Černá	Fekete	Czarny
RD	Red	Rot	Rojo	Rouge	Rosso	Vermelho	Rood	Röd	Röd	Röd	Punainen	Červená	Piros	Czerwony
GN	Green	Grün	Verde	Vert	Verde	Verde	Groen	Grön	Grön	Grön	Vihreä	Zelená	Zöld	Zielony
OR	Orange	Orange	Naranja	Orange	Arancione	Laranja	Oranje	Orange	Orange	Orange	Oranssi	Oranzová	Narancs	Pomarańczowy
VT	Violet	Violett	Violeta	Violet	Viola	Violeta	Violet	Violet	Fiolett	Violett	Violetti	Fialová	Ibolya	Fioletowy
PK	Pink	Pink	Pink	Rose	Rosa	Cor-de-Rosa	Paars	Pink	Pink	Rosa	Pinkki	Růžová	Rózsaszín	Różowy
BL	Blue	Blau	Azul	Bleu	Blu	Azul	Blauw	Bíl	Bítt	Bíl	Sininen	Modrá	Kék	Niebieski
YL	Yellow	Gelb	Amarillo	Jaune	Giallo	Amarelo	Geel	Gul	Gult	Gul	Keltainen	Zlutá	Sárga	Żółty
WT	White	Weiss	Blanco	Blanc	Bianco	Branco	Wit	Hvid	Hvitt	Vit	Valkoinen	Bílá	Fehér	Biały
BR	Brown	Braun	Marrón	Brun	Marrone	Marrom	Bruin	Brun	Brunt	Brun	Ruskea	Hnědá	Barna	Brazowy
GY	Grey	Grau	Gris	Gris	Grigio	Cinzeno	Grijs	Grí	Grítt	Grí	Harmaa	Sedá	Szürke	Szary


7

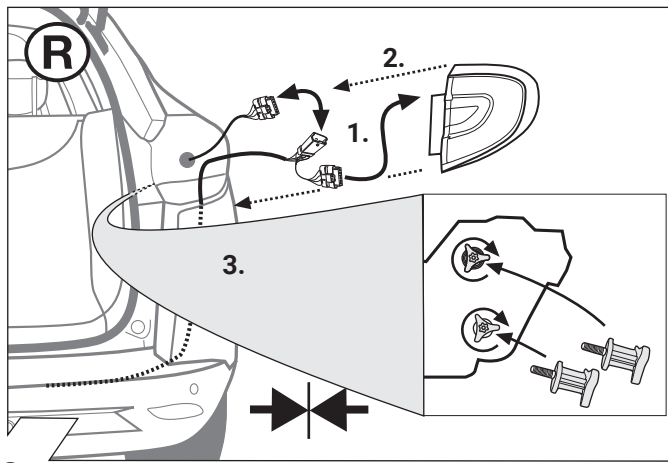


8

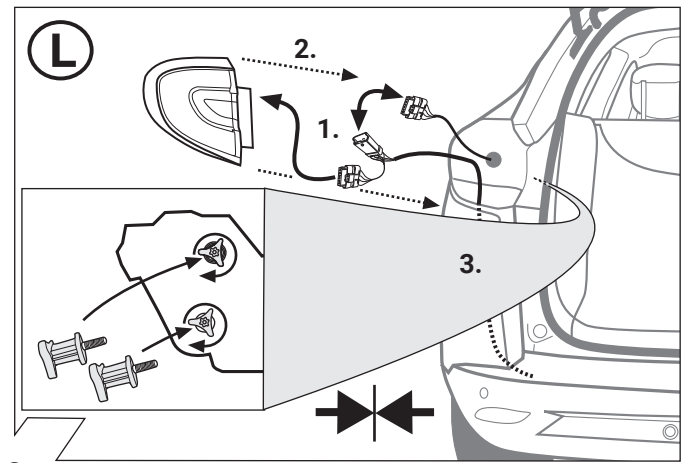

9

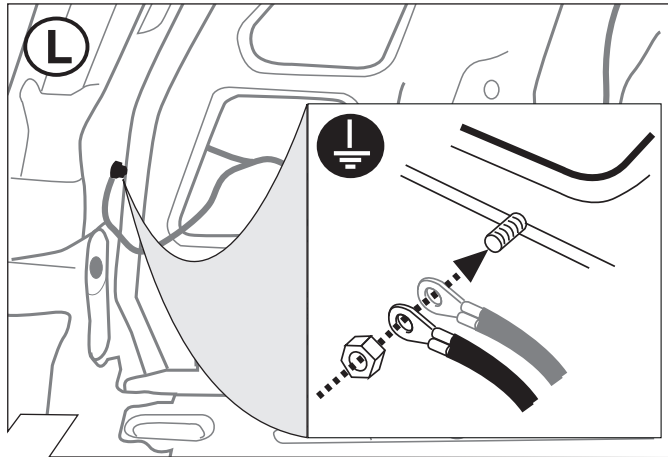

10

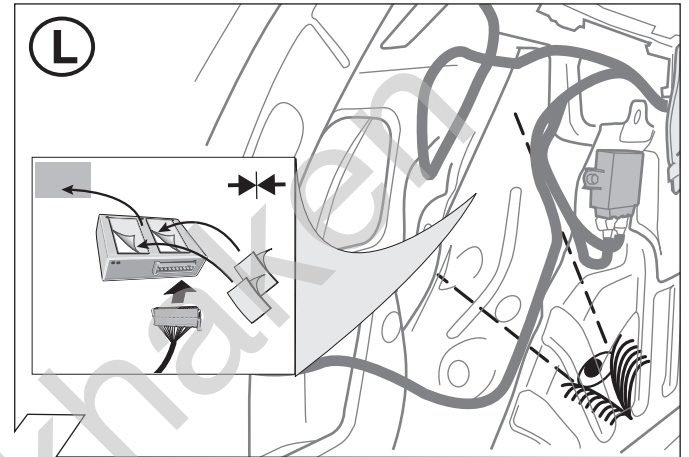

11

Megane Grandtour > 02/2012

PDC (Megane Grandtour)

14 - 18

21 - 36

~~PDC~~ (Megane Grandtour)

20 - 36

12

Megane Grandtour 03/2012 >


PDC (Megane Grandtour)

19 - 36


~~PDC~~ (Megane Grandtour)

20 - 36




13

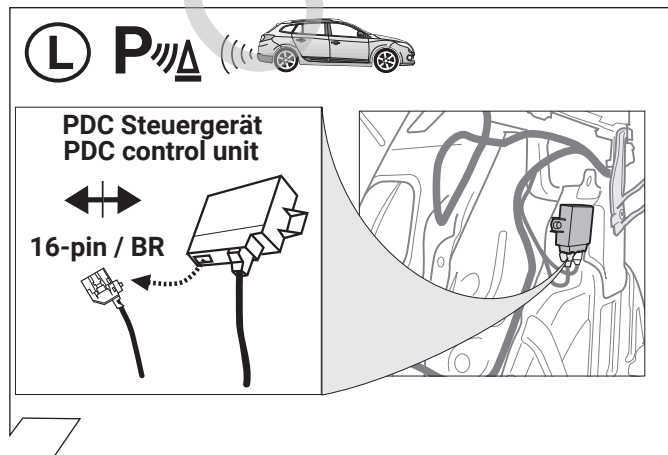

14

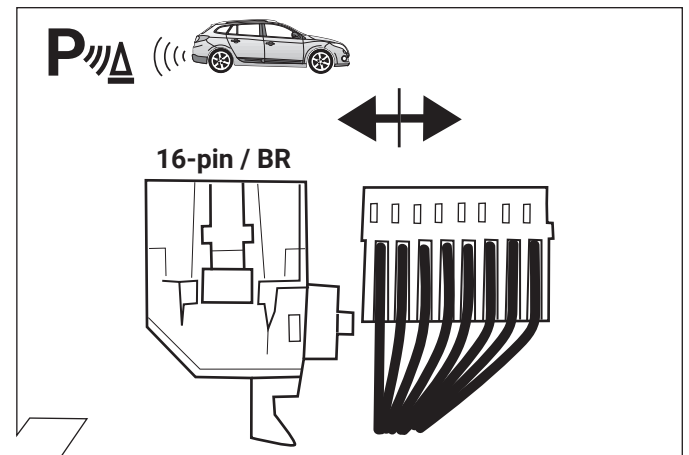



15

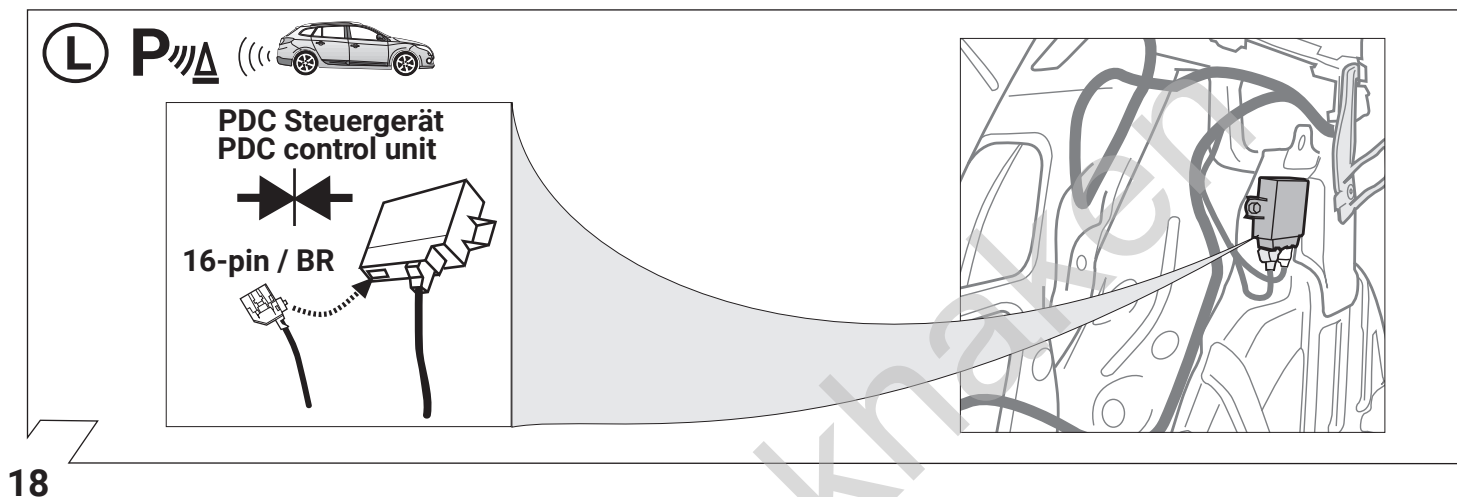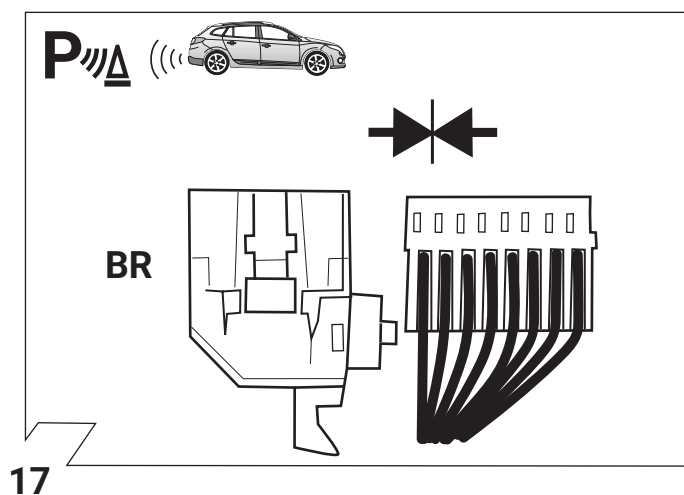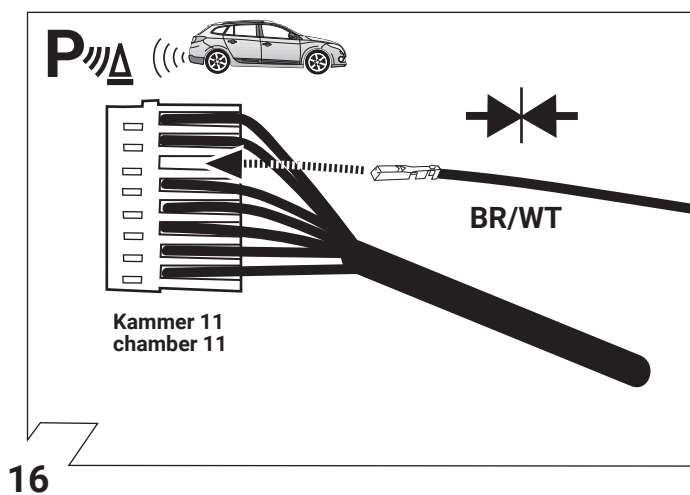


Megane Grandtour 03/2012 >

- (GB) Deactivation of park distance control for trailer usage
- (D) Deaktivierung Einparkhilfe bei Anhängerbetrieb
- (E) La desactivación de control de distancia del parque para el uso de remorque
- (F) Désactivation du contrôle r distance des parcs pour l'utilisation de la remorque
- (I) Disattivazione del controllo della distanza parco per l'utilizzo rimorchio
- (NL) Deactivering van park distance control voor aanhangwagen gebruik

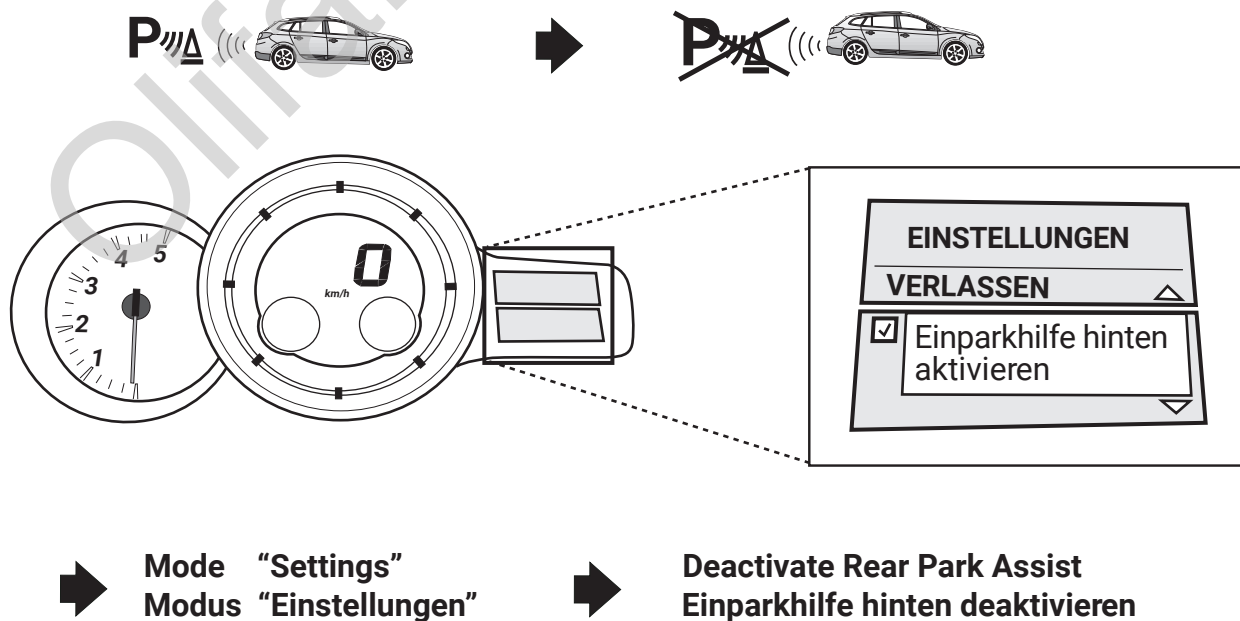


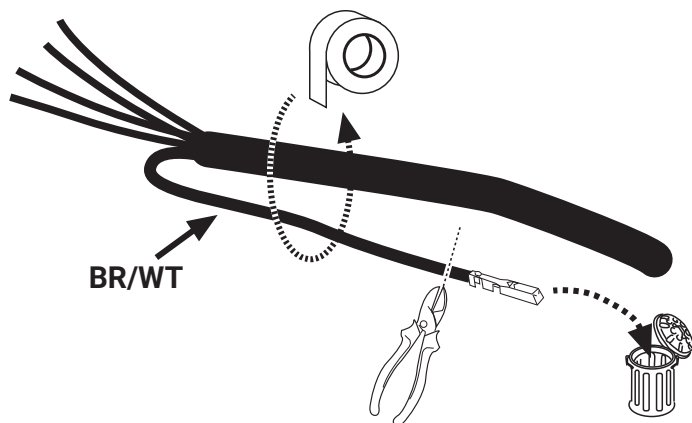


20

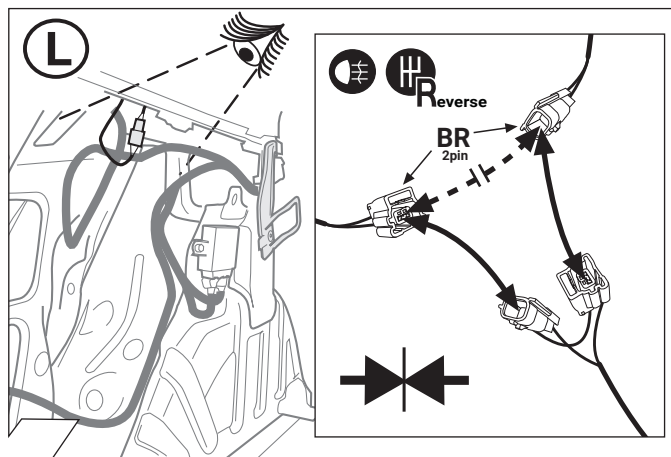


21

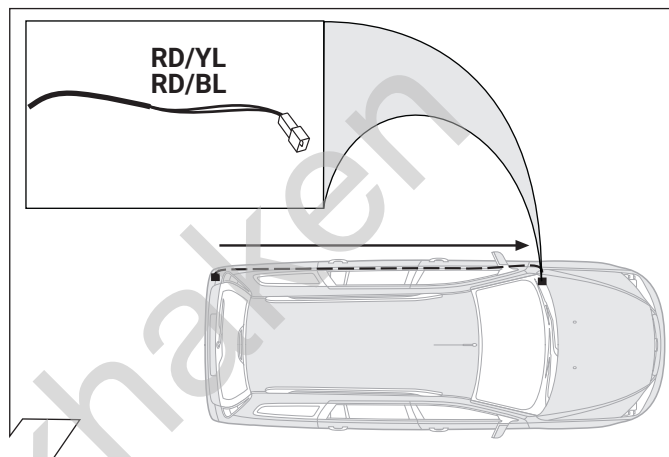


22

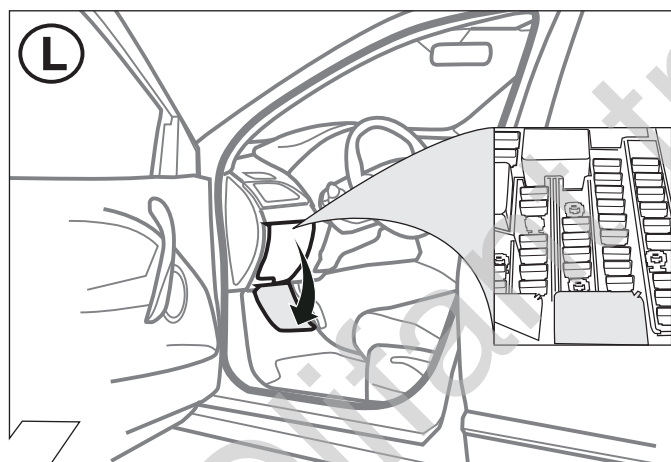

23

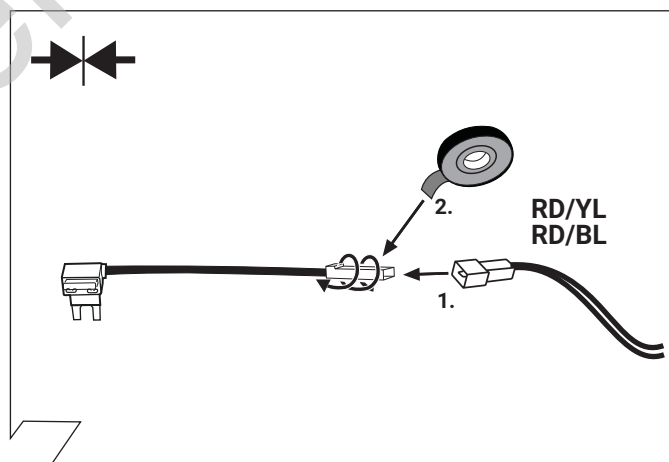

24

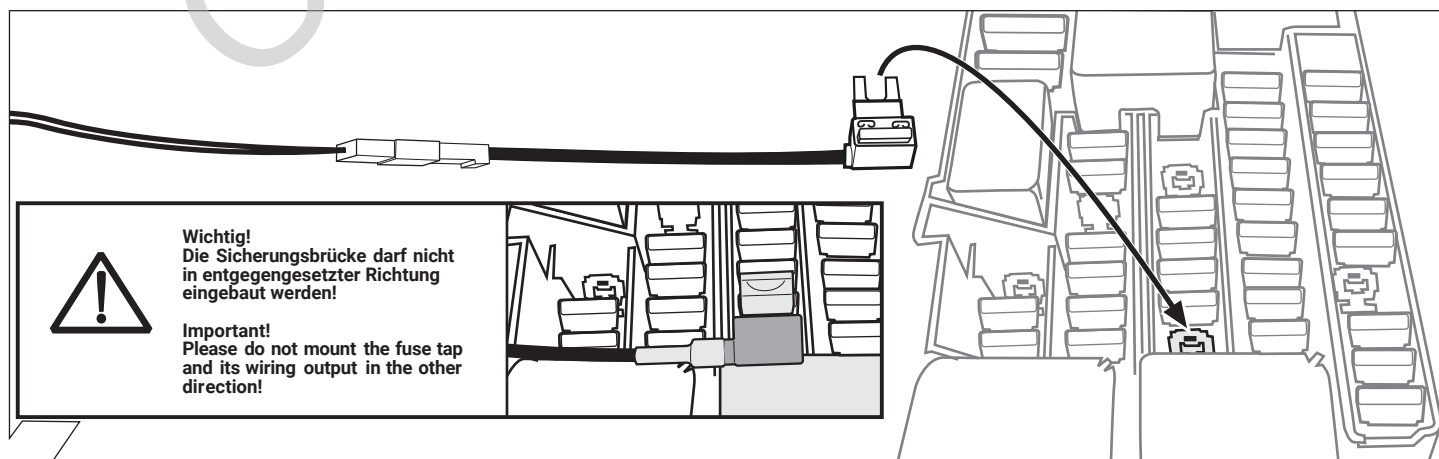


25



Wichtig!
Die Sicherungsbrücke darf nicht
in entgegengesetzter Richtung
eingebaut werden!


Important!
Please do not mount the fuse tap
and its wiring output in the other
direction!

OPTIONAL


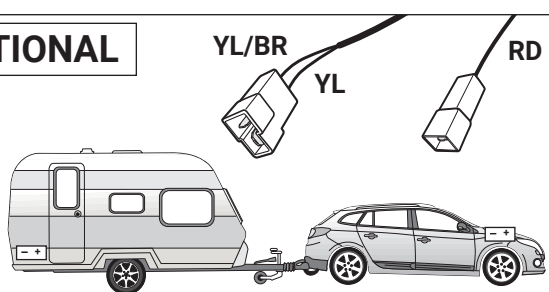


	Part-no. 22400509
	Part-no. 22400001


26

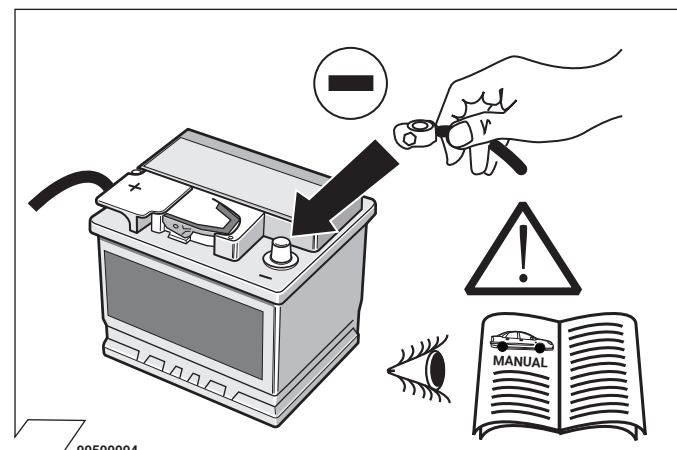

27

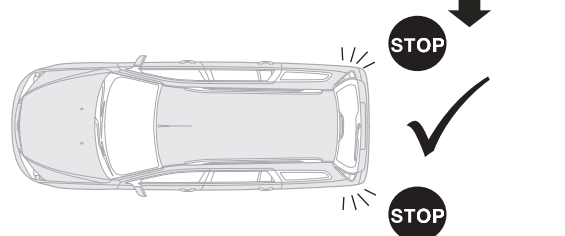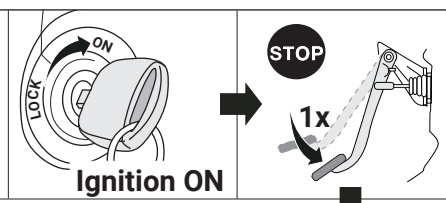

28

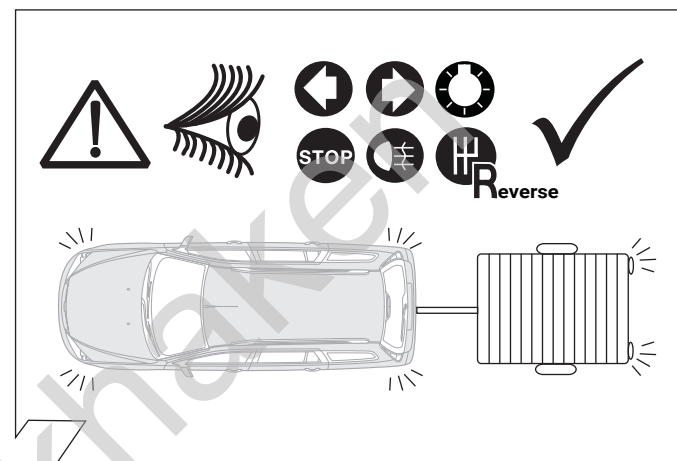


29




OPTIONAL

**Trailer Simulator
for
7- and 13-pin
Sockets**

Part-no.
50400522

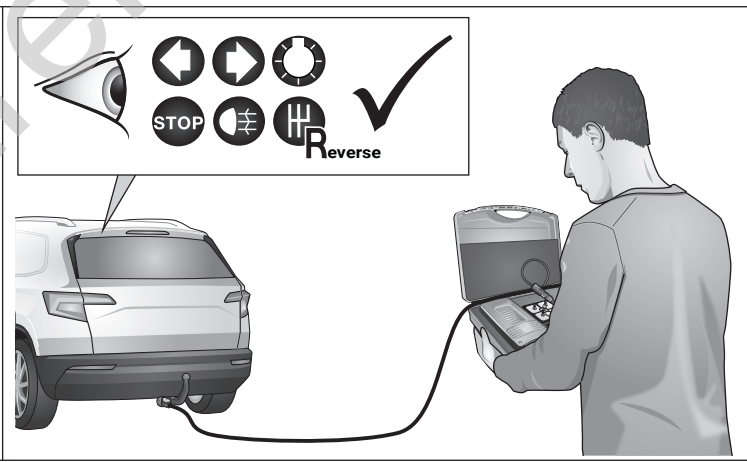

30

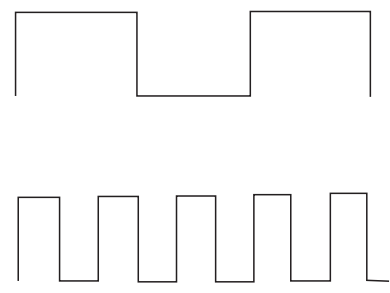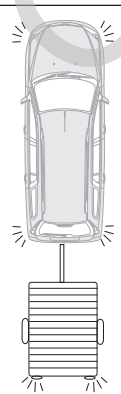

31

SETUP

1.

2. Ignition ON

3.

4.

32

Optional: Adapter socket 62930000

33

34

35

36