FITTING INSTRUCTION

Clamp mark				
in acc. with		Cables joining		
ISO	PN	* 0 !! . I !! I		6 ->
2	L 	Left directional lights		
3		Rear fog lights	4 —	
4	31 R	Ground	\	
5	58R	Right directional lights Right side parking lights	\sim	9 8 5 m
6	54	Stoplights		, a
7	58L	Left side parking lights		00000
	A -			A
			3	2

This towing hitch is designed to assembly in following car: **SEAT CORDOBA**, **4 doors** (**6L2**), produced since 01.2003, catalogue no. **SC41A** and is prepared to tow trailers max total weight **1200kg** and max vertical load **50kg**.


From manufacturer

Thank you for buying our product. Their reliability has been confirmed in many tests. Reliability of towing hitch depends also on correct assembly and right operation. For this reasons we kindly ask to read carefully this instruction and apply to hints.

The towing hitch should be install in points described by a car producer.

The instruction of the assembly

- 1. Disassemble the rear bumper and original metal bumper support (this part is not used any more).
- 2. Slide the main bar of the towing hitch (pos. 1) to the chassis members (do it such a way holes (pos. A) cover original holes in the chassis members), then fix it using bolts M10x35mm (pos. 5) together with plain washers (pos. 4).
- 3. Cut the bumper according to the fig. 2 and then reassemble it.

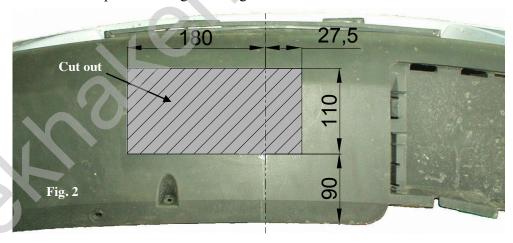

- 4. Tighten all nuts and bolts according to the torque shown in the table.
- 5. Fix body of the automat and place tow-ball according to supplied instruction.
- 6. Fix the socket plate (pos. 3) as shown on the drawing.
- 7. Connect the electric wires according to the instructions of the car
- 8. Complete the paint cover of towing hitch (during the mounting paint cover could be destroyed)

Torque settings for nuts and bolts (8,8):				
M6 - 11 Nm	M 8 - 25 Nm	M 10 - 50 Nm		
M 12 - 87 Nm	M 14 - 138 Nm	M16 - 210 Nm		


NOTE

After install the towing hitch you should get adequate note in registration book (at authorised service station). The car should be equipped with:

- Indicators
- Tow mirrors

After 1000km of exploitation check all bolts and nuts. The ball of towing hitch must be always kept clear and conserve with a grease.

Towing hitch accessories:

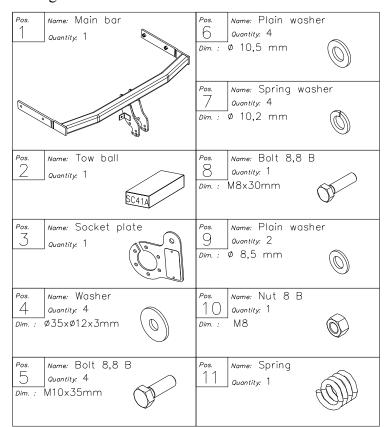



PPUH AUTO-HAK Sp.J.

Produkcja Zaczepów Kulowych Henryk i Zbigniew Nejman 76-200 SŁUPSK ul. Słoneczna 16K tel/fax (059) 8-414-414; 8-414-413 E-mail: office@autohak.com.pl www. autohak.com.pl

Towing hitch (without electrical set)

Class: A50-X Cat. no. SC41A

Designed for:

Manufacturer: **SEAT**

Model: **CORDOBA**Type: **4 doors (6L2)**produced since 01.2003

Technical data: **D**-value: **6.96 kN**

maximum trailer weight: 1200 kg maximum vertical cup load: 50 kg

Approval number according to Directive 94/20/EC: e20*94/20*1128*00

Foreword

This towing hitch is designed according to rules of safety traffic regulations. The towing hitch is a safety component and can be install only by qualified personnel. Any alteration or conversion of the towing hitch is prohibited and would lead to cancellation of design certification. Remove insulating compound and underseal from vehicle (if present) in the area of the matting surfaces of the towing hitch.

The vehicle manufacturer's specifications regarding trailer load and max. vertical cup load are decisive for driving, and values for the towing hitch cannot be exceeded.

D-value formula:

$$\frac{\text{Max trailer weight [kg]} \quad x \quad \text{Max vehicle weight [kg]}}{\text{Max trailer weight [kg]} + \quad \text{Max vehicle weight [kg]}} x \frac{9.81}{1000} = D [kN]$$