FITTING INSTRCUTION

	p mark	Cables joining	M10. 25
ISO	PN		M10x35
1	L	Left directional lights	M12-45
2	+	Rear fog lights	M12x45
3	31	Ground	
4	R	Right directional lights	
5	58R	Right side parking lights	8 _
6	54	Stoplights	
7	58L	Left side parking lights	
		M10x35 —	M10x35
		/ \	
	~ /	_ 5	
A ST		5	
OF THE		5 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6	
OF EN			
of the		5	
0x35			7
			7
			7
)x35			7
)x35			
)x35			7
)x35			
)x35			7

This towing hitch is designed to assembly in following cars: **NISSAN PICK UP/double cabin (240/270) 4x4, tube bumper (D22),** produced since 01.2002 till 06.2005, catalogue no. **V51A** and is prepared to tow trailers max total weight **2800 kg** and max vertical load **115 kg**.

From manufacturer

Thank you for buying our product. Their reliability has been confirmed in many tests. Reliability of towing hitch depends also on correct assembly and right operation. For this reasons we kindly ask to read carefully this instruction and apply to hints.

The towing hitch should be install in points described by a car producer.

The instruction of the assembly

- 1. Disassemble the tube bumper together with handles, which will not be used any more.
- 2. Fix loosely brackets (pos. 4, 5, 6, 7 and 8) instead of handles through the frame holes using bolts M12x45mm (pos. 9) and M10x35mm (pos. 11) see the sketch.
- 3. Slide the main bar of the towing hitch (pos. 1) between the brackets (pos. 4) and fix it loosely using bolts M12x35mm (pos. 10).
- 4. Fix the bumper with the brackets (pos. 4) through the holes (pos. A) using original bolts.
- 5. Fix body of the automat and place tow-ball according to supplied instruction. Note! Remember to place socket plate (pos. 3) as shown on the drawing 1
- 6. Tighten all nuts and bolts according to the torque shown in the table.
- 7. Connect electric wires of 7-poles socket according to the instruction of the car. (Recommend to make at authorized service station).
- 8. Complete the paint cover of towing hitch (during the mounting paint cover could be destroyed).

Torque settings for nuts and bolts (8,8):

M 8 - 25 Nm

M 10 - 55 Nm

M 12 - 85 Nm

M 14 - 135 Nm


NOTE

After install the towing hitch you should get adequate note in registration book (at authorised service station). The car should be equipped with:

- Indicators
- Tow mirrors

After 1000km check all bolts and nuts. The ball of towing hitch must be always kept clear and conserve with a grease.

Towing hitch accessories:

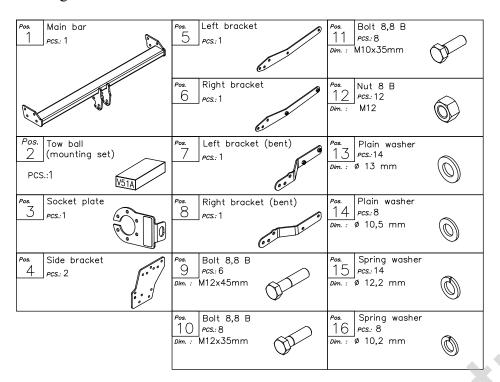



PPUH AUTO-HAK S.J.

Produkcja Zaczepów Kulowych Henryk & Zbigniew Nejman 76-200 SŁUPSK ul. Słoneczna 16K tel/fax (059) 8-414-414; 8-414-413 E-mail: office@autohak.com.pl www. autohak.com.pl

maximum trailer weight: 2800 kg

maximum vertical cup load: 115 kg

Towing hitch (without electrical set)

Class: A50-X Cat. no. V51A Technical data:

Designed for:

D-value: 13,87 kN

Designed for:

Manufacturer: NISSAN
Model: PICK UP/double cabin

Type: (240/270) 4x4, tube bumper (D22)

produced since 01.2002 till 06.2005

Approval number according to Directive 94/20/EC: e20*94/20*0567*00

Foreword

This towing hitch is designed according to rules of safety traffic regulations. The towing hitch is a safety component and can be install only by qualified personnel. Any alteration or conversion of the towing hitch is prohibited and would lead to cancellation of design certification. Remove insulating compound and underseal from vehicle (if present) in the area of the matting surfaces of the towing hitch. The vehicle manufacturer's specifications regarding trailer load and max. vertical cup load are decisive for driving whereat values for the towing hitch cannot be exceeded.

D-value formula:

$$\frac{\text{Max trailer weight [kg]} \times \text{Max vehicle weight [kg]}}{\text{Max trailer weight [kg]}} \times \frac{9,81}{1000} = D [kN]$$