




TREKHAKEN • ATTELAGES • ANHÄNGERVORRICHTUNGEN • TOWBARS • ENHANCES • ANHÆNGERTRÆK • GANCI DI TRAINO


Montagehandleiding | instructions de montage | Einbauanleitung | Mounting instruction
Instrucciones de montaje | monteringsvejledning | istruzioni di montaggio








Audi Q5 01/'25-

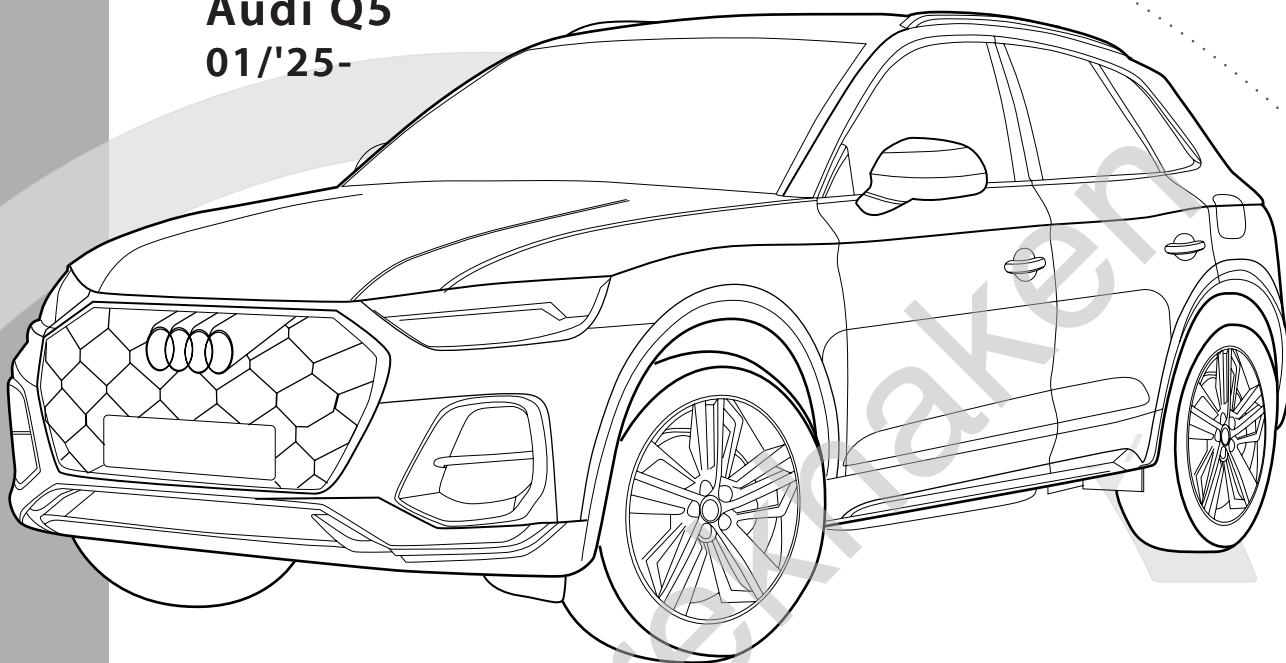

Audi Q5 sportback 01/'25-

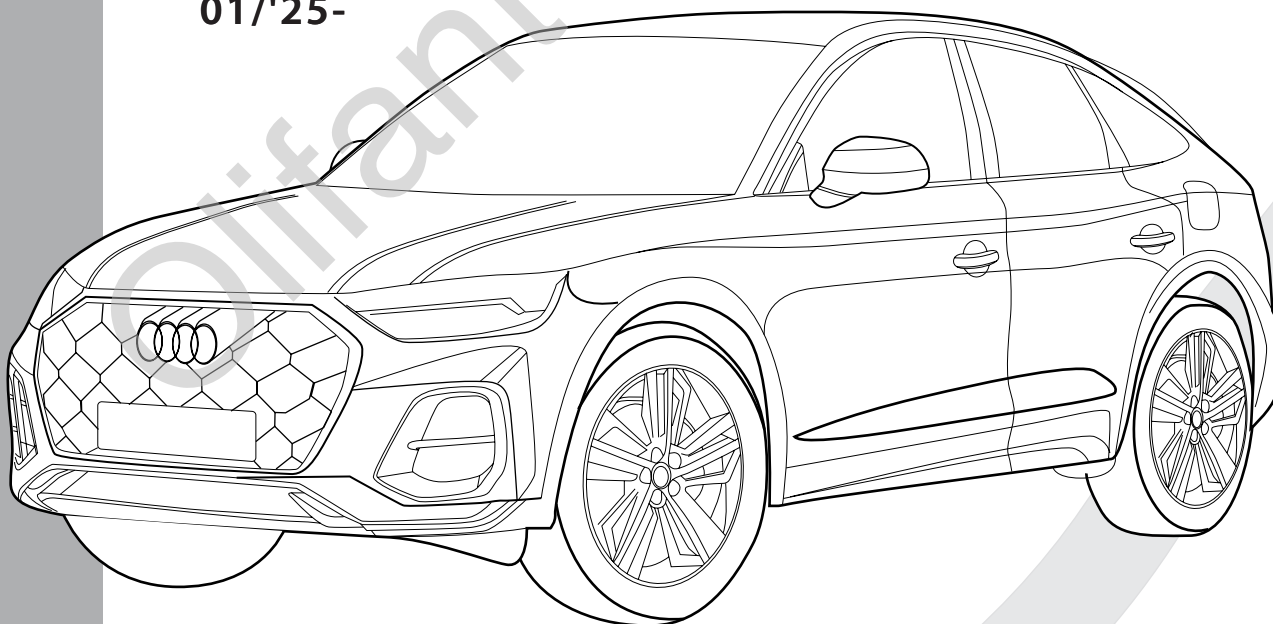


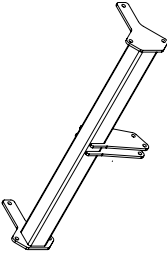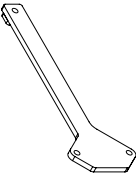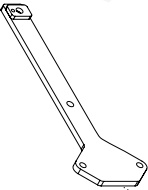1		X1	GDW REF. 2.965
2		X1	GDW REF. 2
3		X1	GDW REF. 3
4		X4	DIN 125A-13X24X2.5
5		X8	GROWER VSK-M12
6		X4	DIN 934-M12
7		X8	DIN 931-M12X50
8		X4	DIN 934-M12 (BRUT)
9		X4	DIN 9021 - 13X37X3
-V		X1	GDW REF. PO7
-S		X1	GDW REF. 900.053

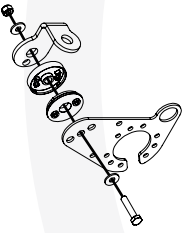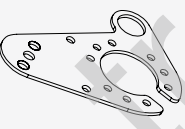
-P		X1	GDW REF. P29
└		X1	DIN985-M6
└		X2	6,2 X 15,4 X 1,6 (NYLON)
└		X1	GDW REF. 718.16.002
└		X1	GDW REF. 718.16.003
└		X1	GDW REF. 908.094
└		X1	DIN933-M6 X 30
└		X1	GDW REF. 908.095

Geleverd met - Livré avec - Delivered with Geliefert mit - Elementos adjuntos - Leverages med - Forniti insieme			
	X1	9444.H047	
	X2	DIN931-M12 X 70	
	X2	DIN985-M12	



1

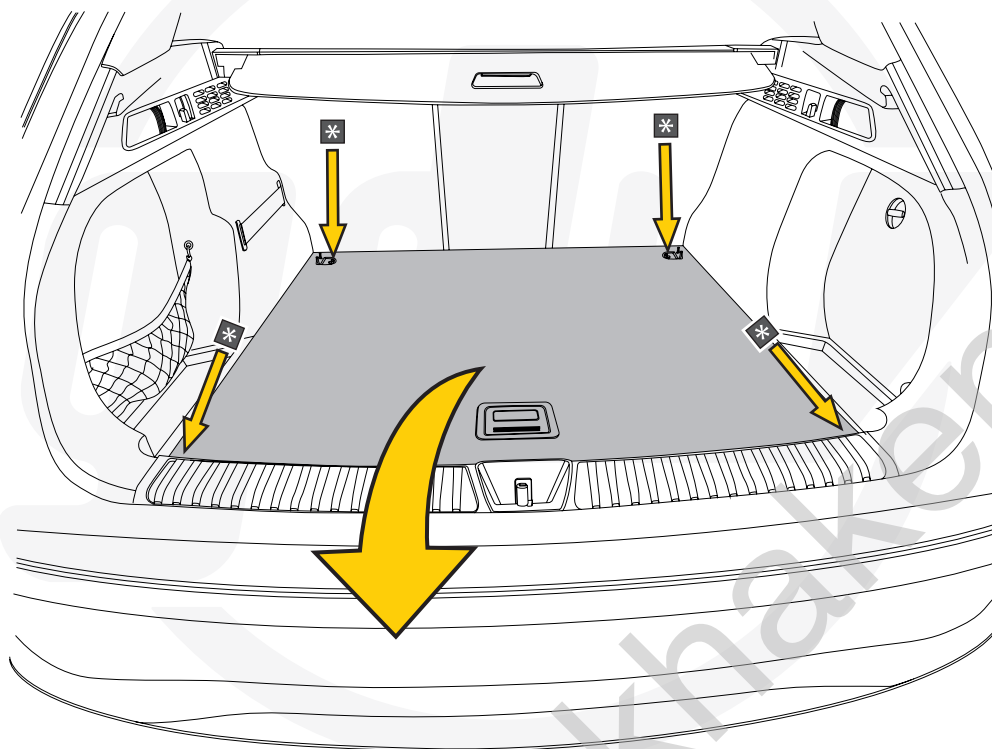



2





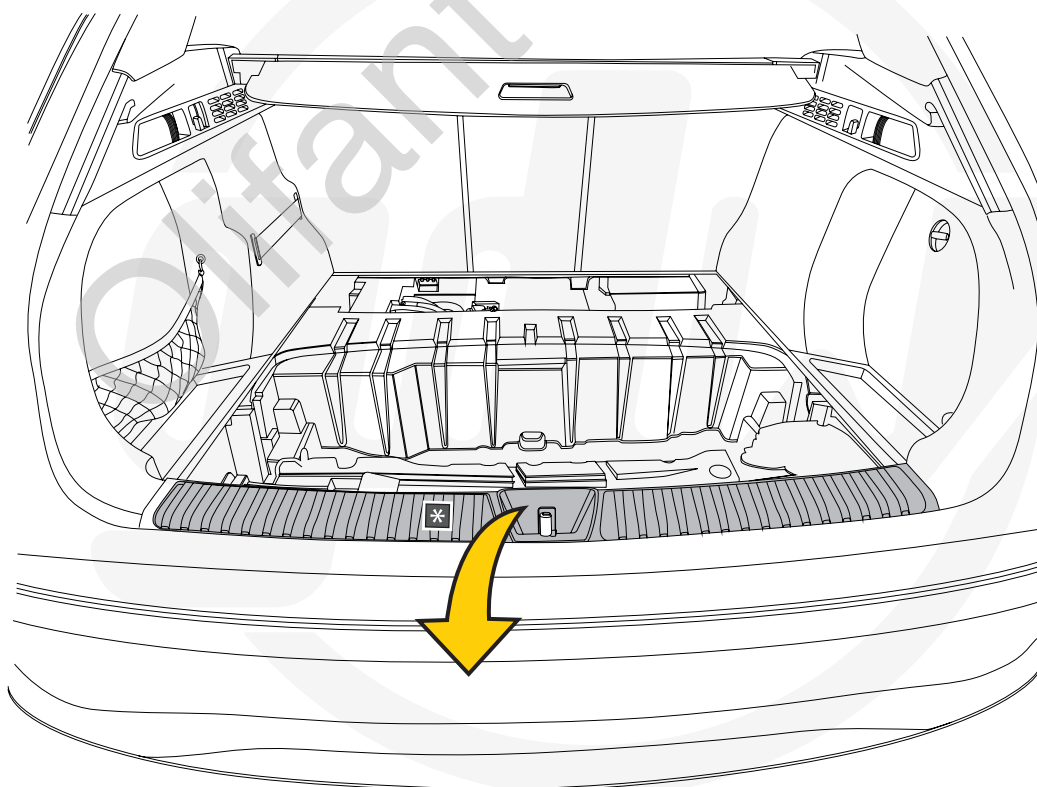


3

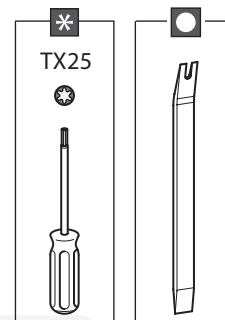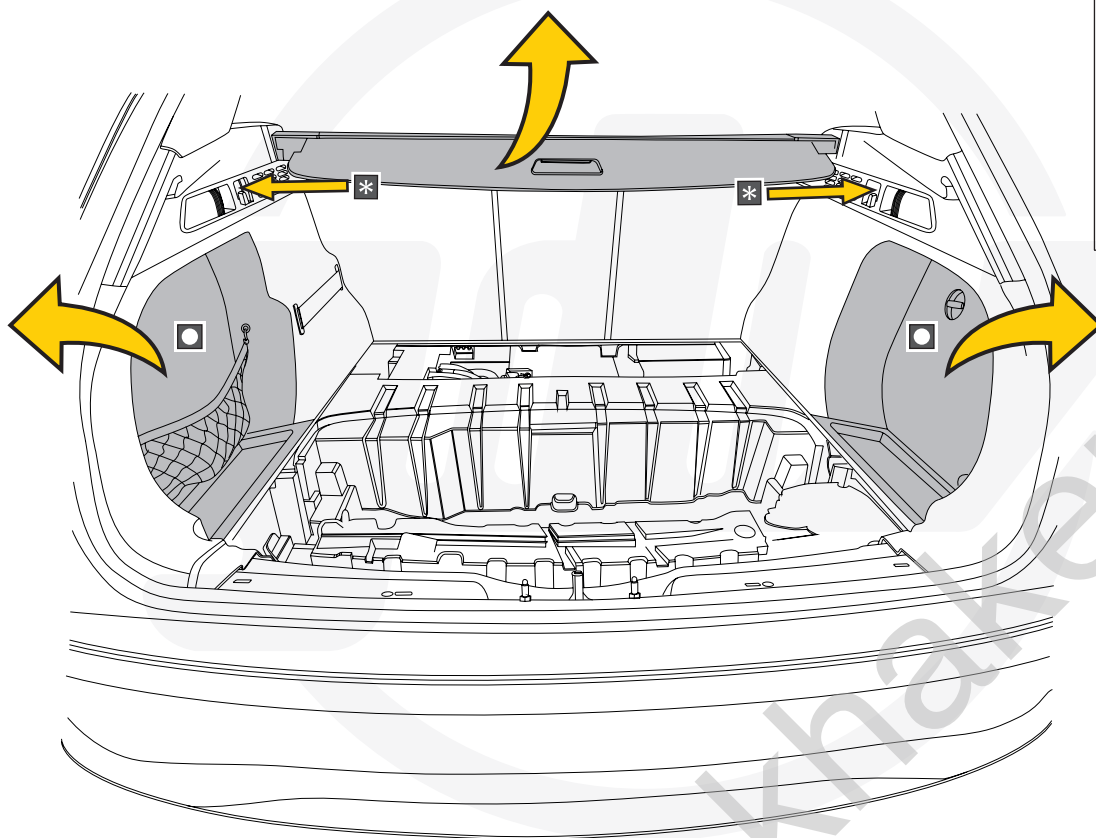


4

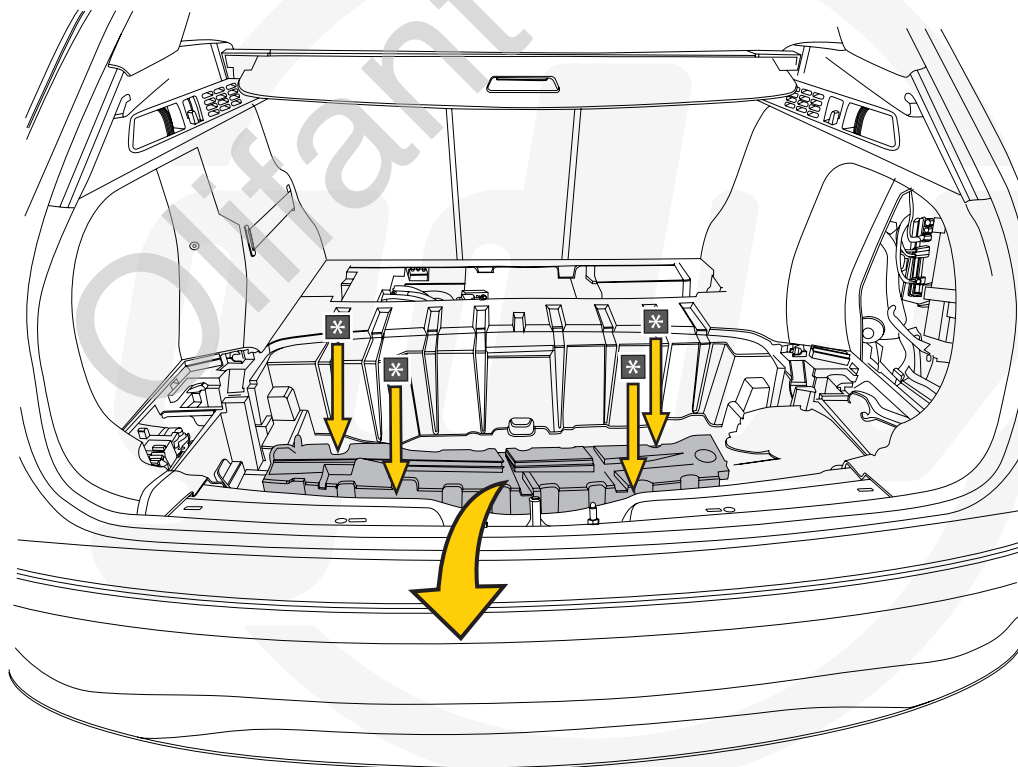


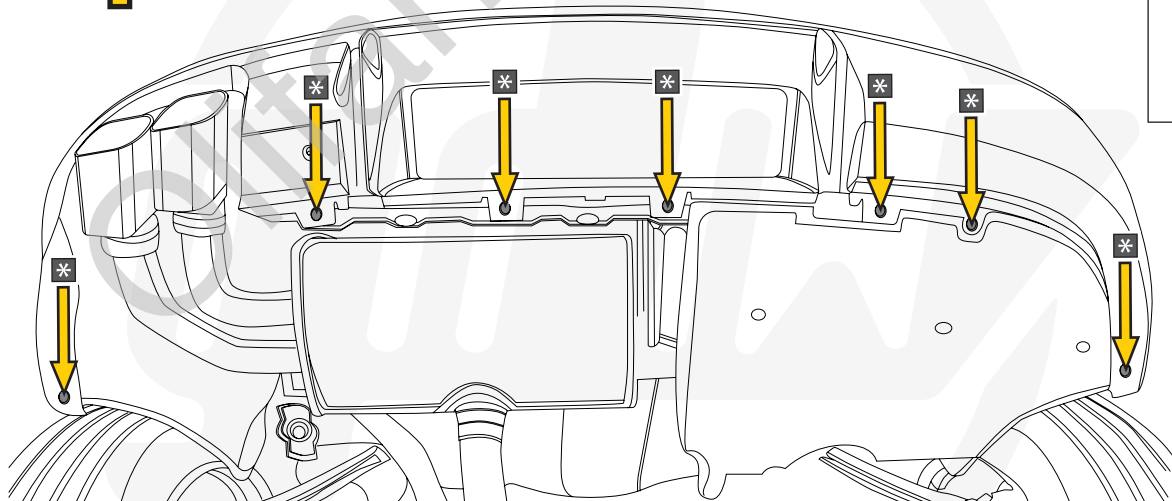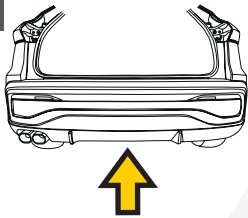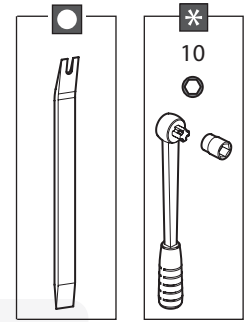
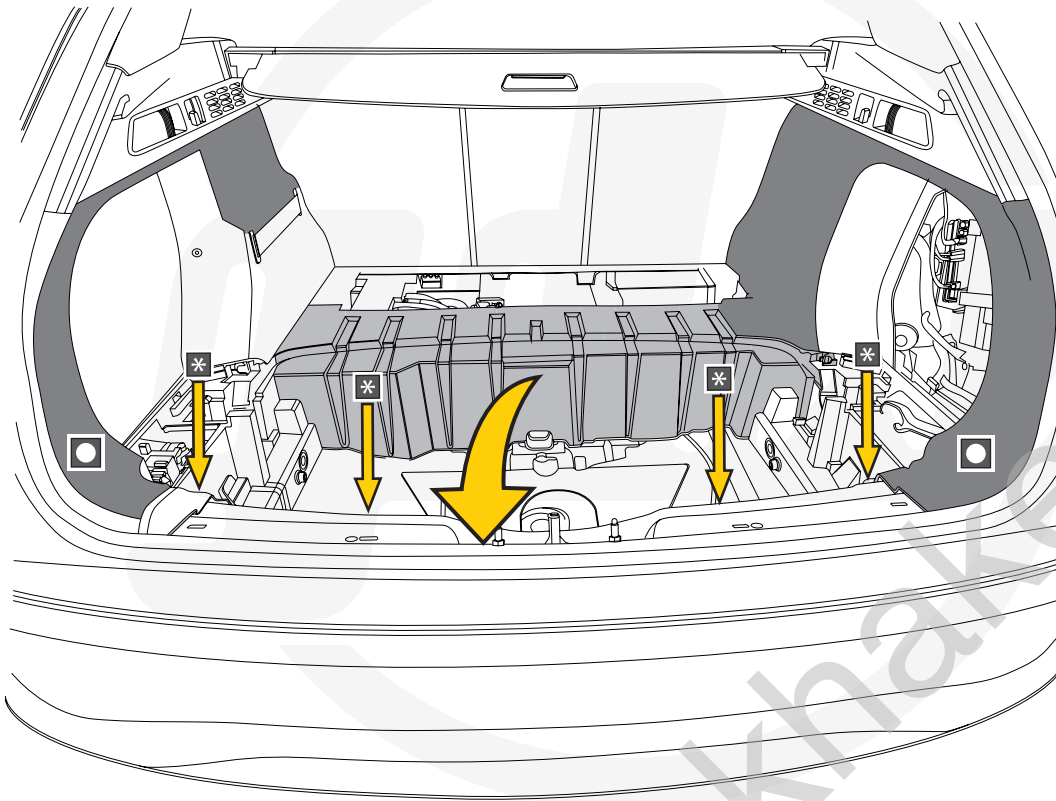




7






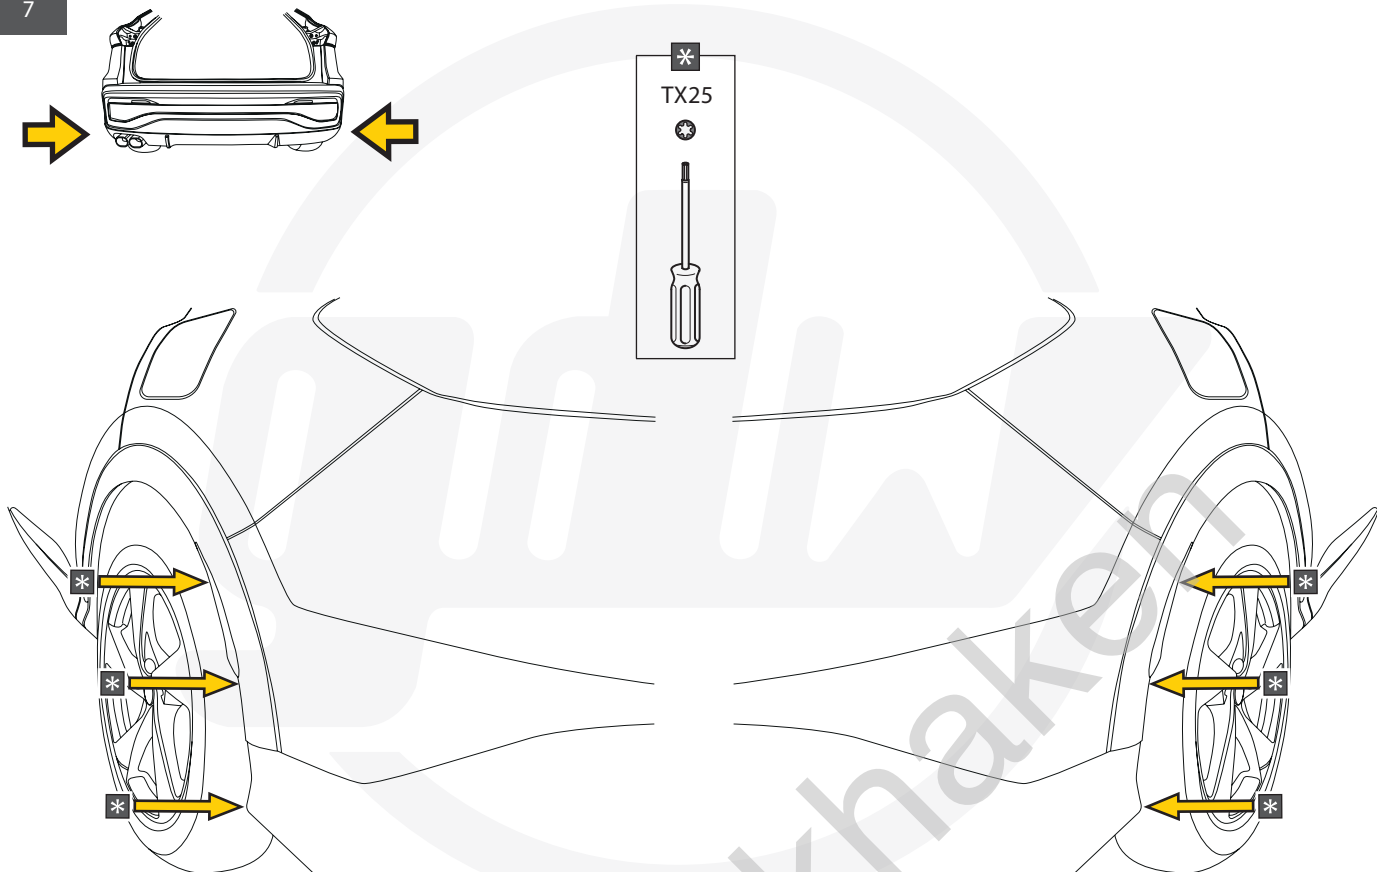







8

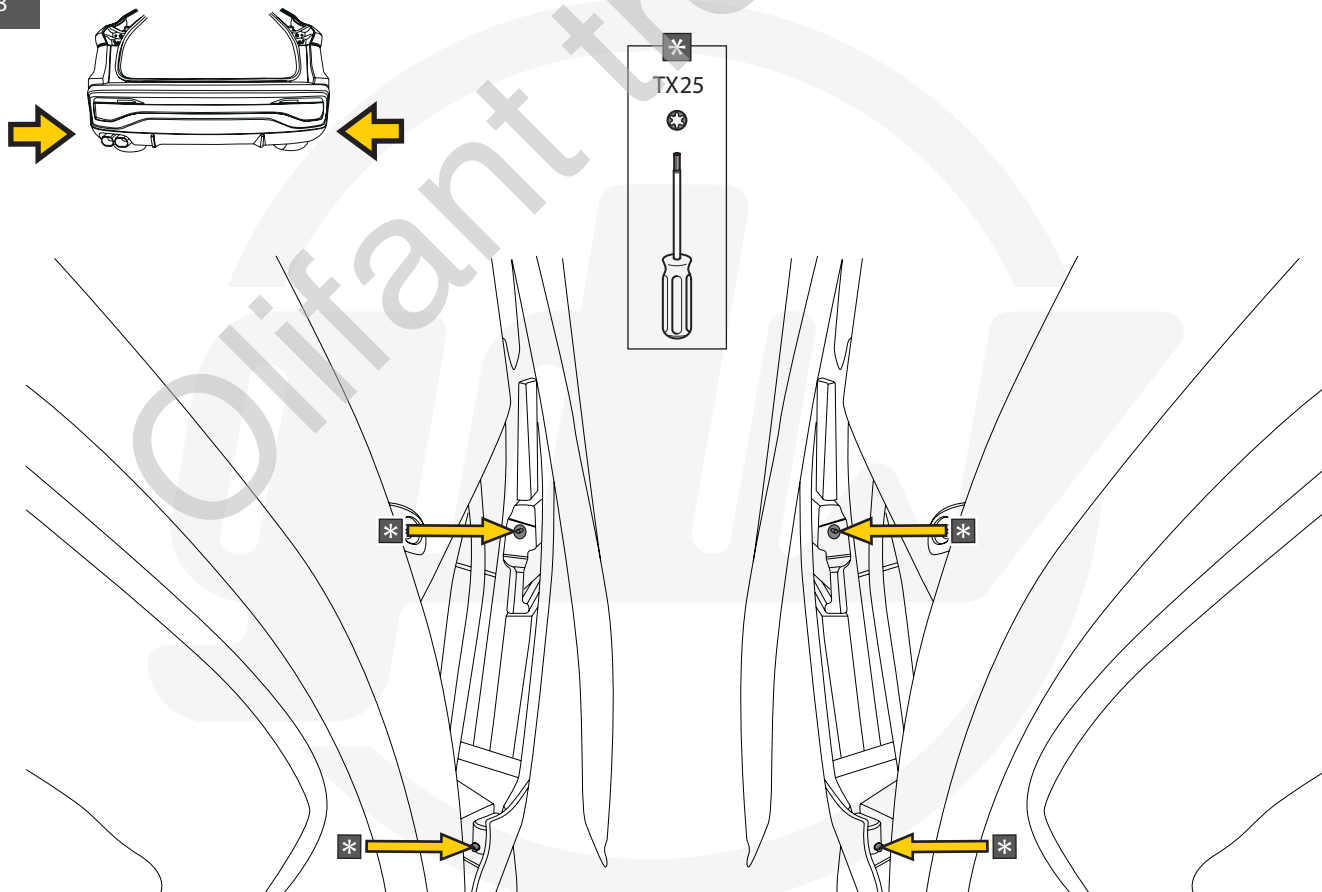

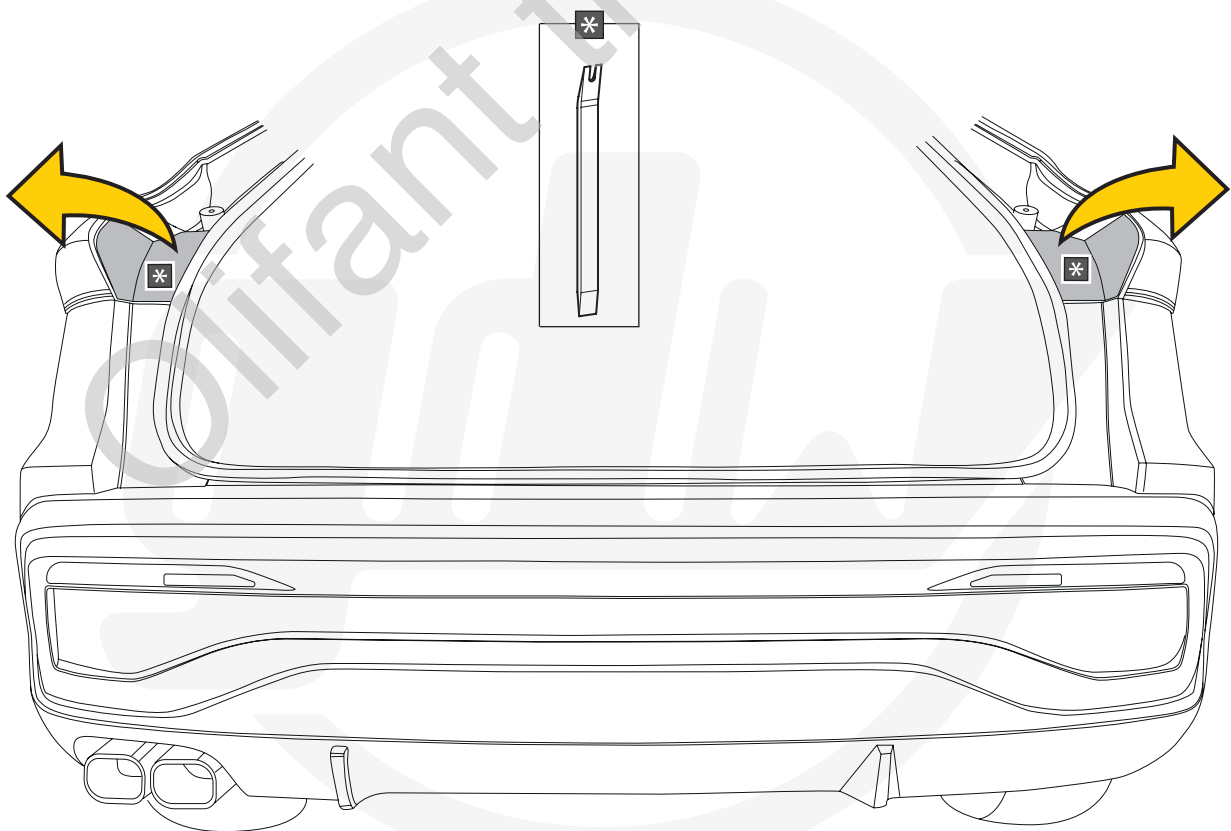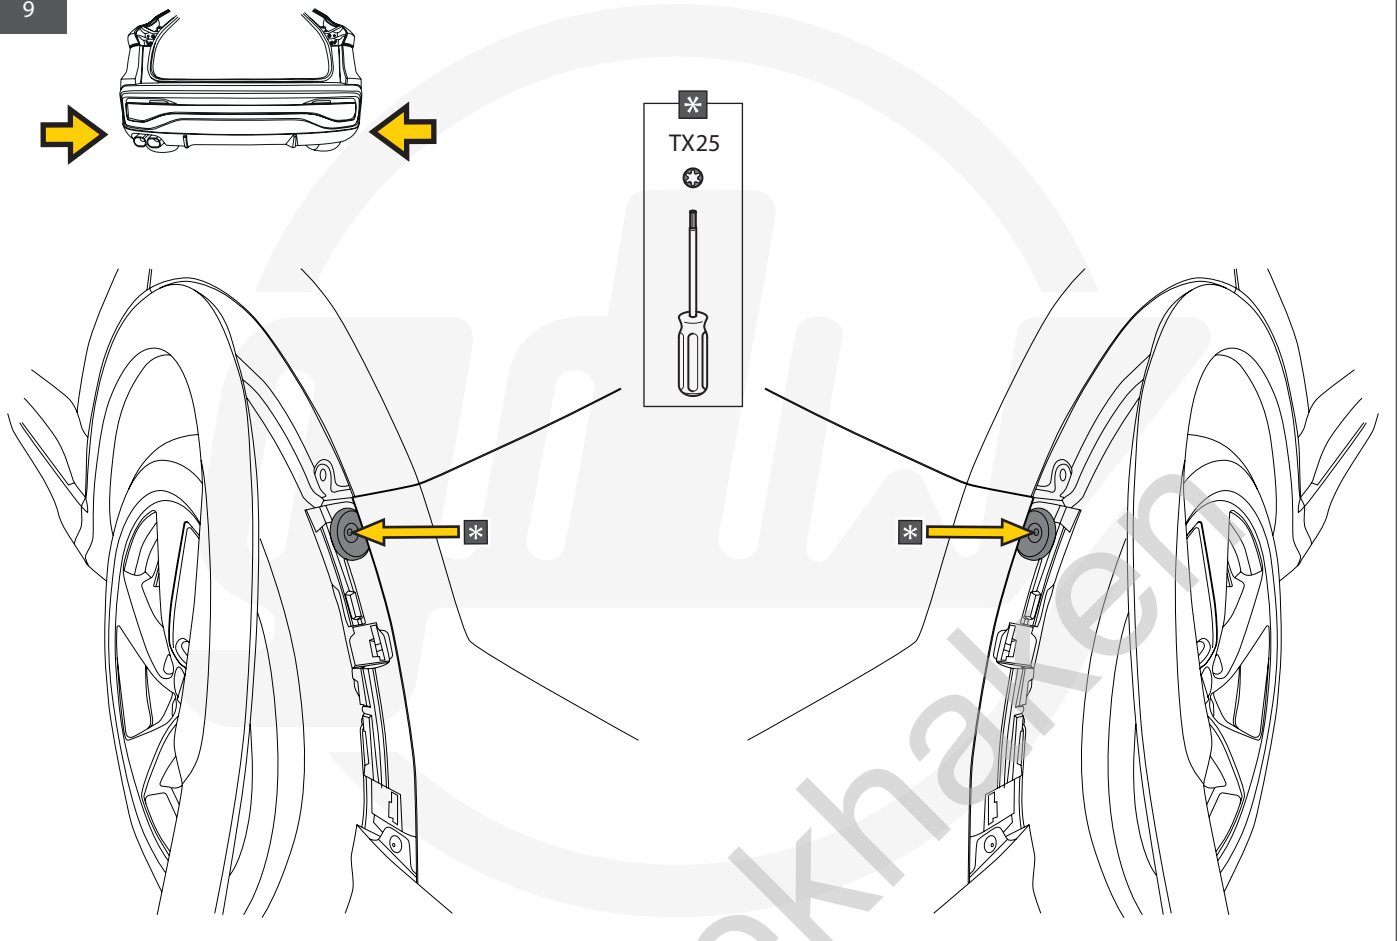


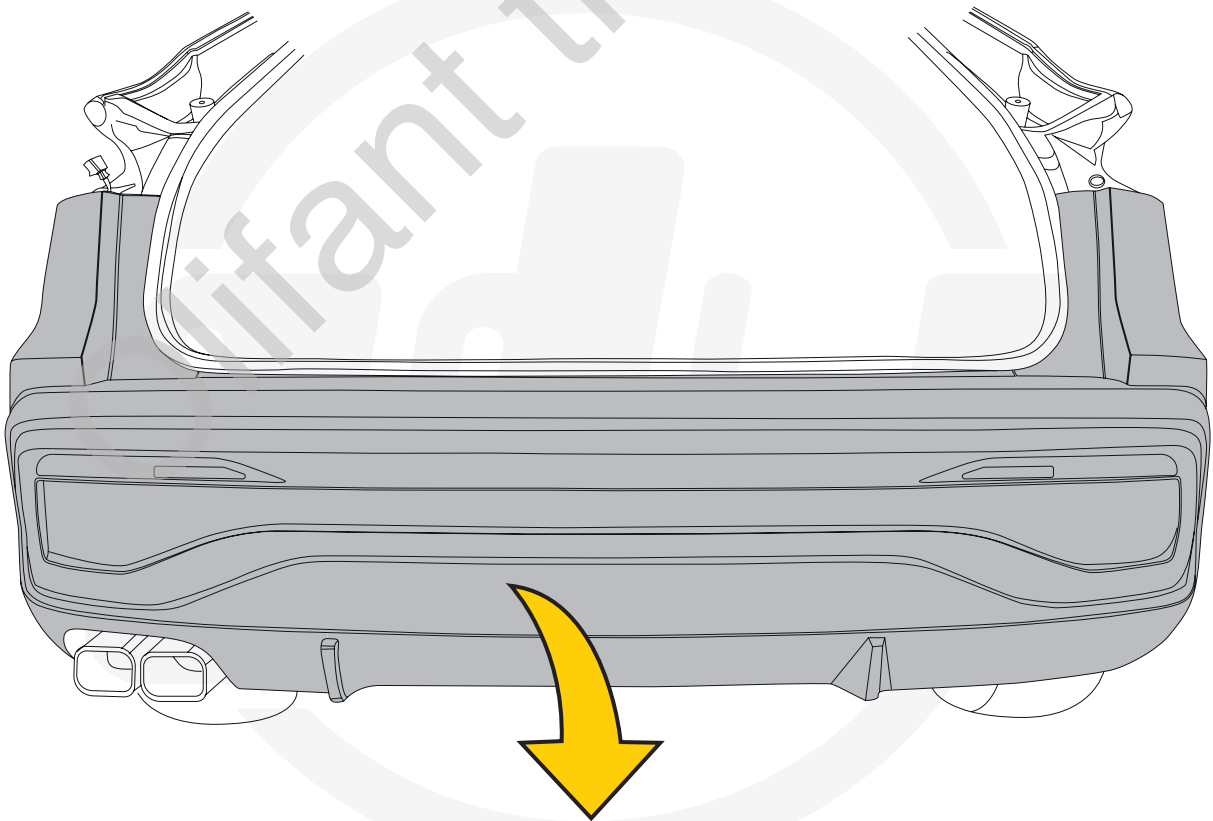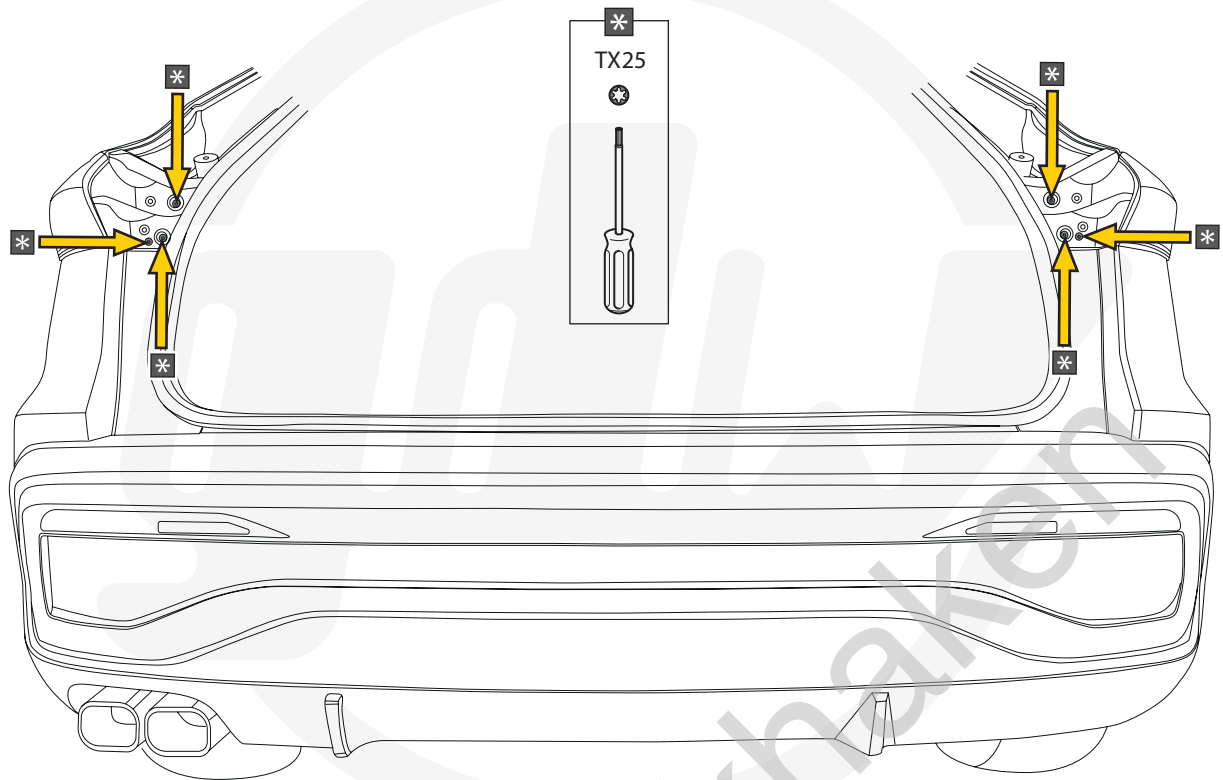

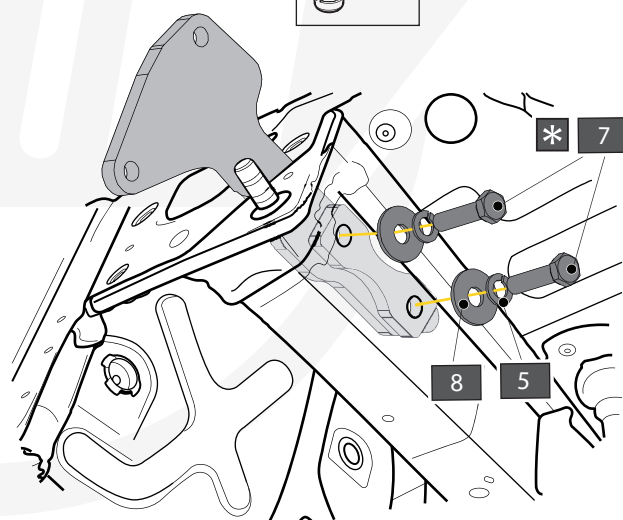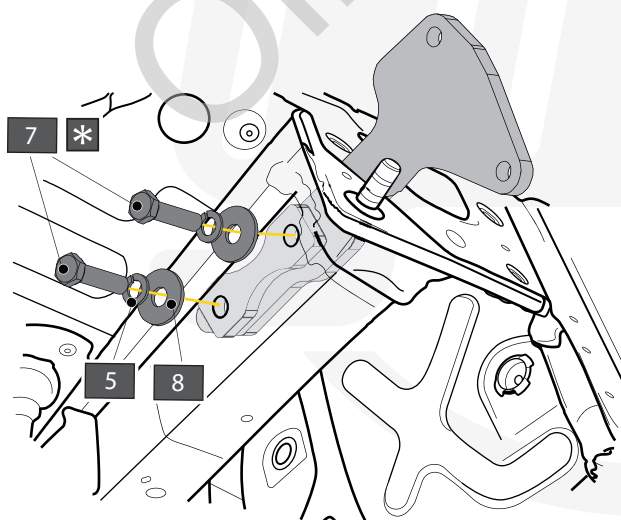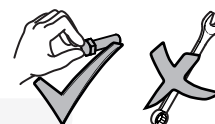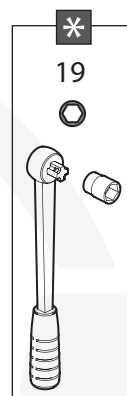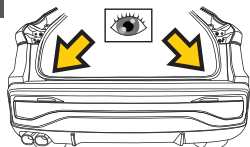
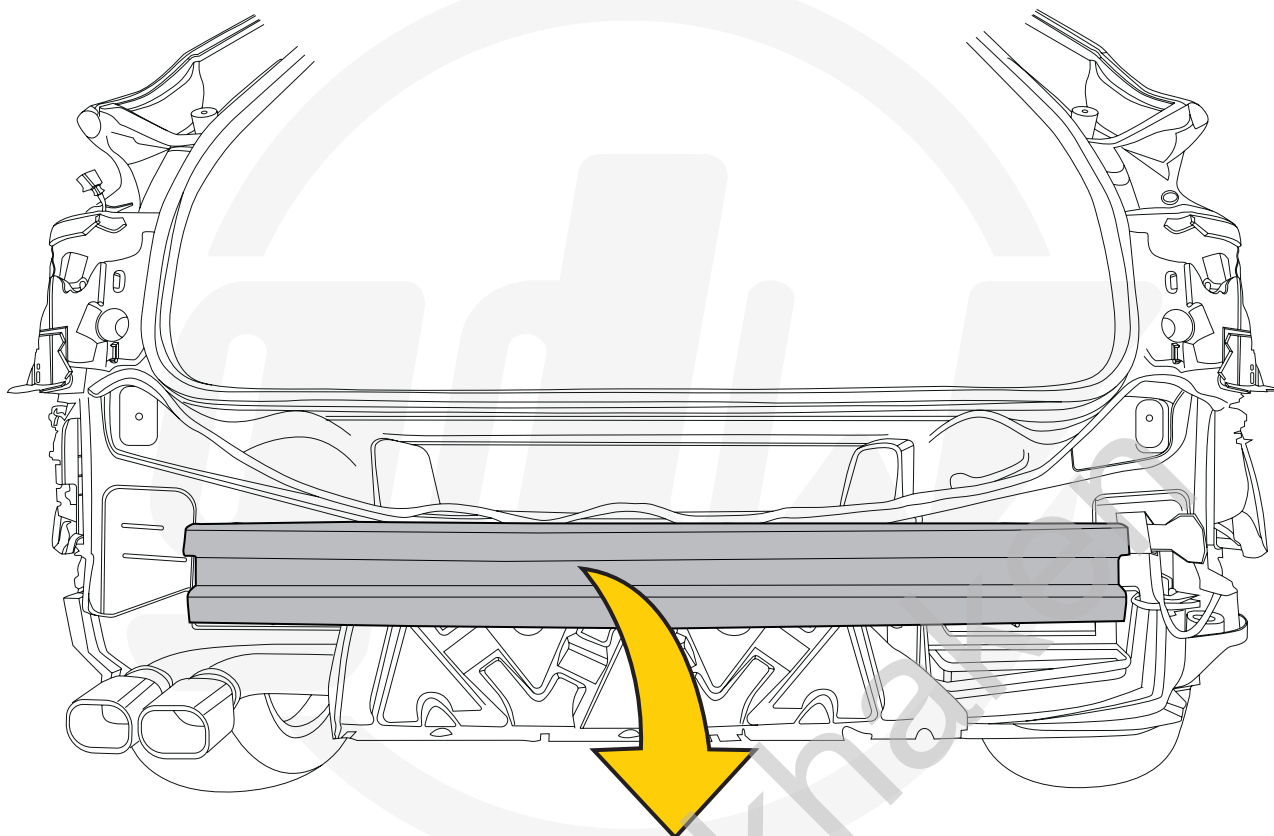


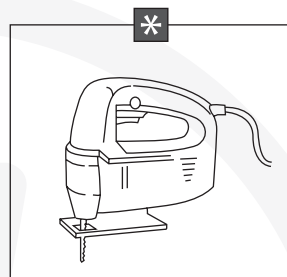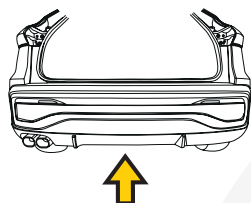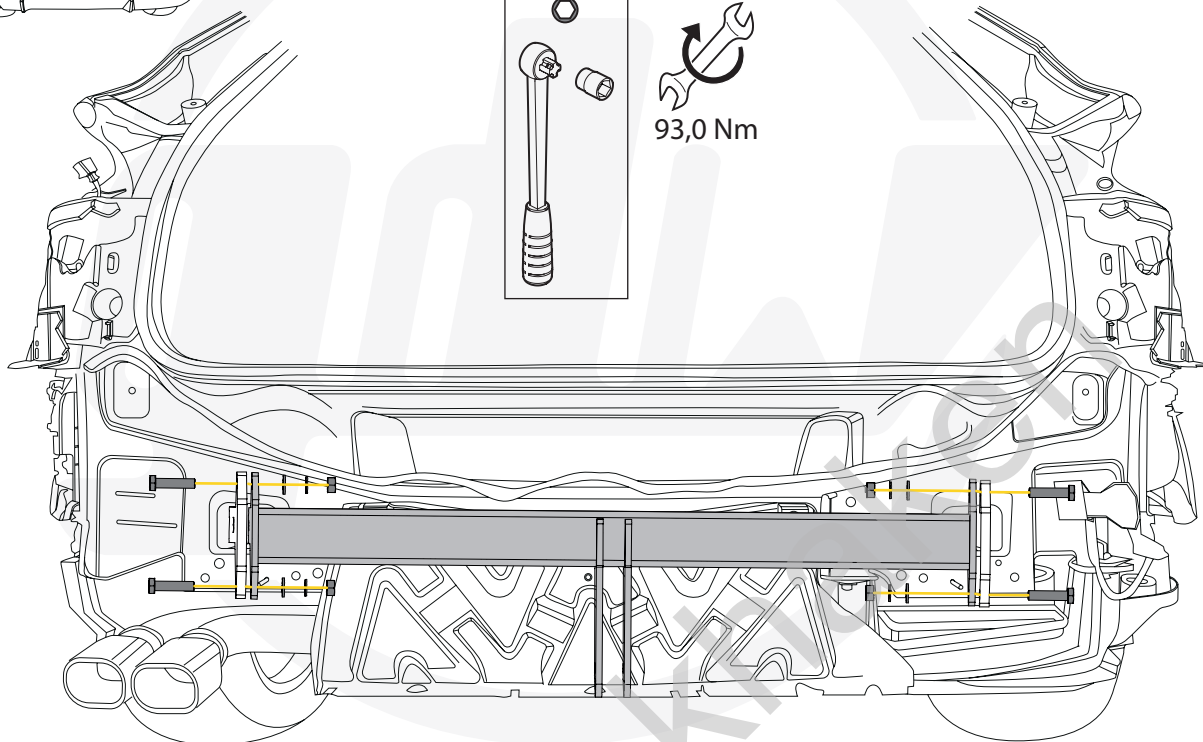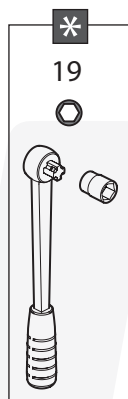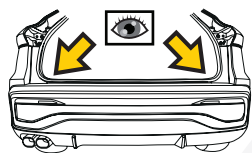

NO CUTOUT

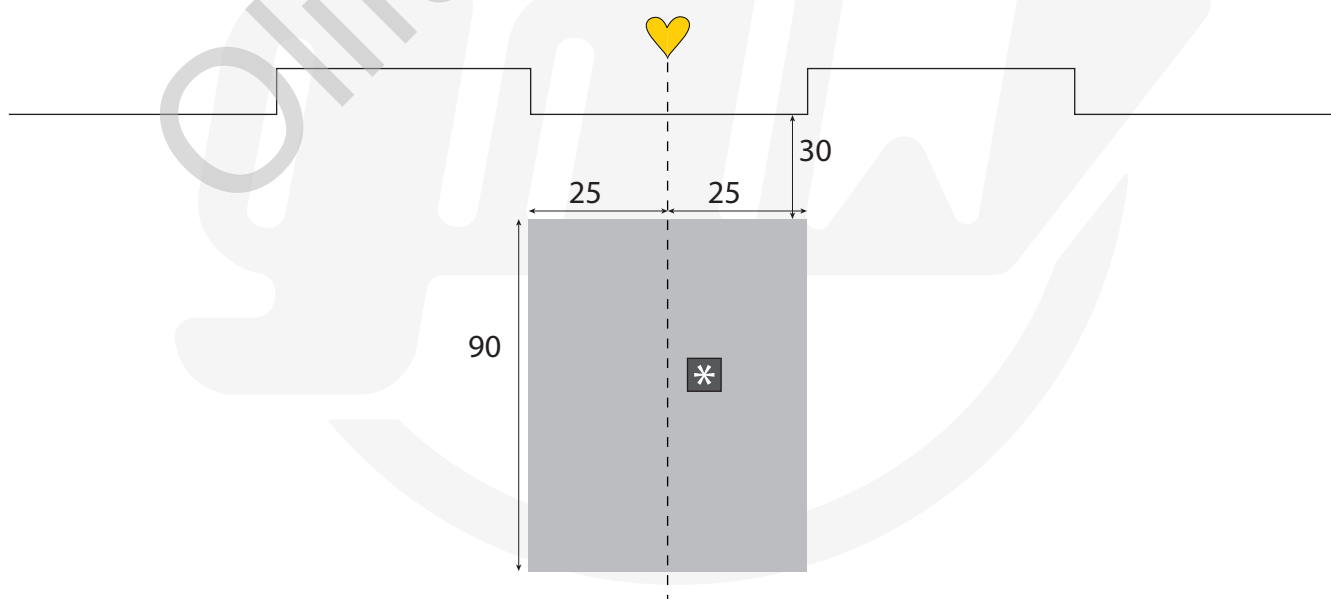

93,0 Nm

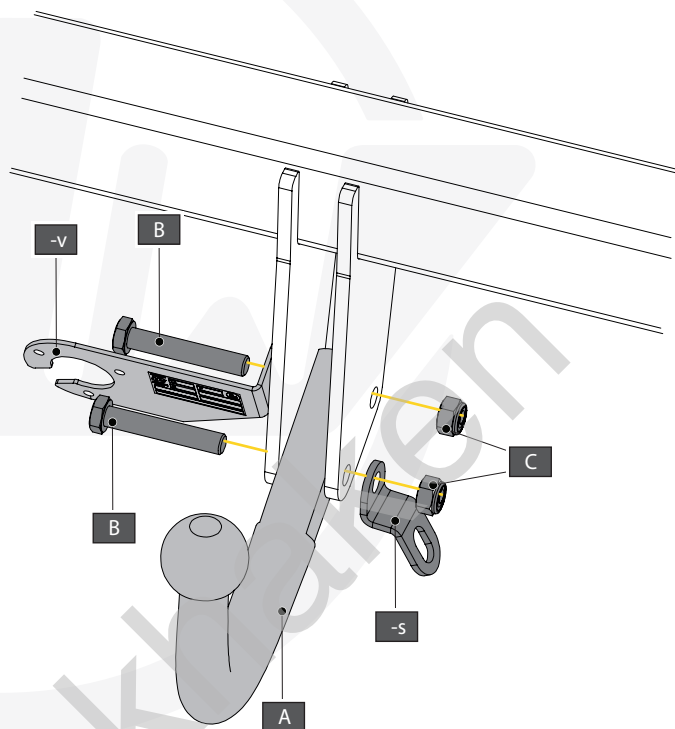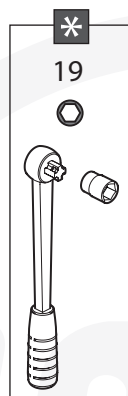

A X1 9444.H047

B X2 DIN931-M12 X 70

C X2 DIN985-M12

