




TREKHAKEN • ATTELAGES • ANHÄNGERVORRICHTUNGEN • TOWBARS • ENHANCES • ANHÆNGERTRÆK • GANCI DI TRAINO


Montagehandleiding | instructions de montage | Einbauanleitung | Mounting instruction
Instrucciones de montaje | monteringsvejledning | istruzioni di montaggio







Audi Q5 01/'25-


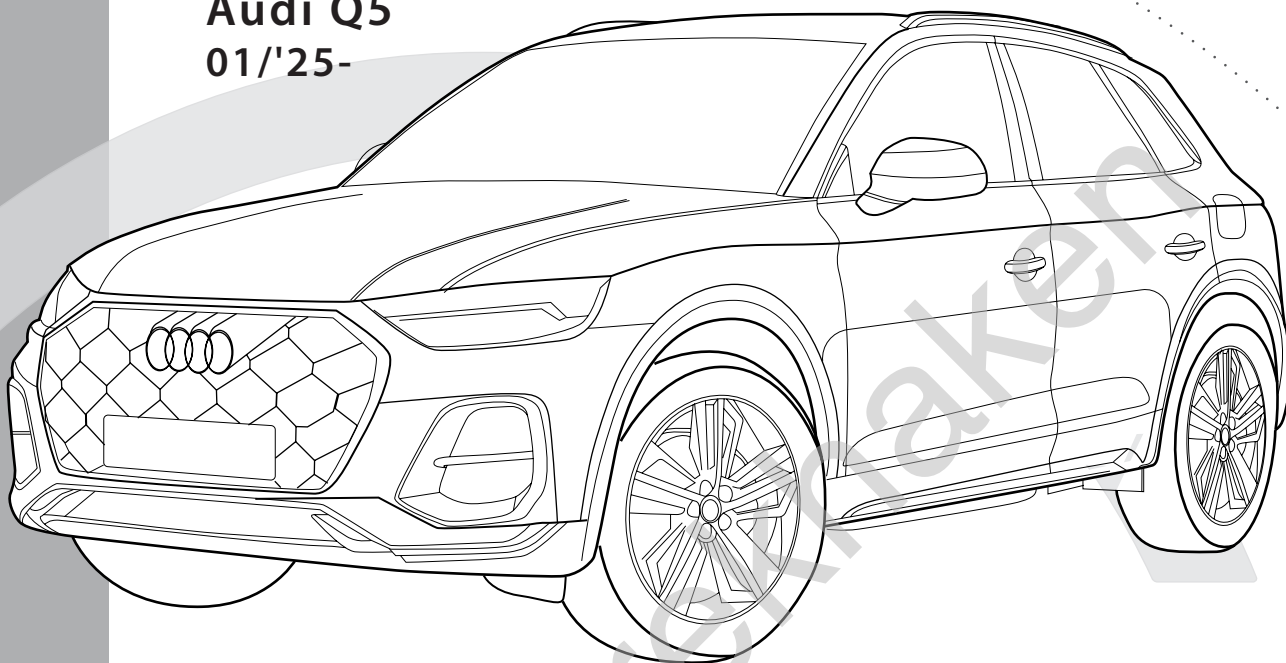




Audi Q5 sportback 01/'25-

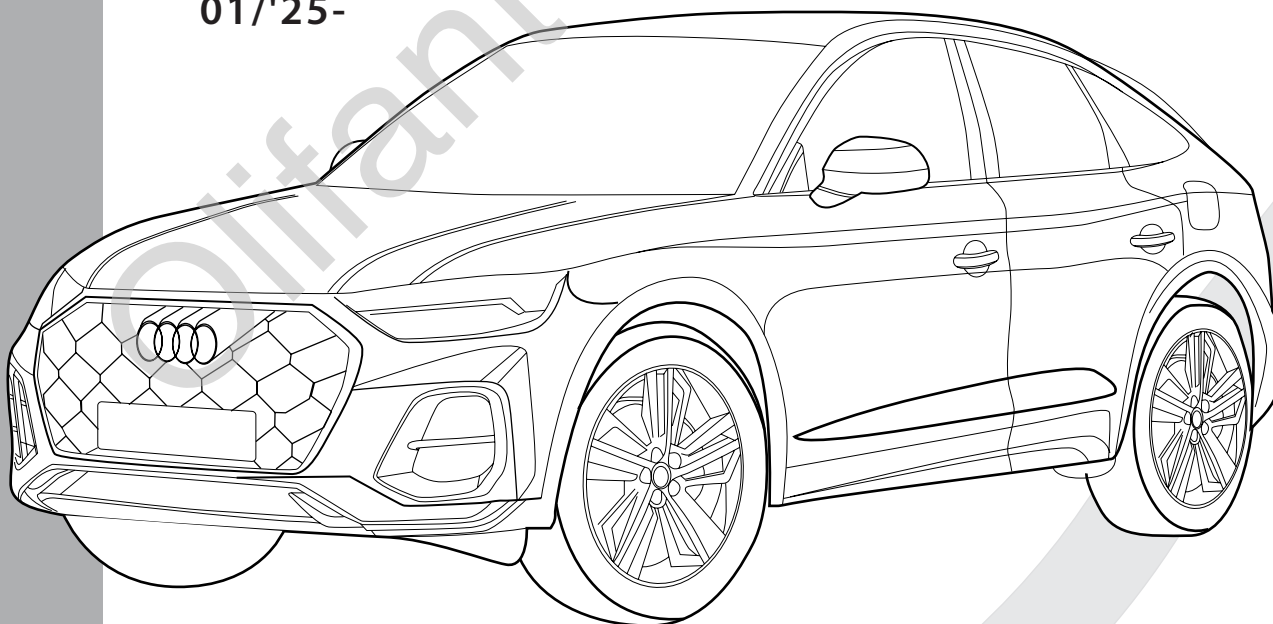

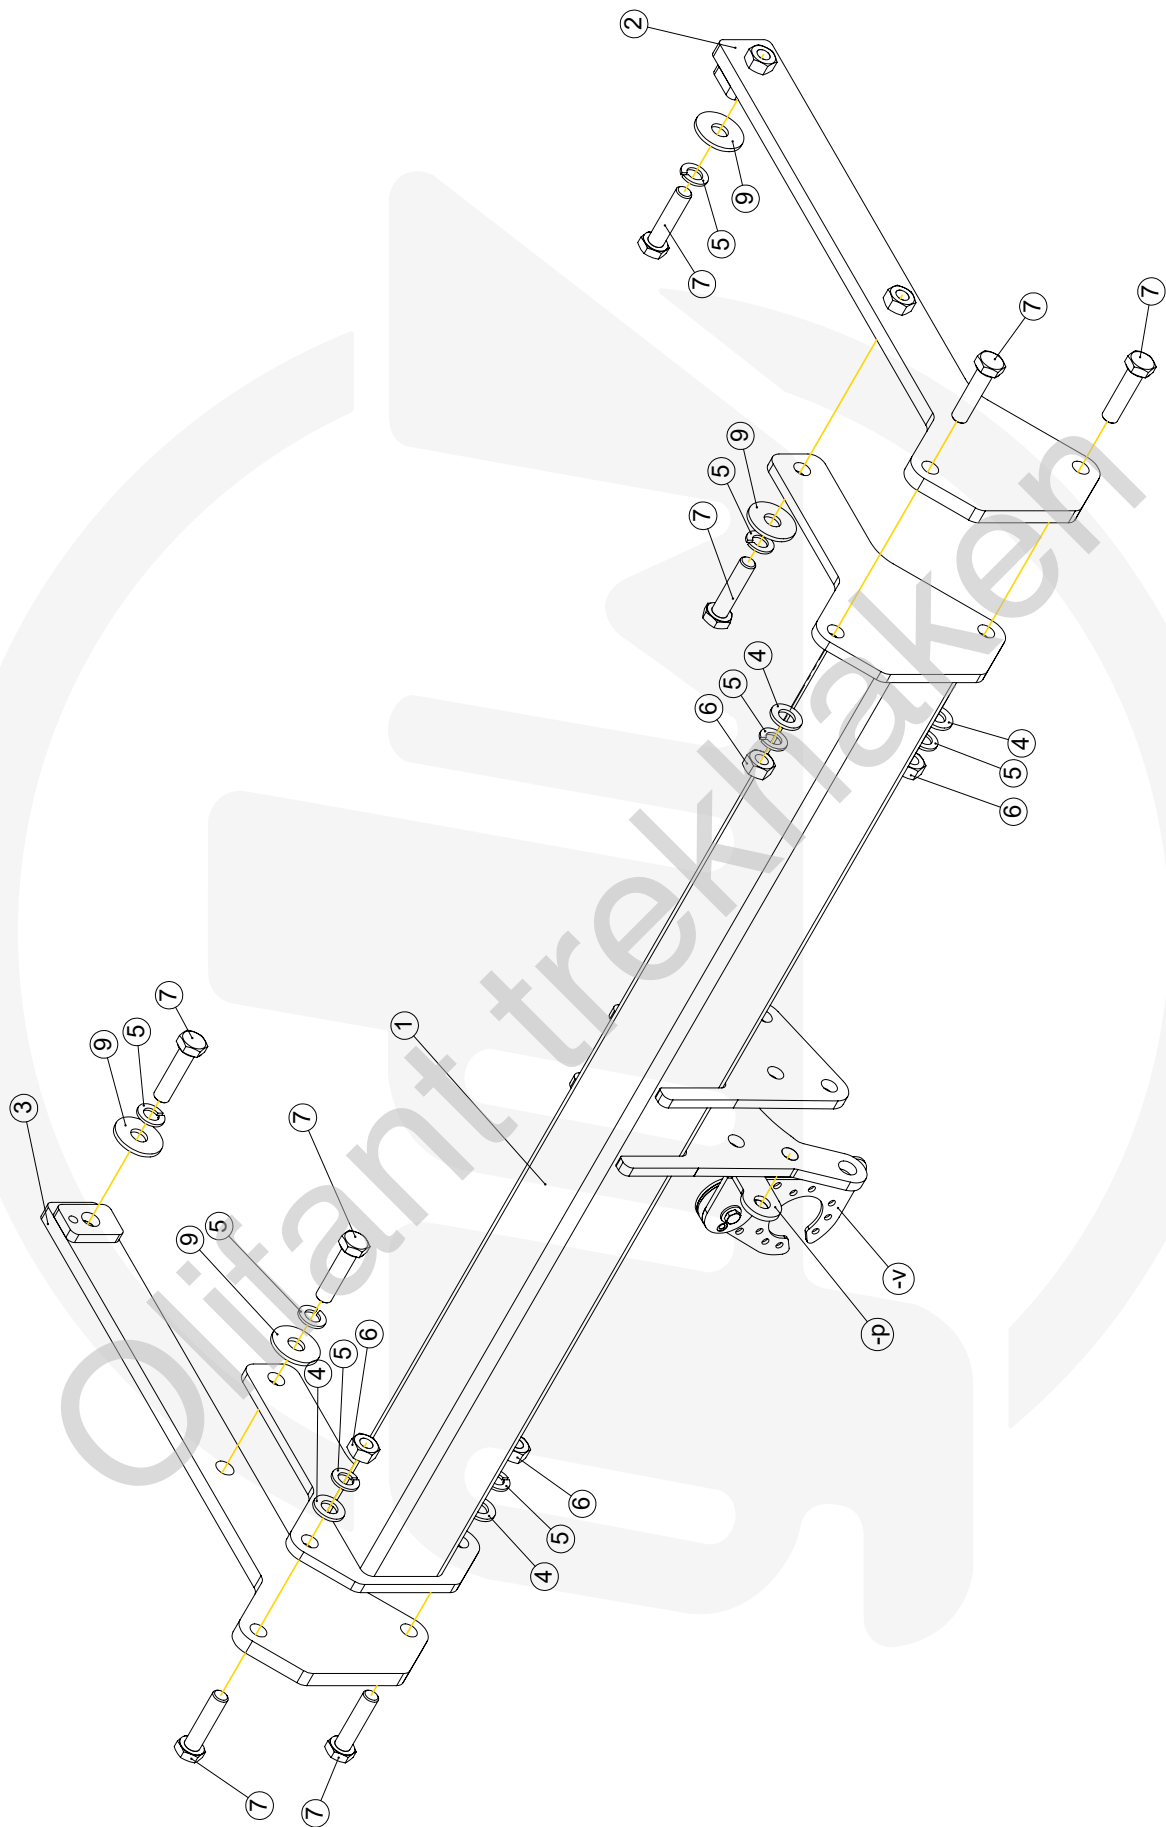


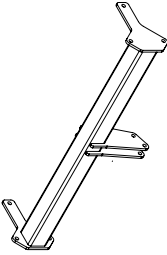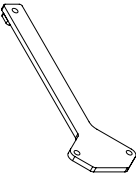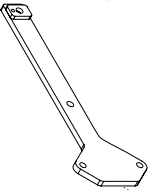1		X1	GDW REF. 2.966T60
2		X1	GDW REF. 2
3		X1	GDW REF. 3
4		X4	DIN 125A-13X24X2.5
5		X8	GROWER VSK-M12
6		X4	DIN 934-M12
7		X8	DIN 931-M12X50
8		X4	DIN 934-M12 (BRUT)
9		X4	DIN 9021 - 13X37X3
-V		X1	GDW REF. 908.094

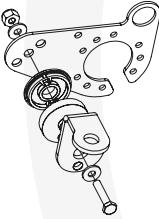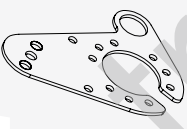-P		X1	GDW REF. P40
↑		X1	DIN985-M6
↑		X2	6,2 X 15,4 X 1,6 (NYLON)
↑		X1	GDW REF. 718.16.002
↑		X1	GDW REF. 718.16.003
↑		X1	GDW REF. 908.094
↑		X1	DIN933-M6 X 30
↑		X1	GDW REF. 908.095

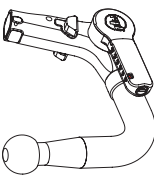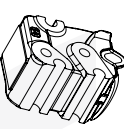Geleverd met - Livré avec - Delivered with Geliefert mit - Elementos adjuntos-Leveres med			
	X1	REF. 960.V0802	
↑ 	X1	GDW REF. 740.200	
	X1	GDW REF. 912.003	
↑ 	X1	GDW REF. 740.112	
↑ 	X1	GDW REF. 740.111	
	X1	GDW REF. 740.12X X=LAST NUMBER ON KEY	
	X1	GDW REF. 718.15.001	
	X1	GDW REF. SYST60-10	
↑ 	X3	DIN931-M12X110-8.8	
↑ 	X3	DIN934-M12	
↑ 	X6	DIN125A-M12	
↑ 	X3	DIN128A-M12	


1

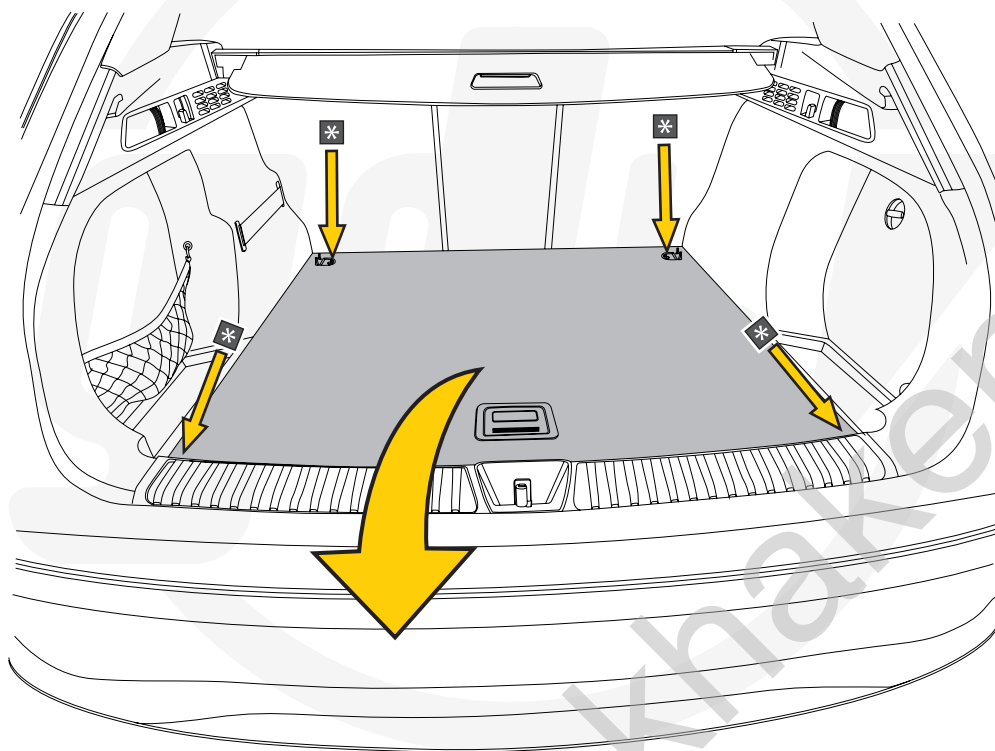



TX27





2





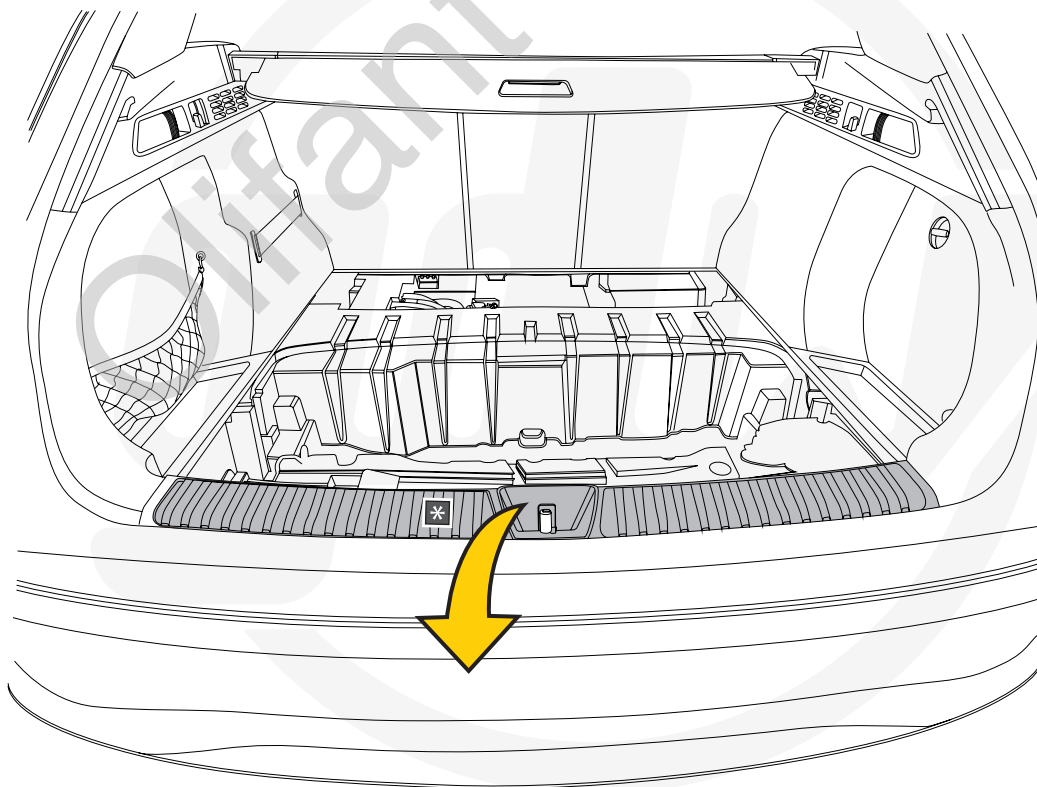


3

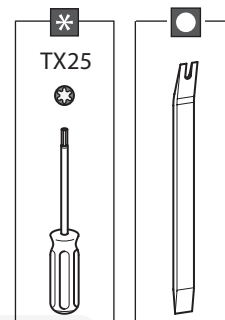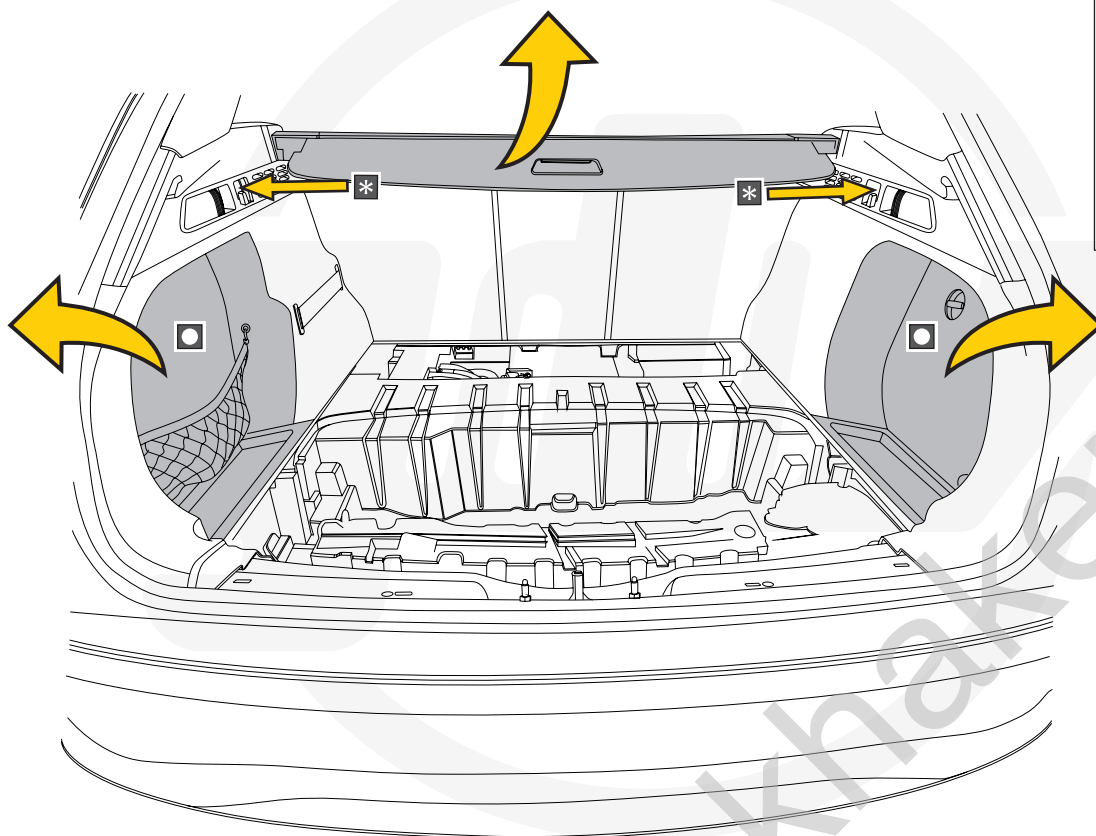


4

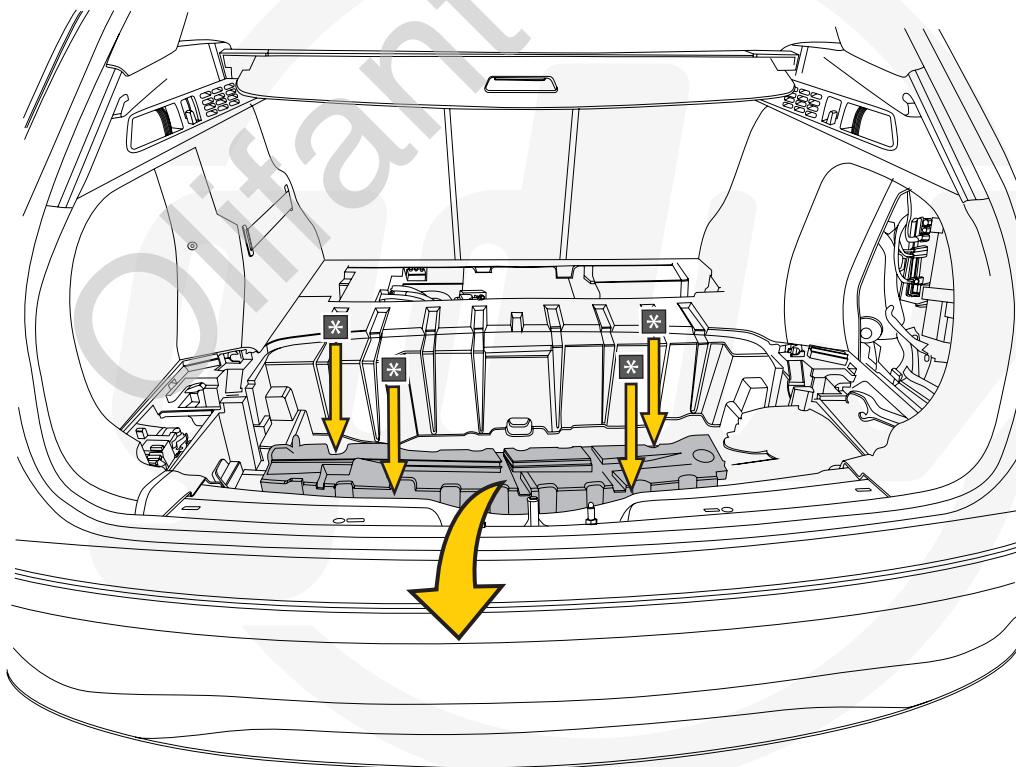


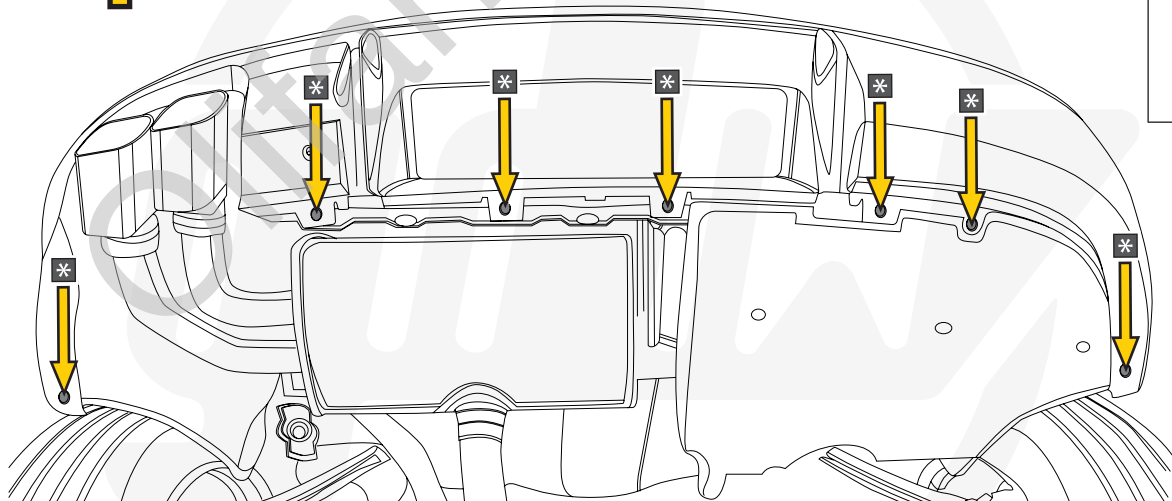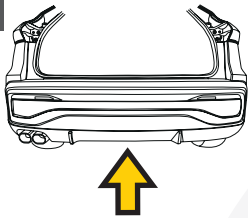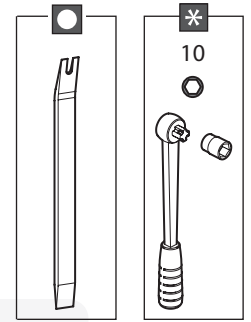
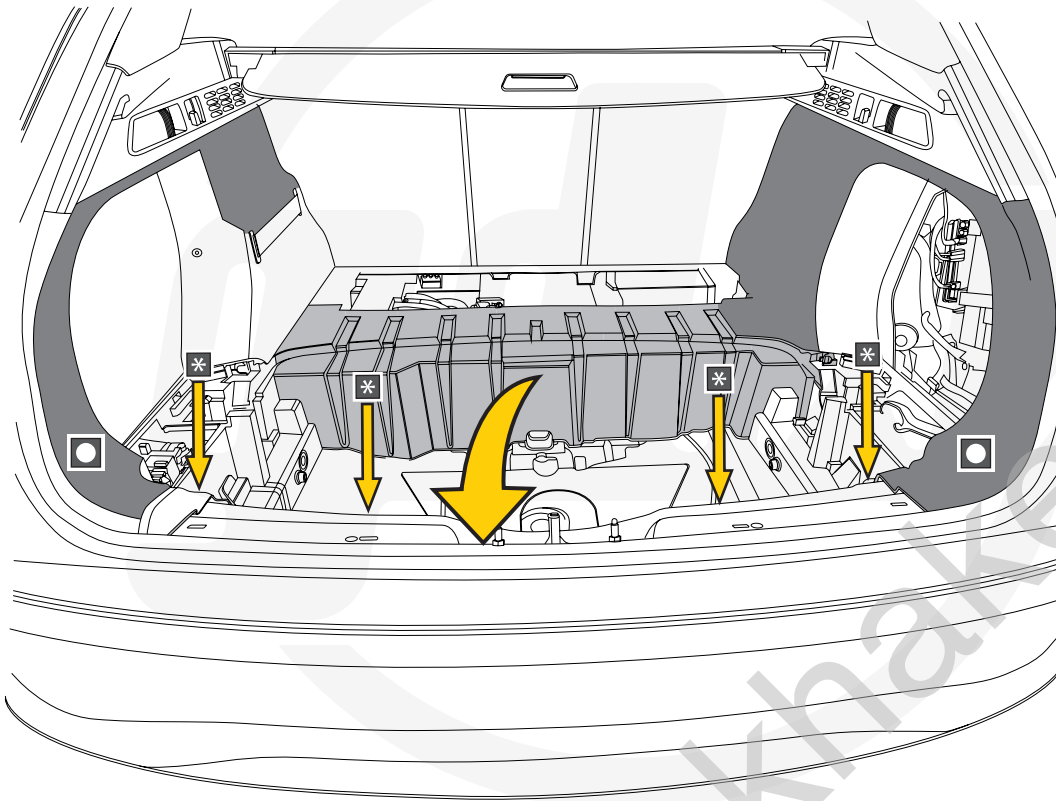




7






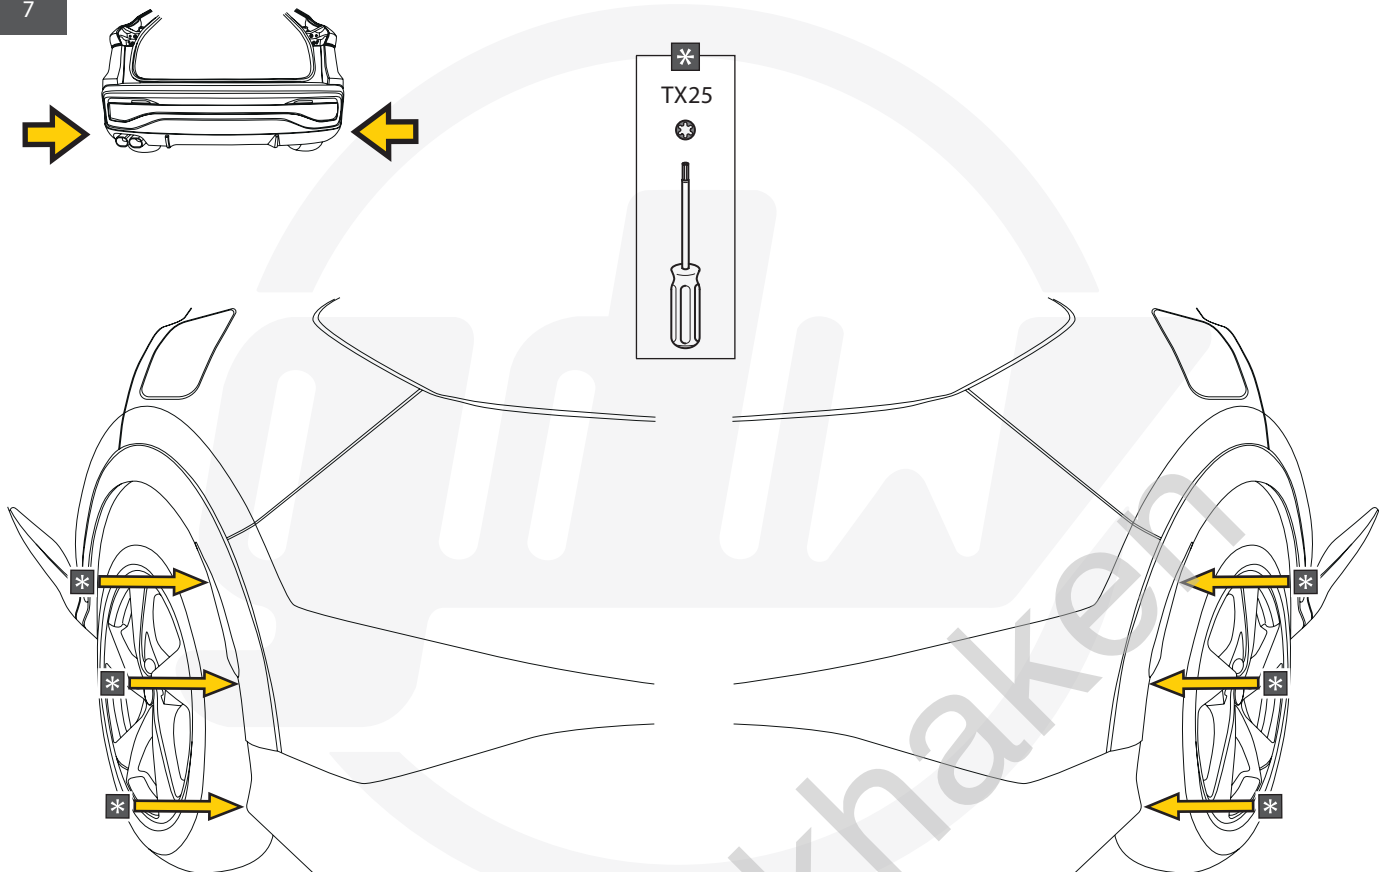


8



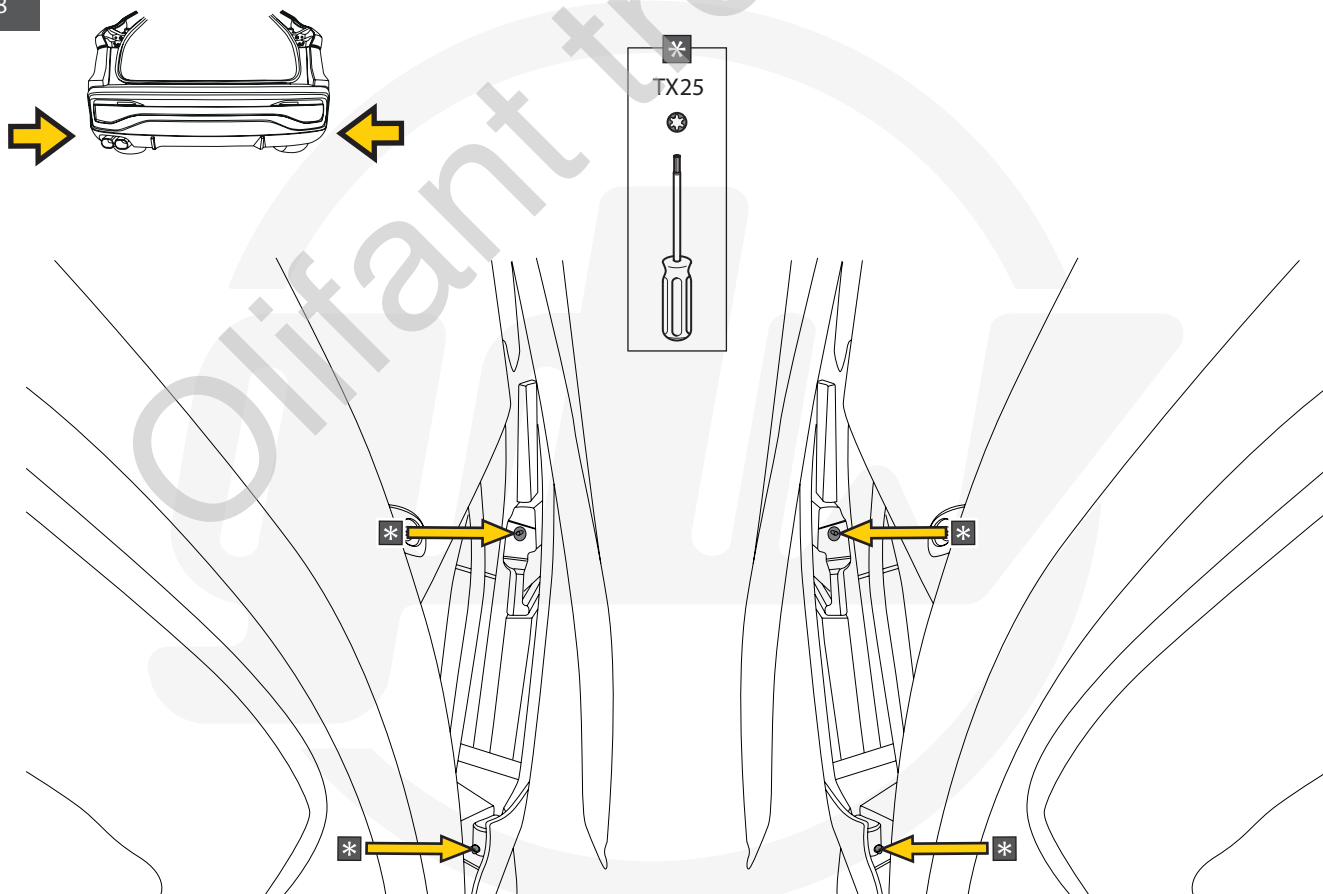


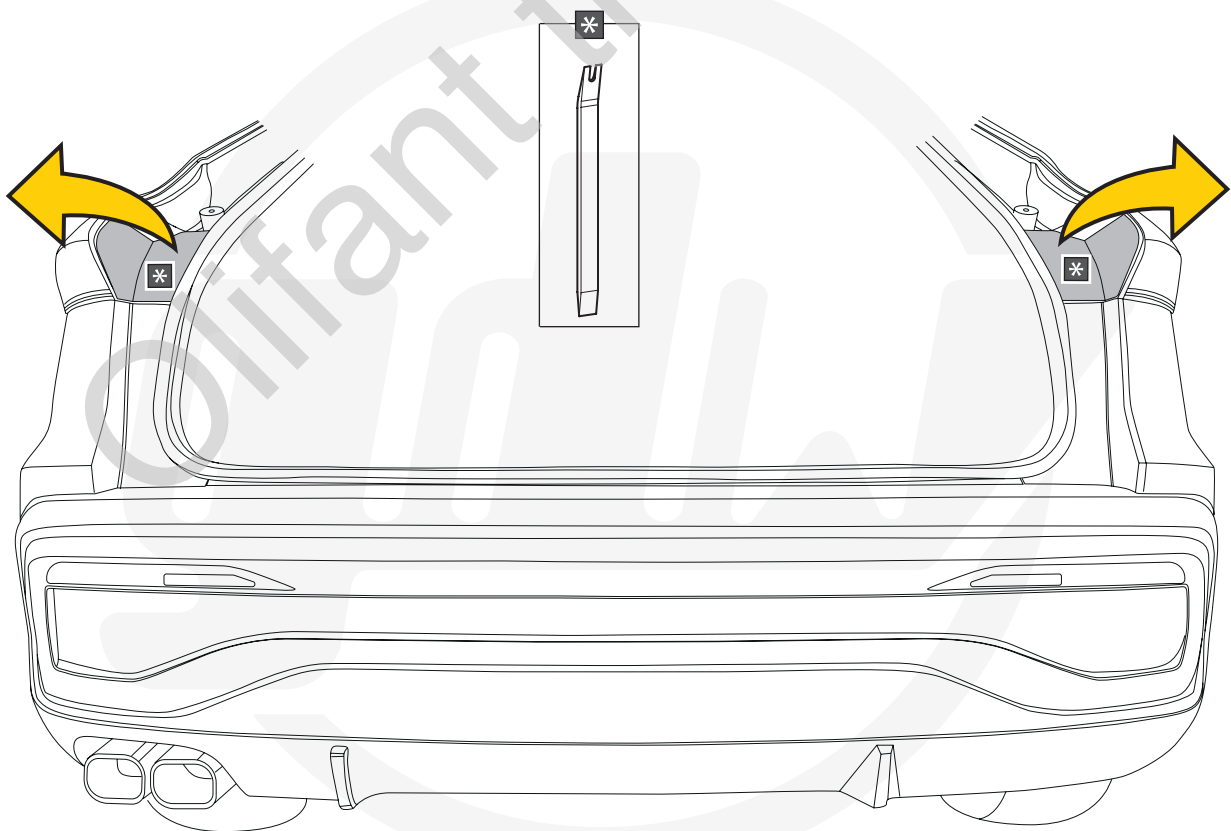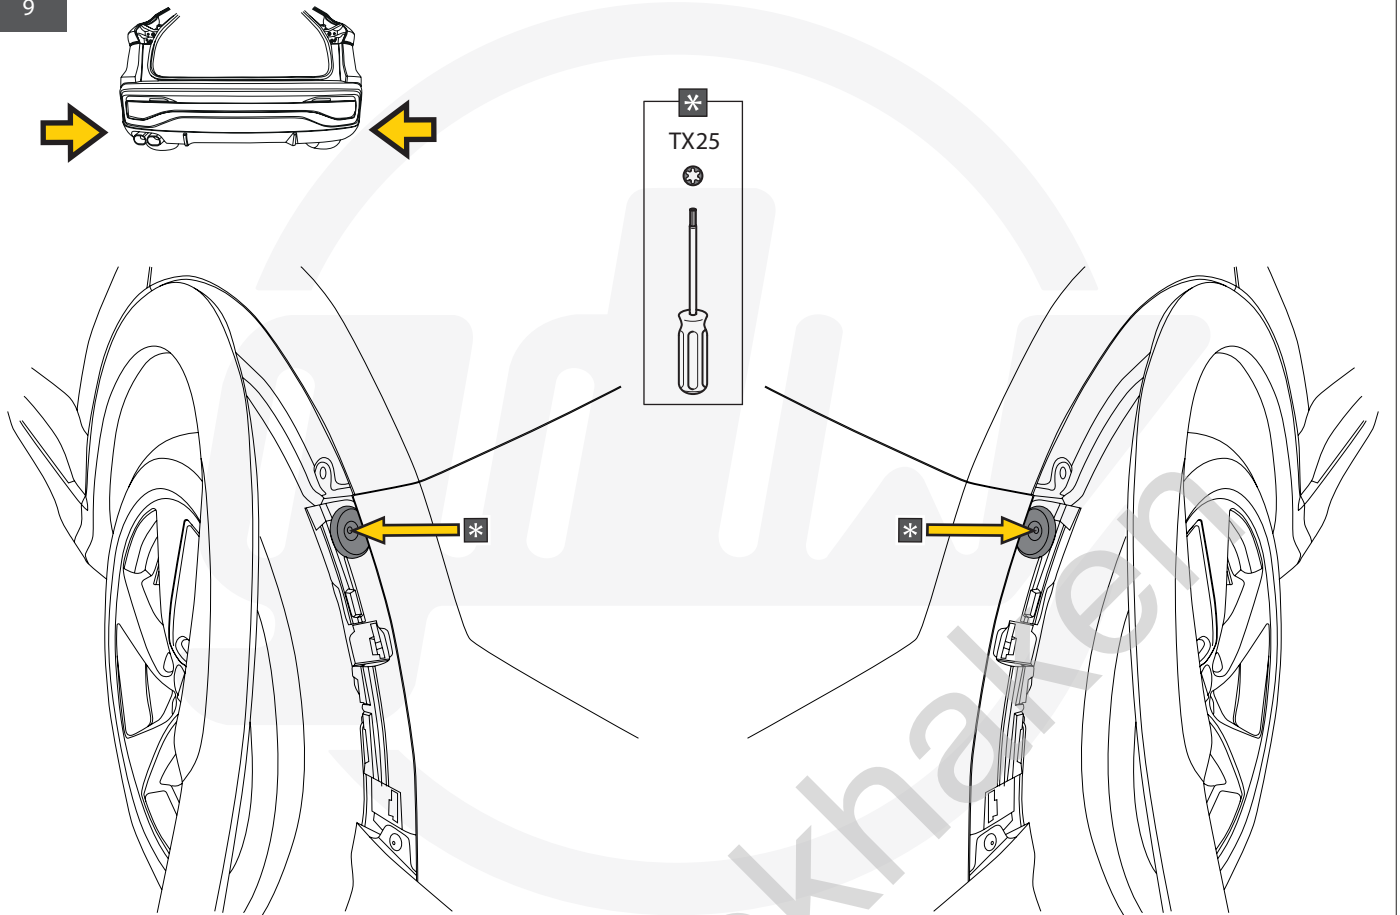

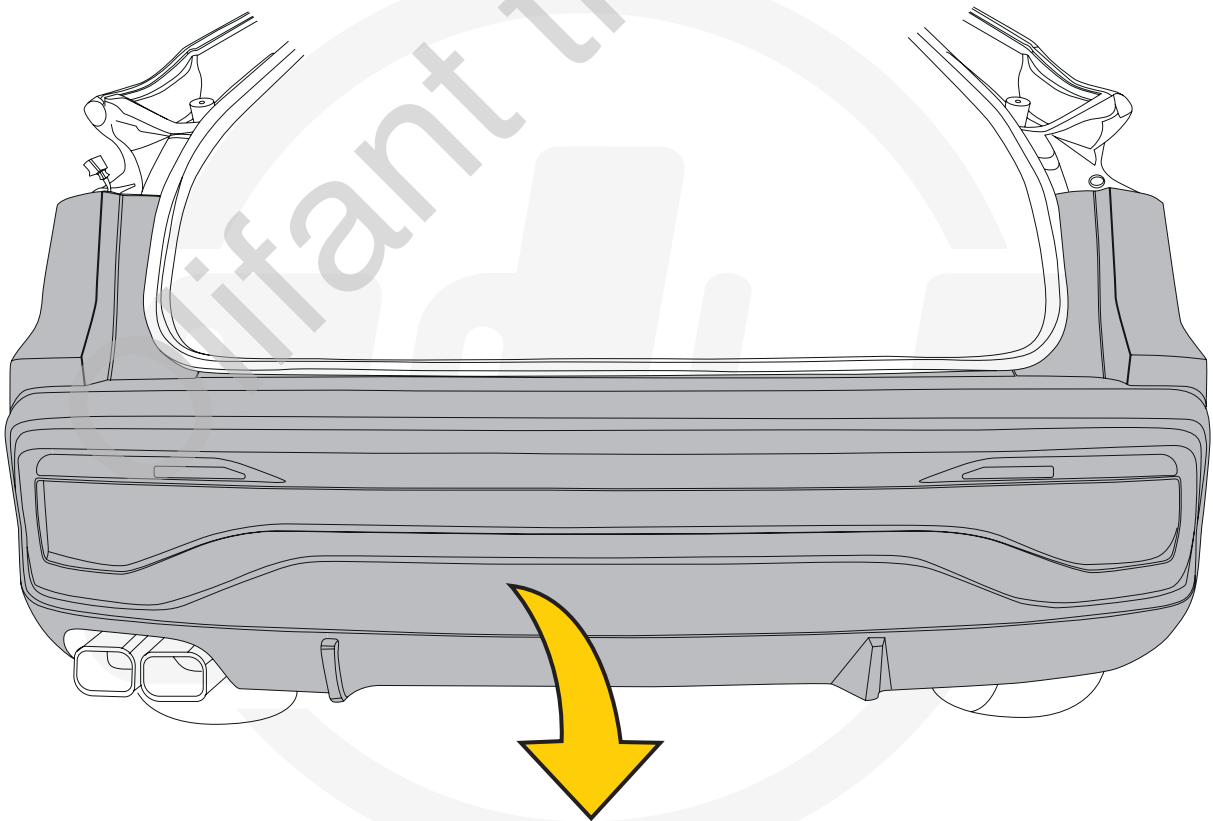
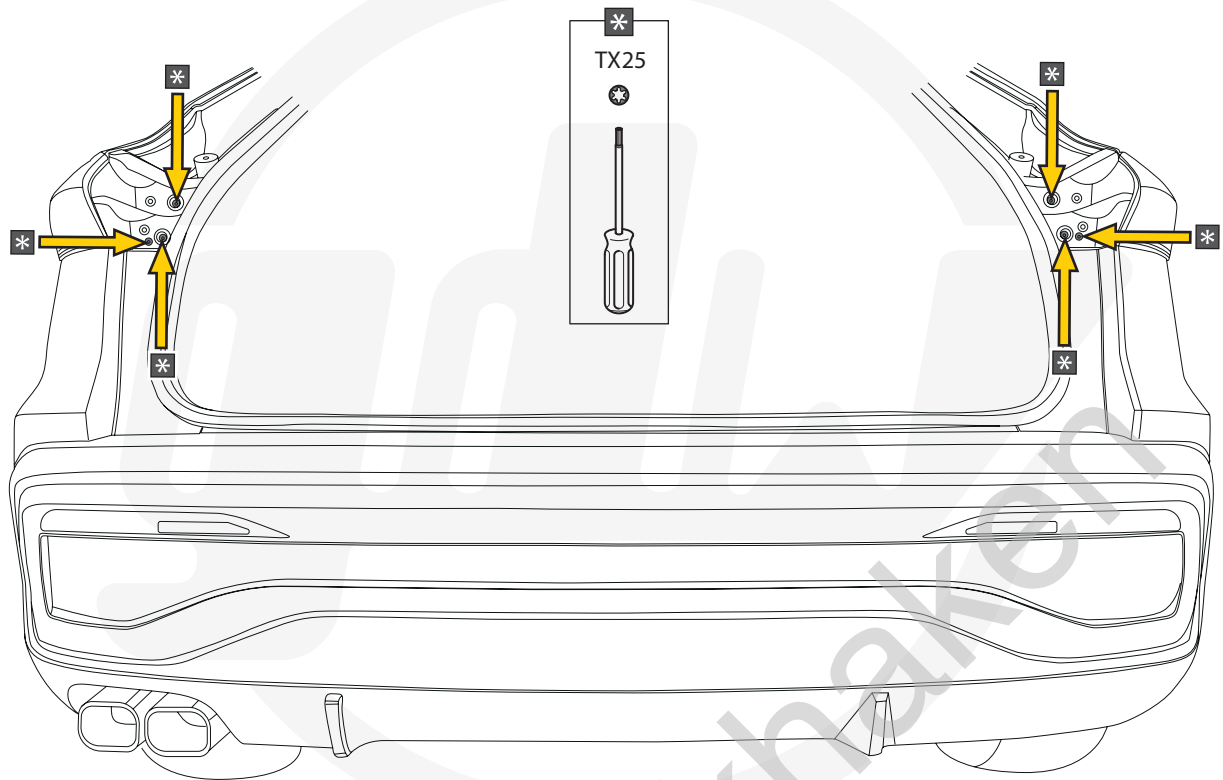


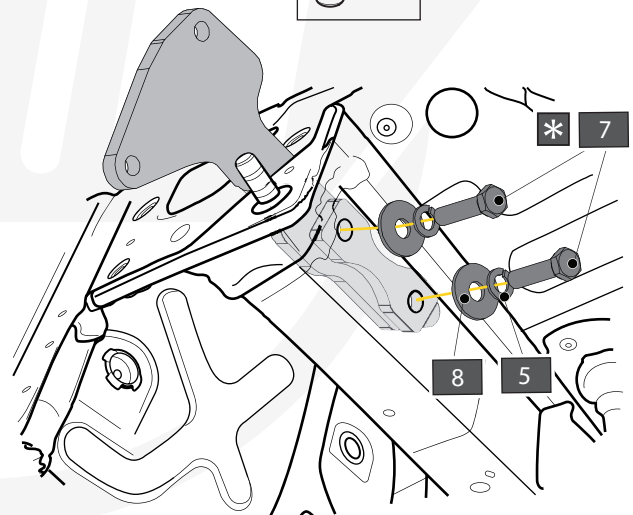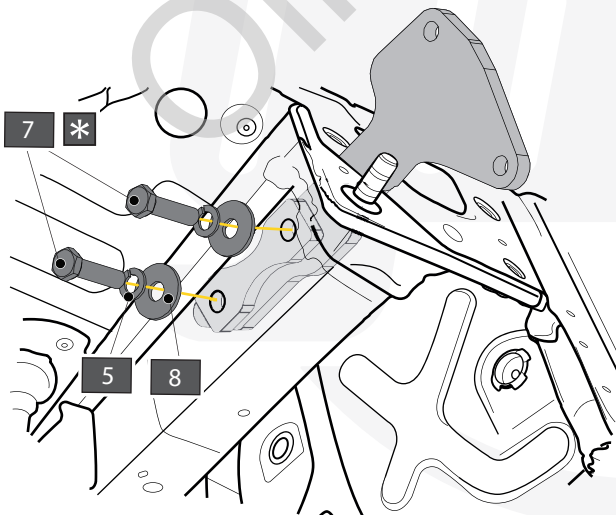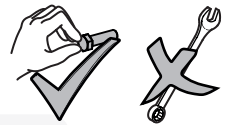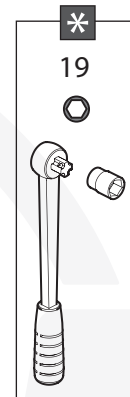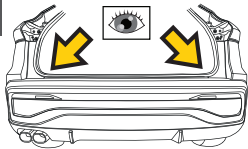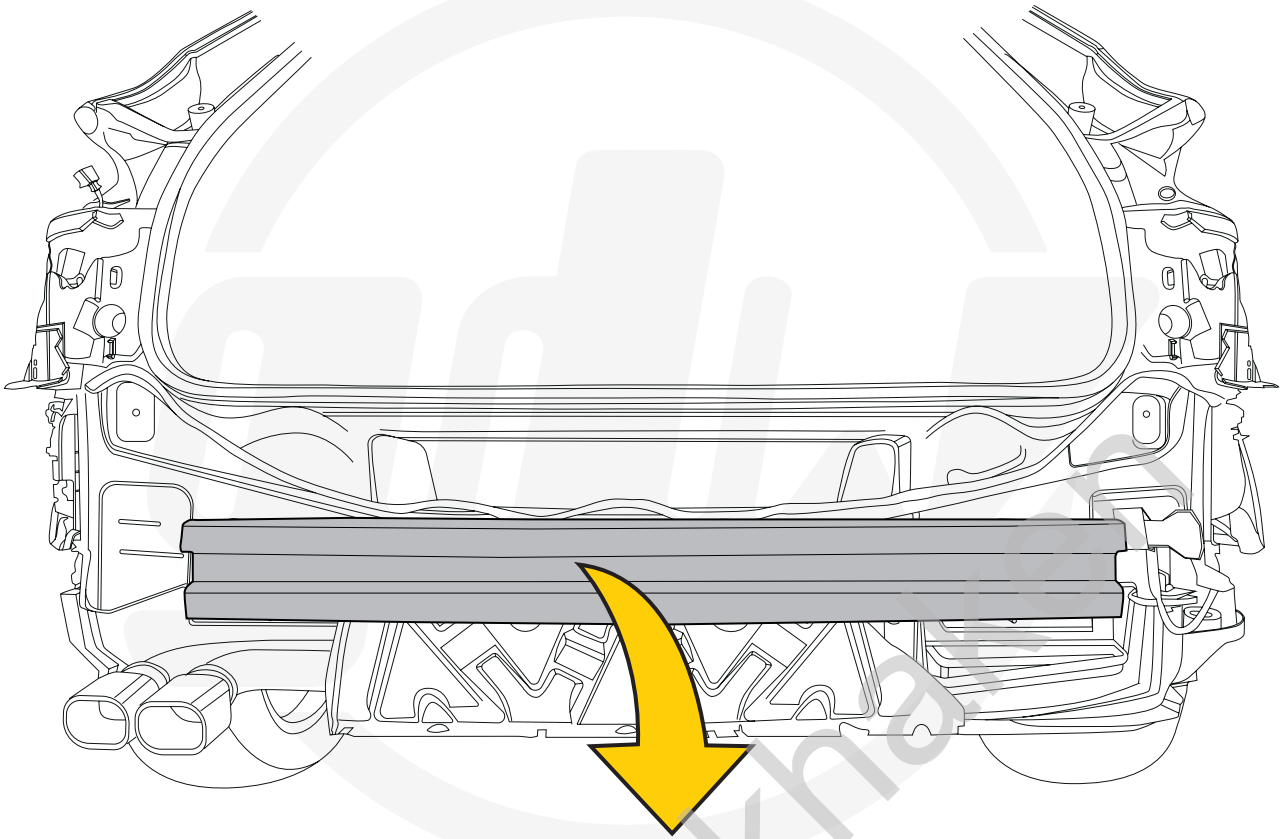

15

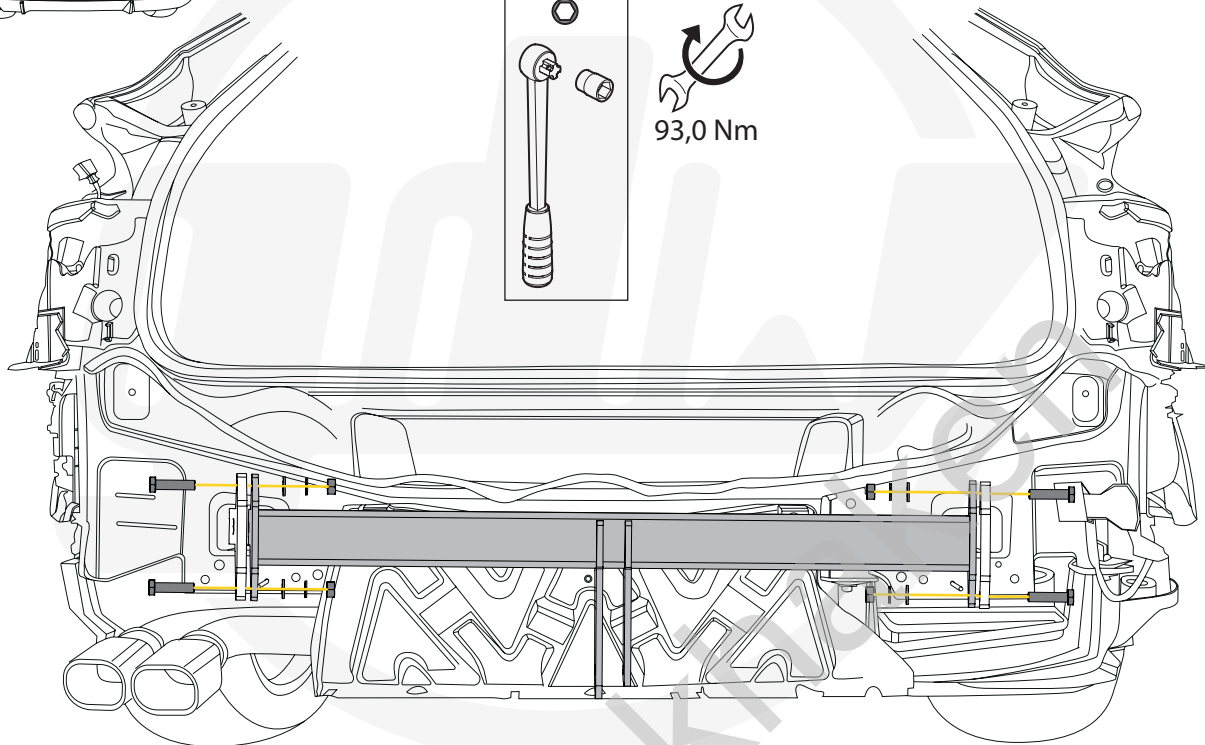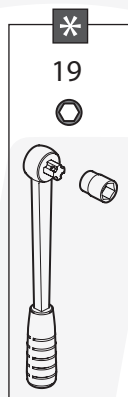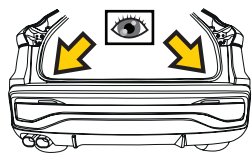

16

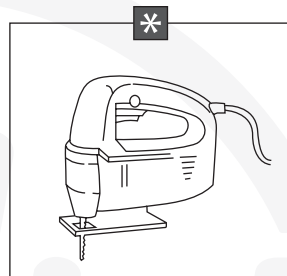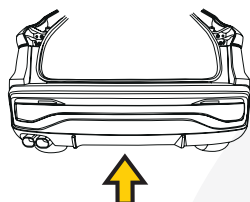

NO CUTOUT

