




TREKHAKEN • ATTELAGES • ANHÄNGERVORRICHTUNGEN • TOWBARS • ENHANCES • ANHÆNGERTRÆK • GANCI DI TRAINO

Montagehandleiding | instructions de montage | Einbauanleitung | Mounting instruction
Instrucciones de montaje | monteringsvejledning | istruzioni di montaggio




Audi A6 Avant e-tron (type GH5)

07/'24-

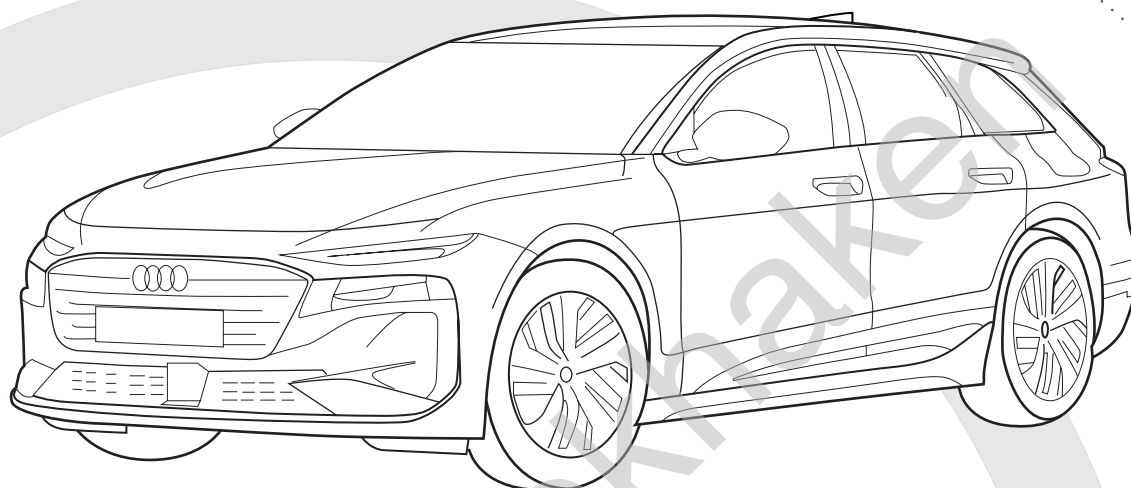



Audi A6 Sportback e-tron (type GHA)


07/'24-


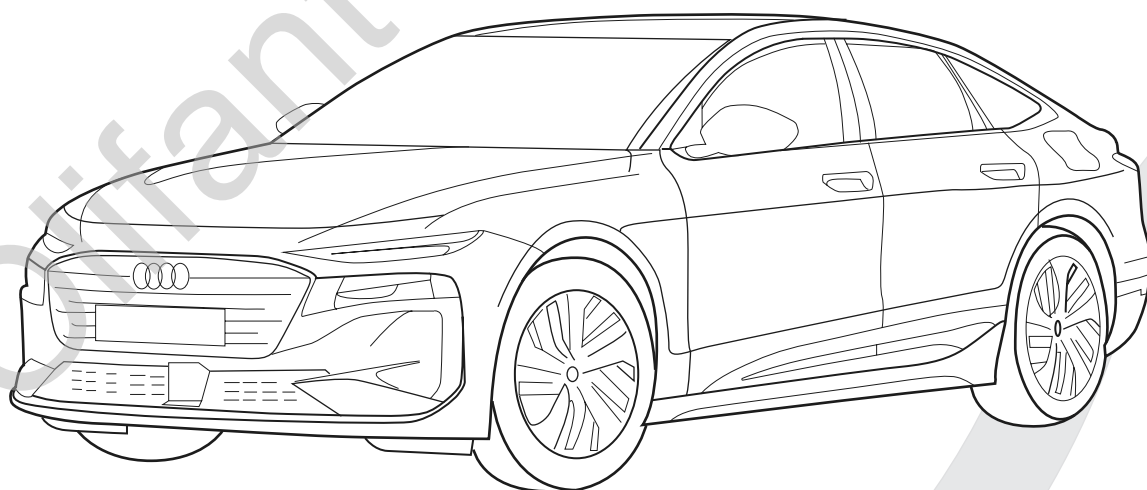





SCAN FOR THE
LATEST VERSION

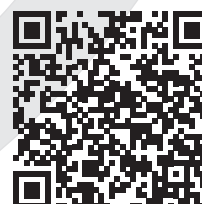

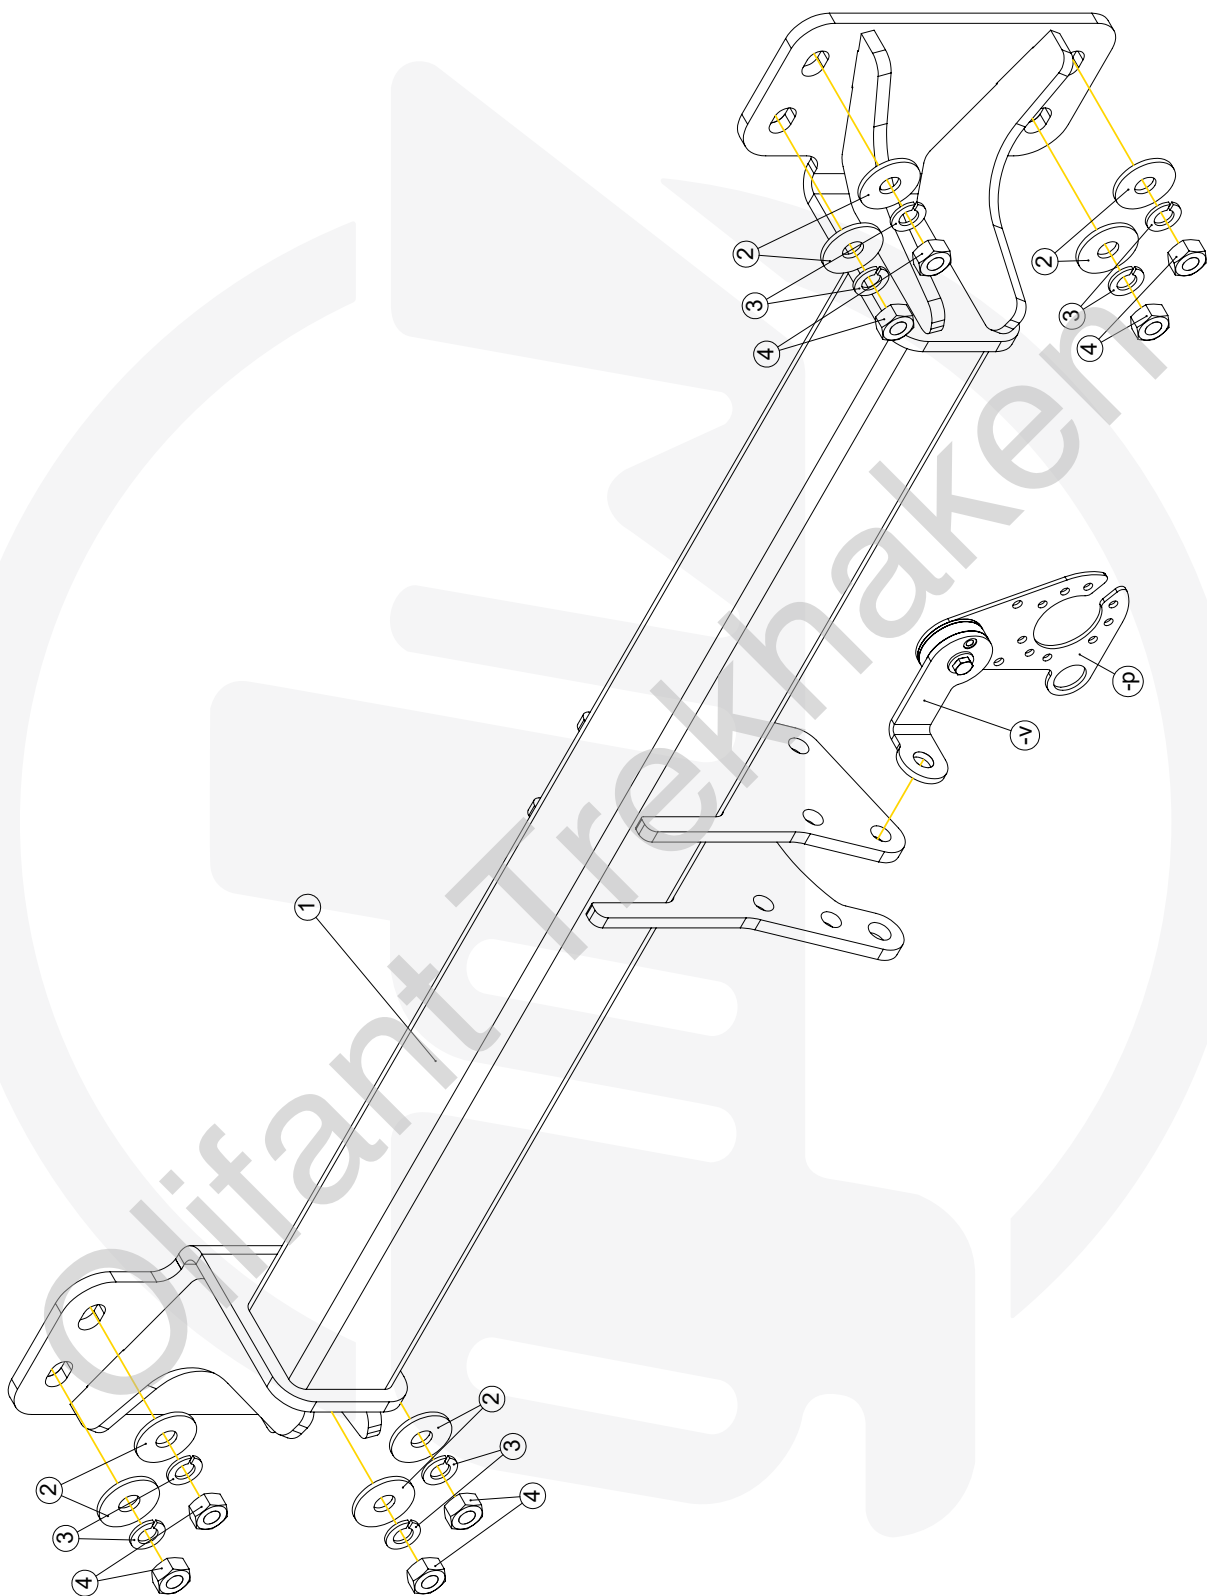


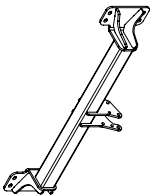1		X1	GDW REF. 2.972160
2		X8	DIN 9021-13X37X3
3		X8	GROWER VSK-M12
4		X8	DIN 934-M12X1,5
-V		X1	GDW REF. 908.110

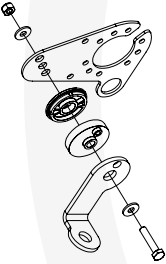
-P		X1	GDW REF. P46
↑		X1	DIN985-M6
↑		X2	6,2 X 15,4 X 1,6 (NYLON)
↑		X1	GDW REF. 718.16.002
↑		X1	GDW REF. 718.16.003
↑		X1	GDW REF. 908.094
↑		X1	DIN933-M6 X 30

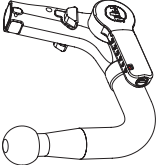

Geleverd met - Livré avec - Delivered with Geliefert mit - Elementos adjuntos-Leveres med			
	X1	REF. 960.V0806	
↑ 	X1	GDW REF. 740.200	
	X1	GDW REF. 912.003	
↑ 	X1	GDW REF. 740.112	
↑ 	X1	GDW REF. 740.111	
	X1	GDW REF. 740.12X X=LAST NUMBER ON KEY	
	X1	GDW REF. 718.15.001	
	X1	GDW REF. SYST60-10	
↑ 	X3	ISO6921 M12 X 110 -10,9 N-ZNF	
↑ 	X3	W0263-M12 - KL10	





1


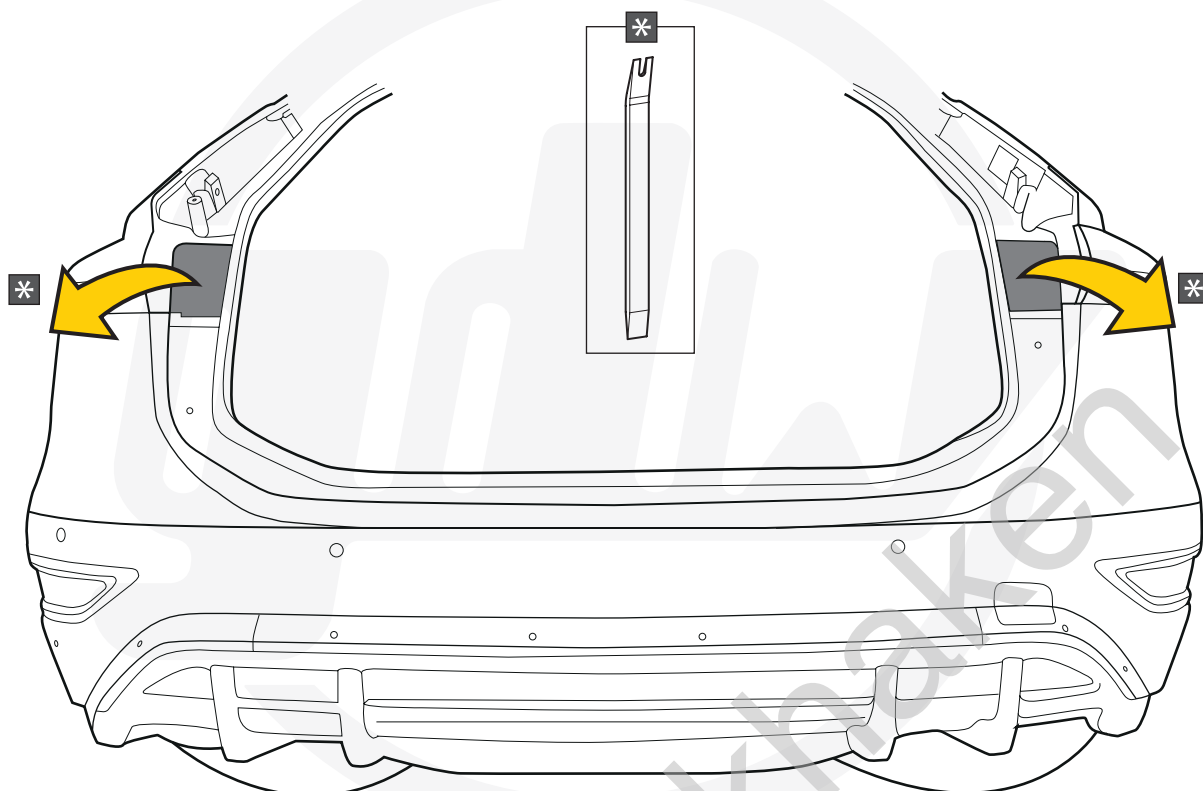






2

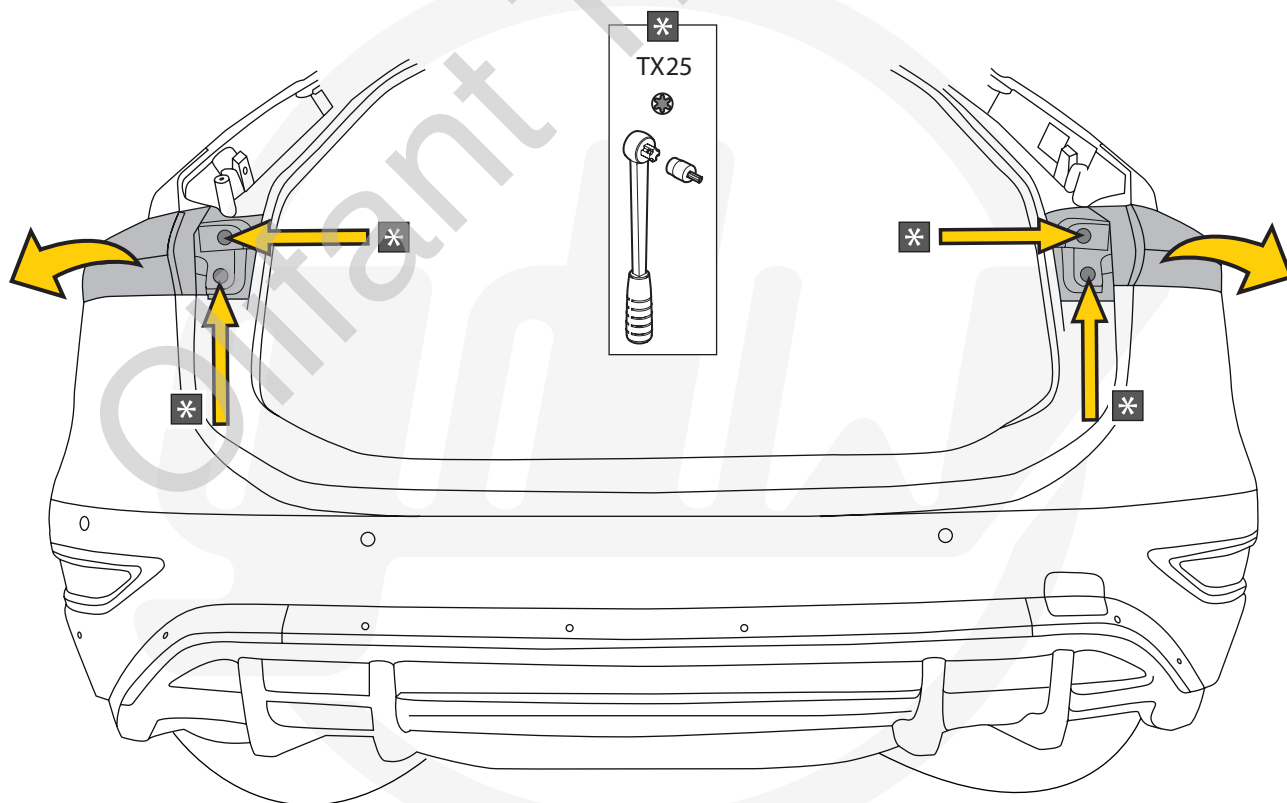


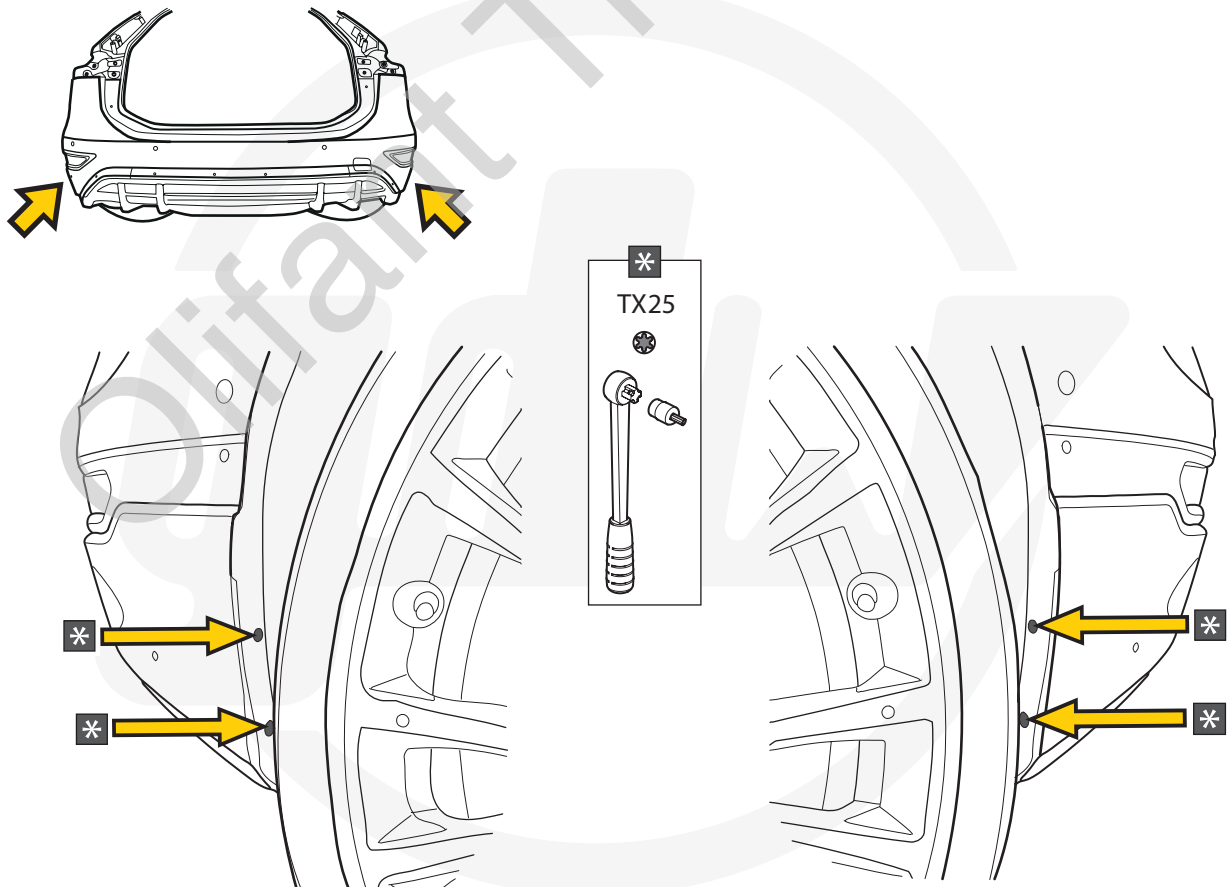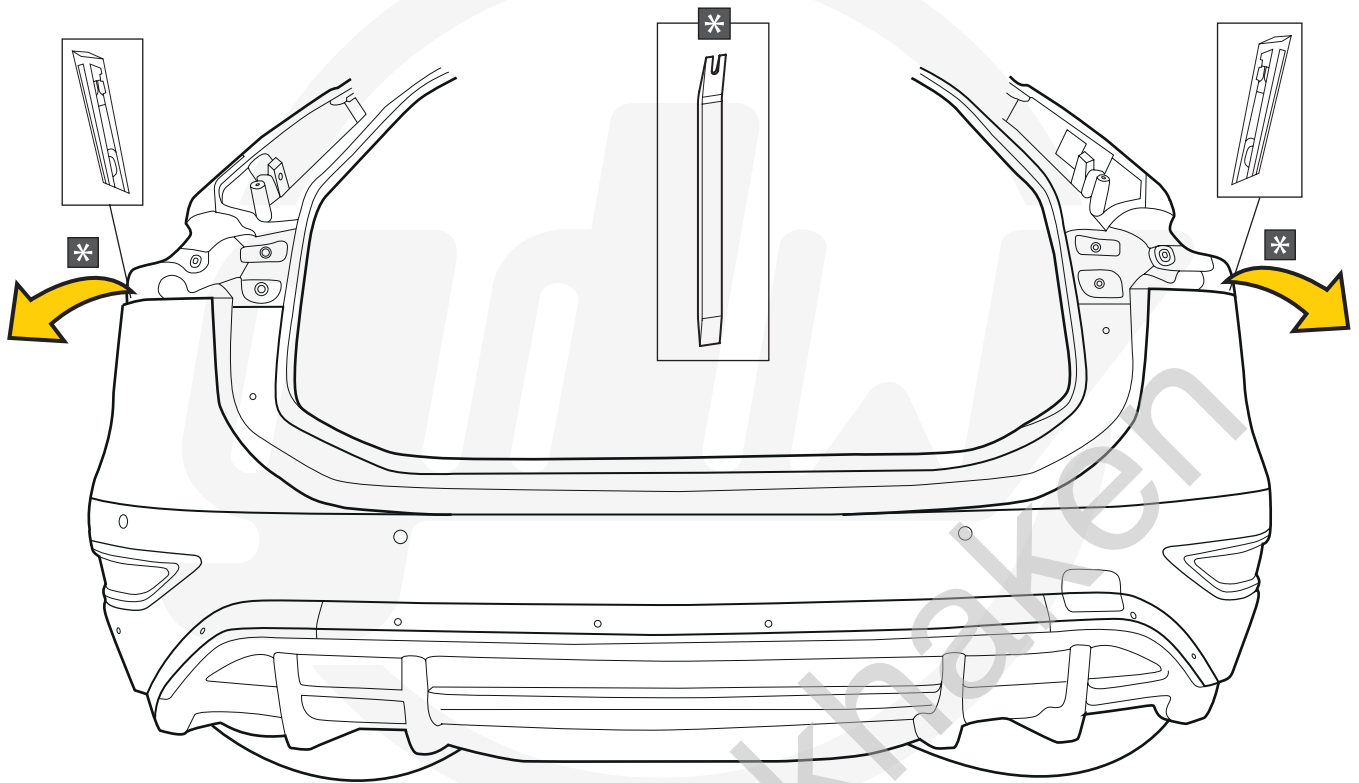

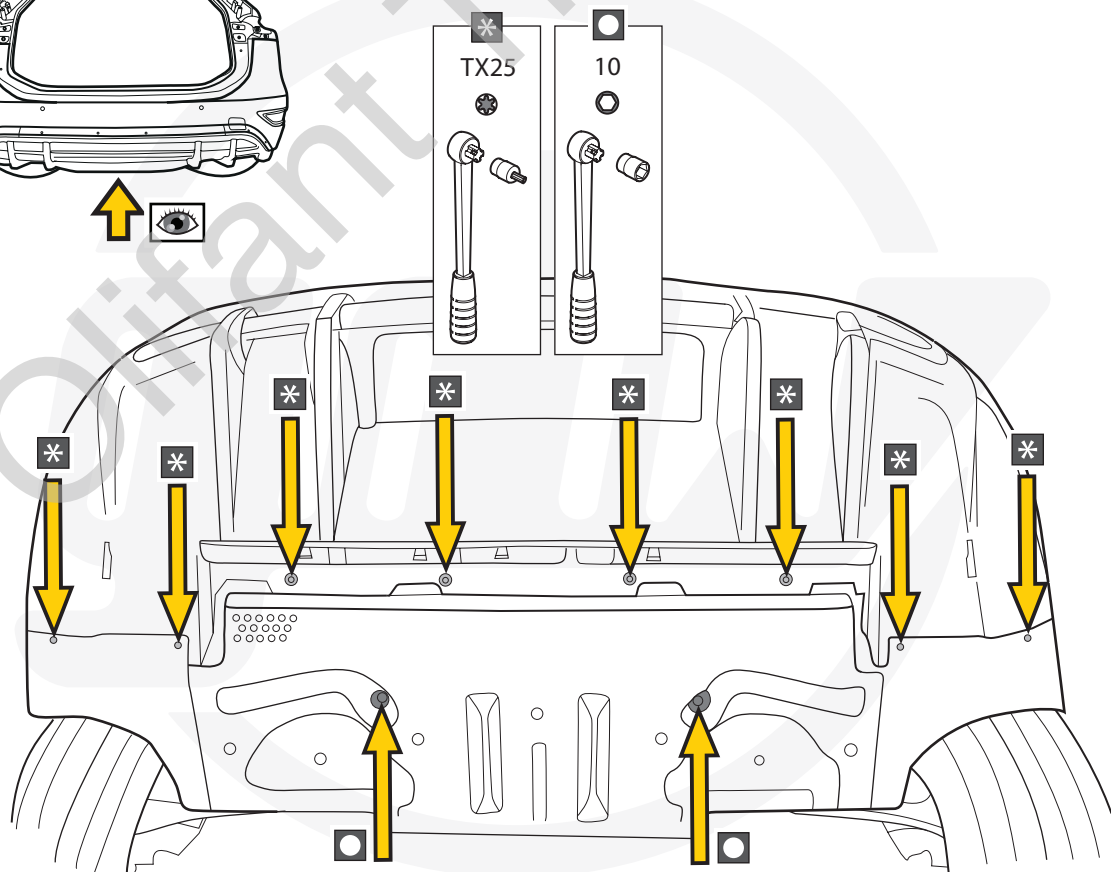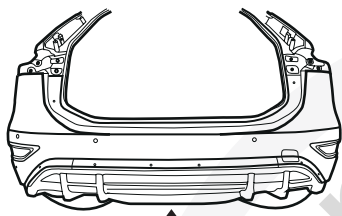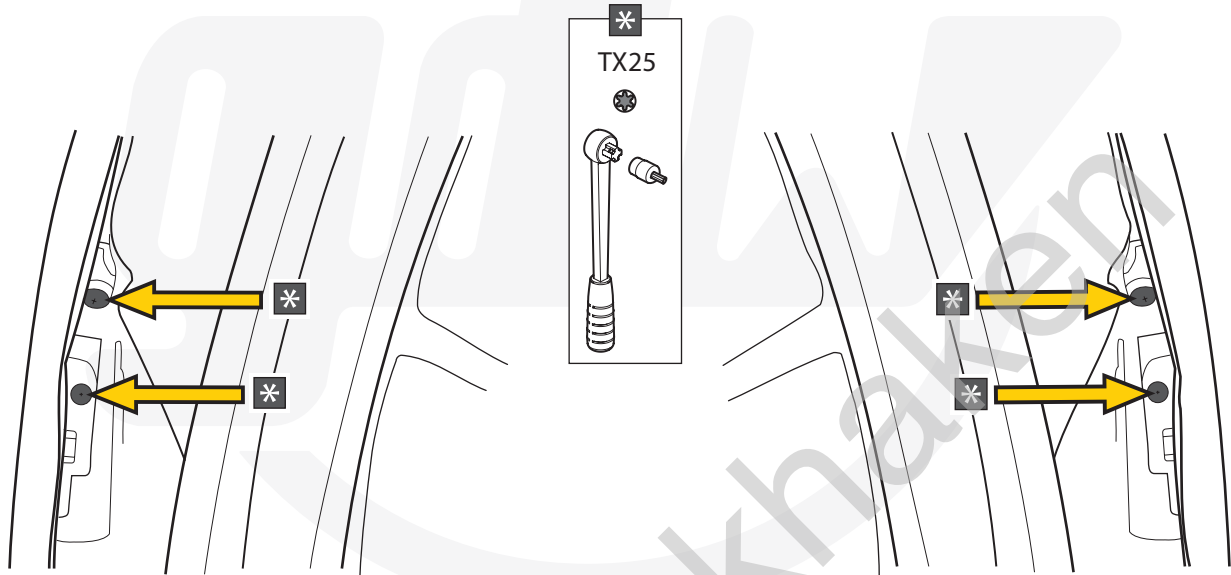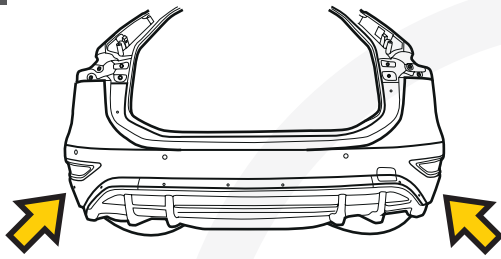

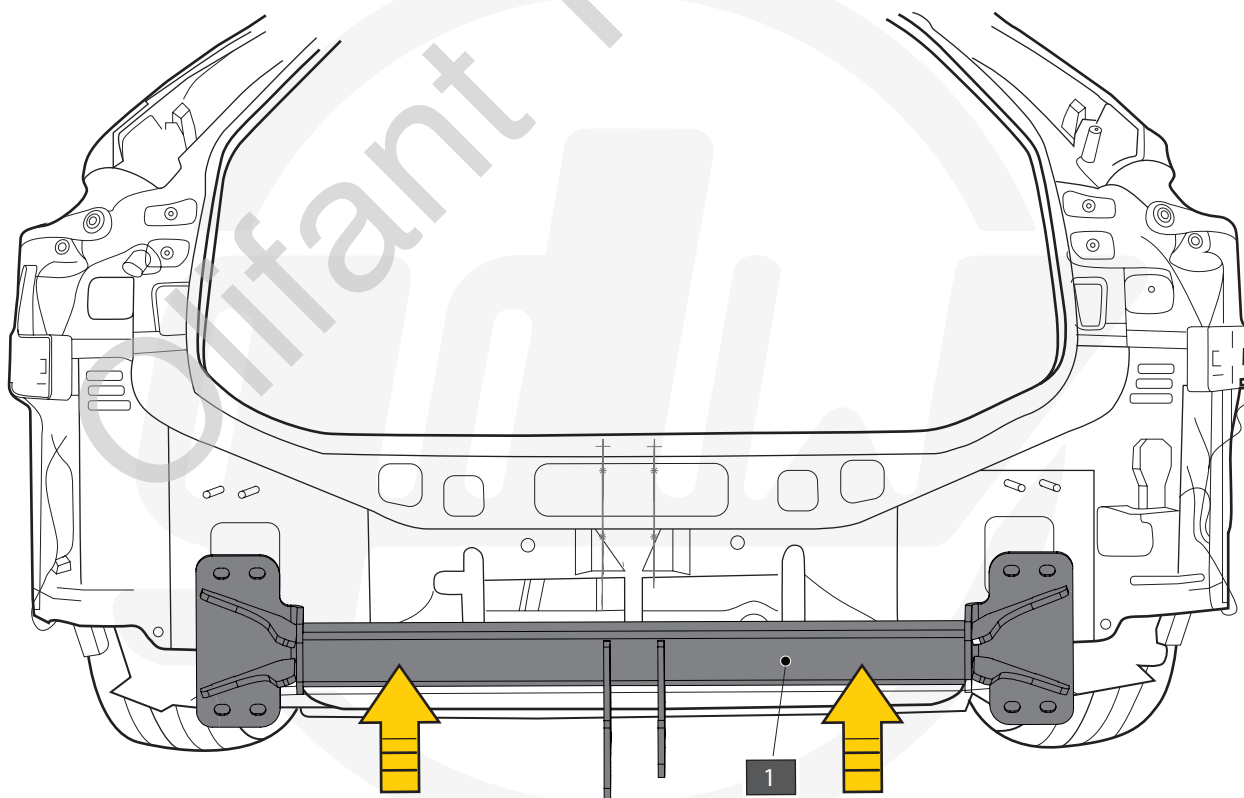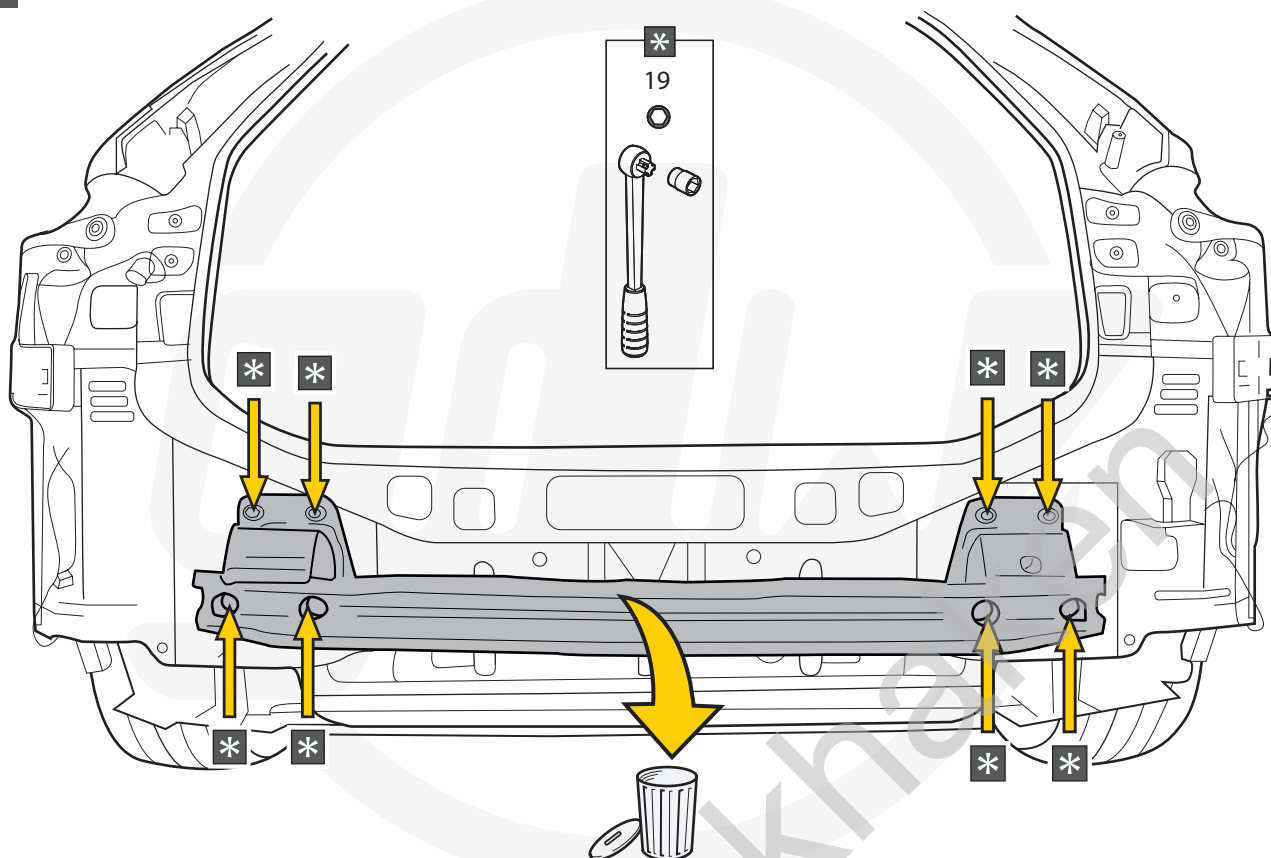

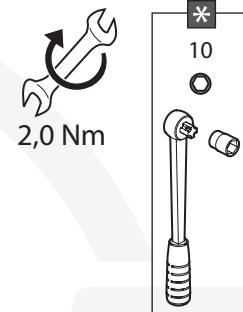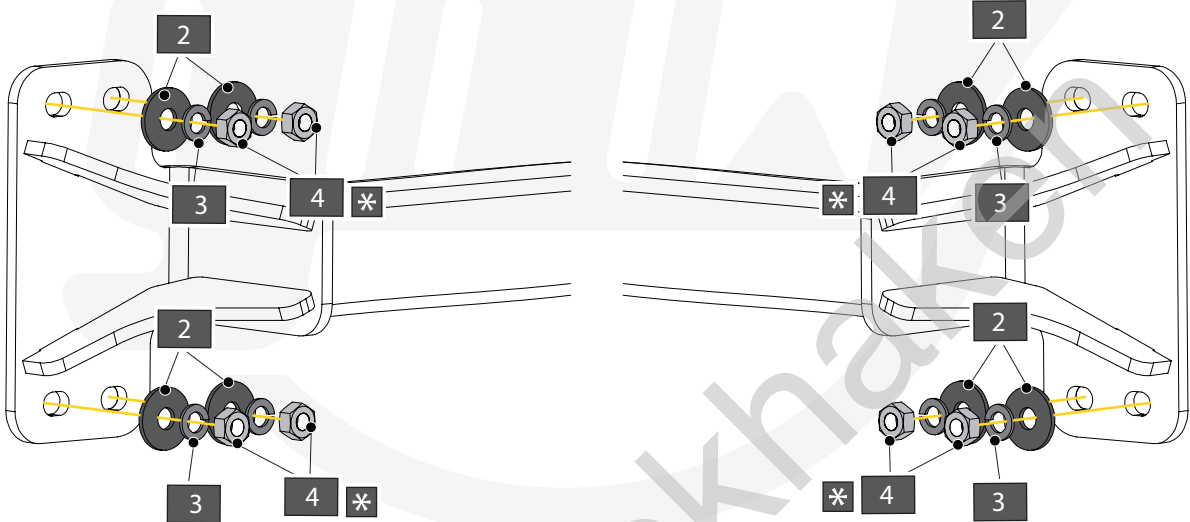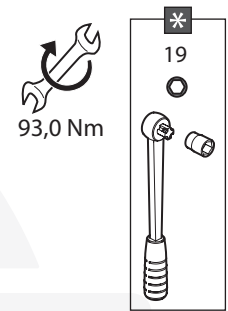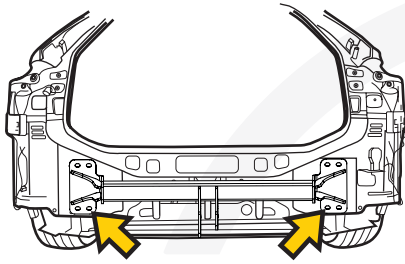

A		X1	GDW REF. 908.110
B		X1	DIN985-M6
C		X2	6,2 x 15,4 x 1,6 (NYLON)
D		X1	GDW REF. 718.16.002
E		X1	GDW REF. 718.16.003
F		X1	GDW REF. 908.094
G		X1	DIN933-M6 x 30

