


Dacia Sandero (+LPG)
Dacia Sandero Stepway

(2020 - →)
(2020 - →)

D-086


- PL** **Zaczep Kulowy** Instrukcja montażu i eksploatacji
- GB** **Tow bar** Installation and operating instructions
- D** **Die Anhängerkupplung** Montage- und Gebrauchsanleitung
- ES** **Gancho de remolque** Las instrucciones de instalación y de operación
- RU** **Фаркоп** Инструкция по установке и эксплуатации ТСУ
- FR** **Attelage** Notice de montage et d'utilisation
- IT** **Gancio traino** Istruzioni di montaggio
- CZ** **Tažné zařízení** Návod na montáž a použití
- RO** **Cârlig de remorcare** Instrucția de montaj și exploatare
- SE** **Dragkulan** Monterings- och bruksanvisningar.

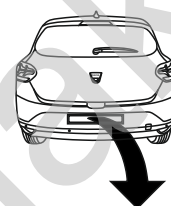

YES ☒ NO ☐



YES ☒ NO ☐

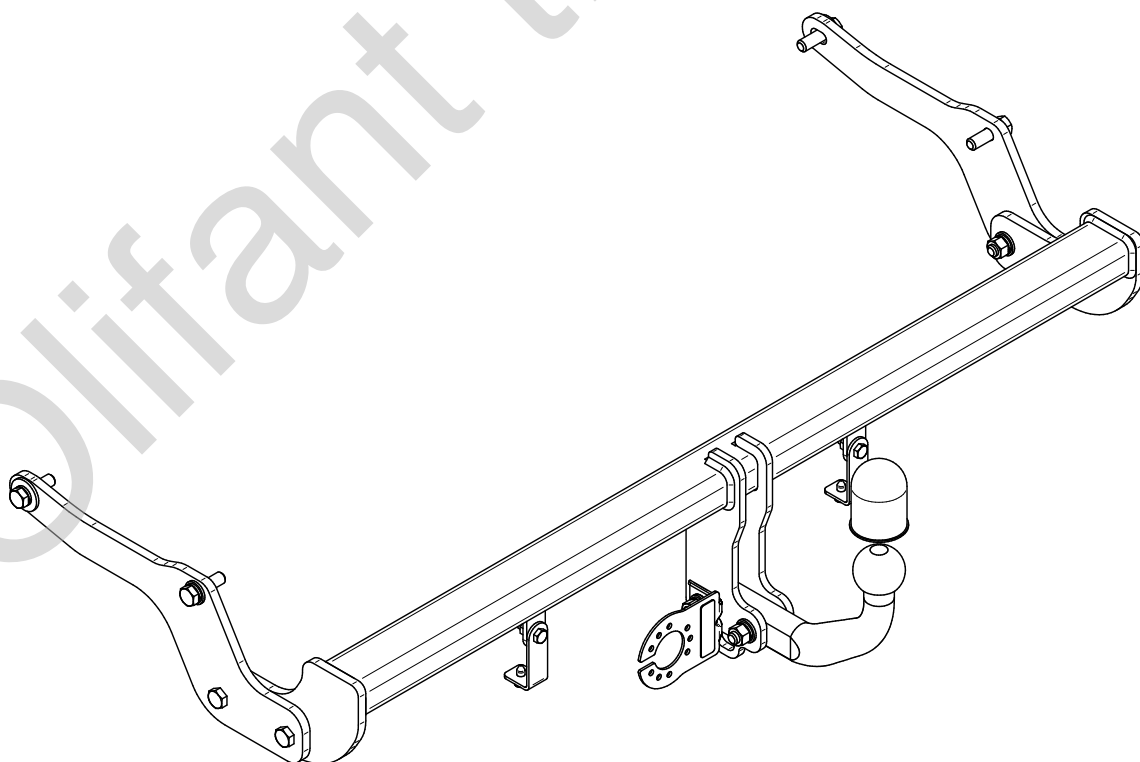


Typ: D-086

A50-X

E20 55R-02 6296

D=7,3kN

S=80 kg

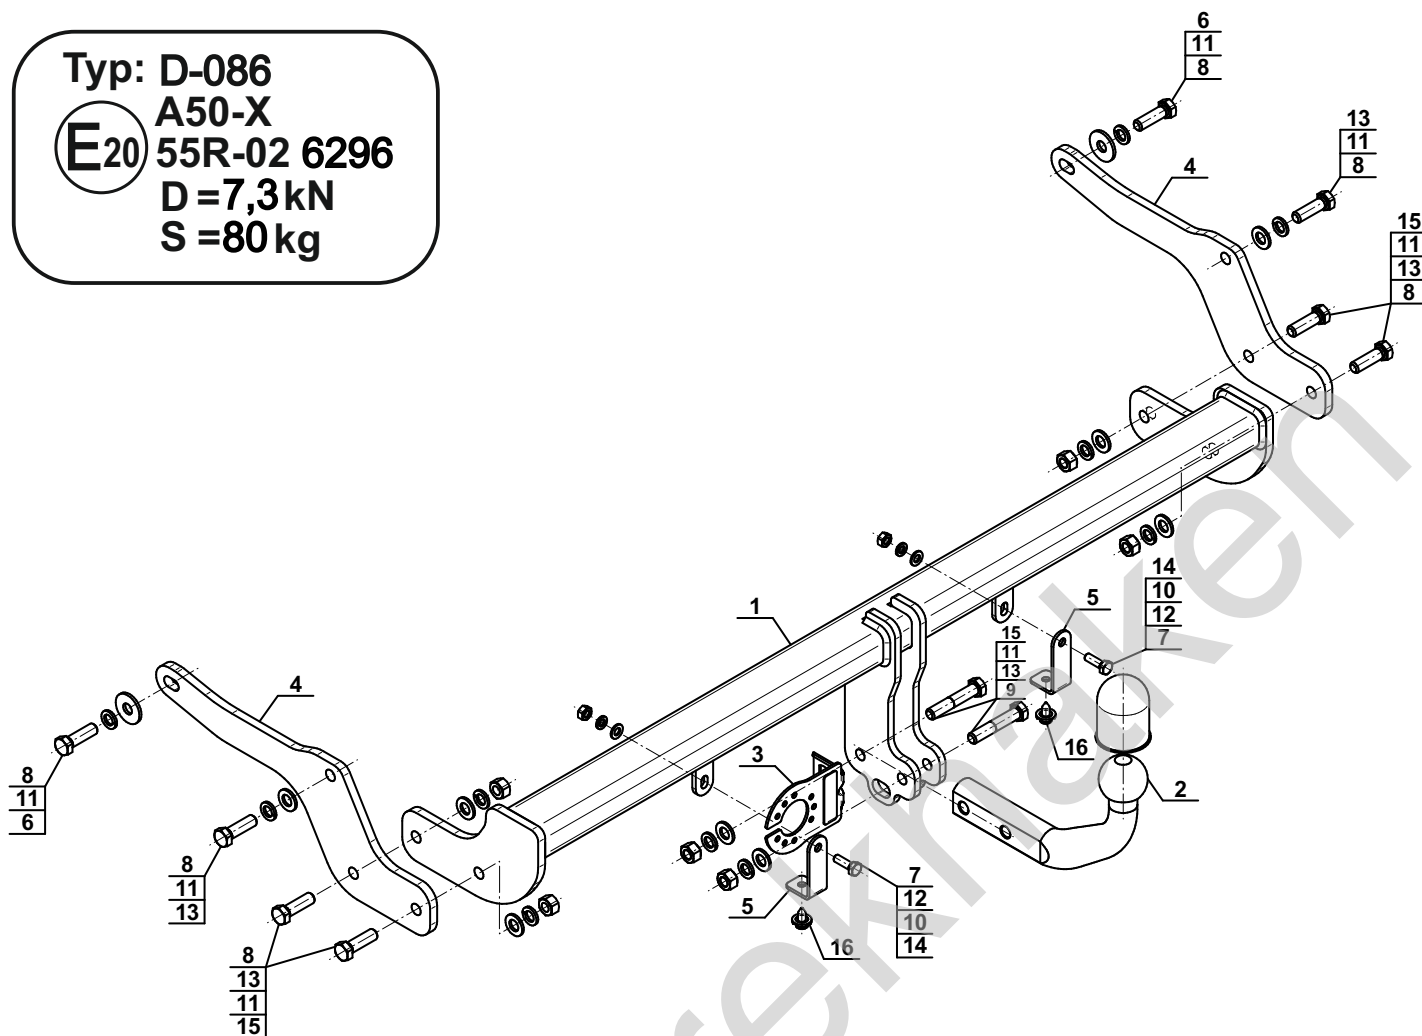


1		x1
2		x1
3		x1
4		x2
5		x2

6		Ø34/Ø12,5x3	x2
7		M8x25 (PN/M-82105) (8.8)	x2
8		M12x40 (PN/M-82105) (8.8)	x8
9		M12x65 (PN/M-82101) (8.8)	x2
10		Ø8,2	x2
11		Ø12,2	x10
12		Ø8,4	x2
13		Ø13,0	x8
14		M8 (8)	x2
15		M12 (8)	x6
16		Ø20/Ø8x22 (CH-014.18)	x2




8.8	
M6 - 10 (Nm)	M12 - 85 (Nm)
M8 - 25 (Nm)	M14 - 135 (Nm)
M10 - 50 (Nm)	M16 - 200 (Nm)


1

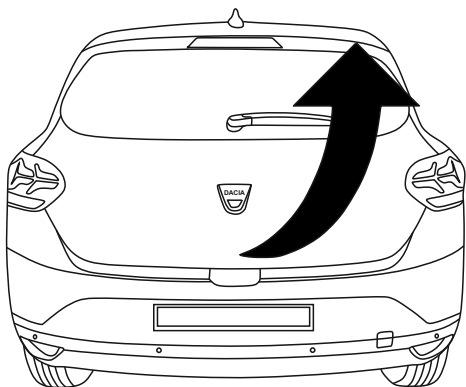


2

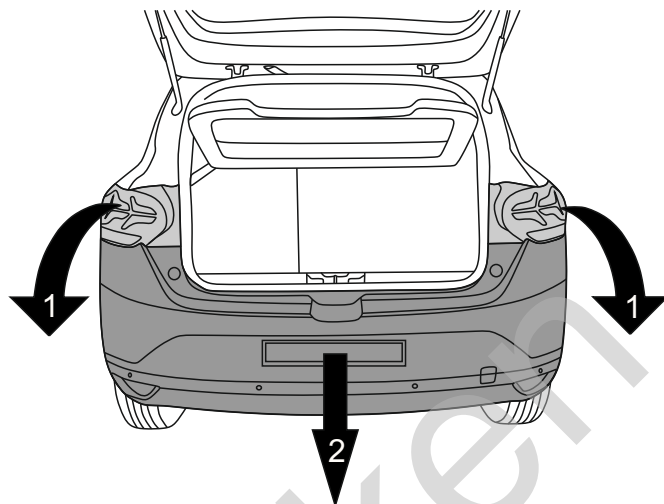


3

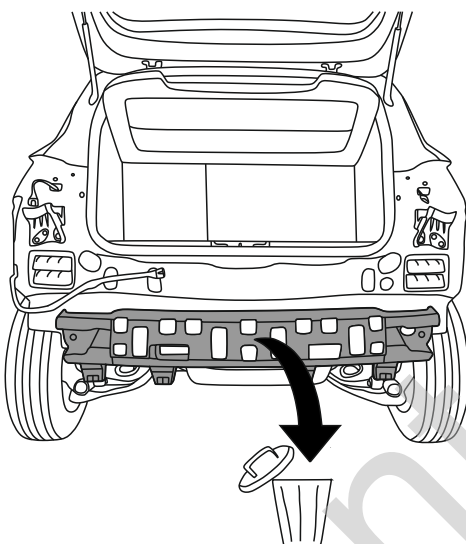


4

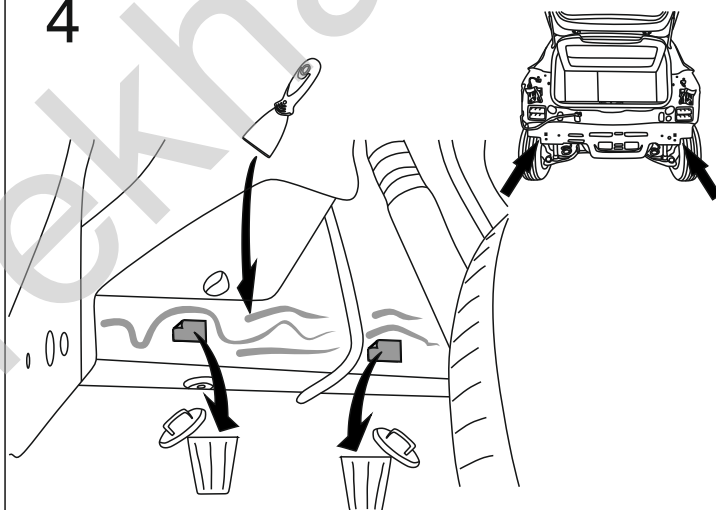


5

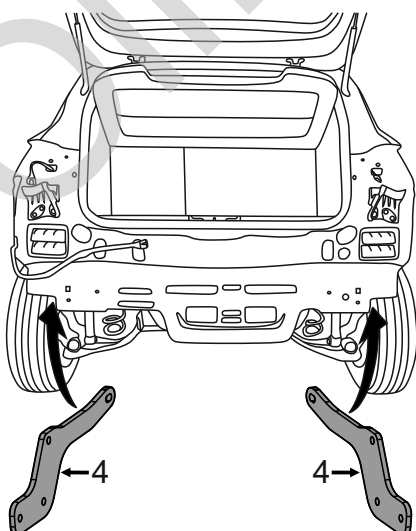


6

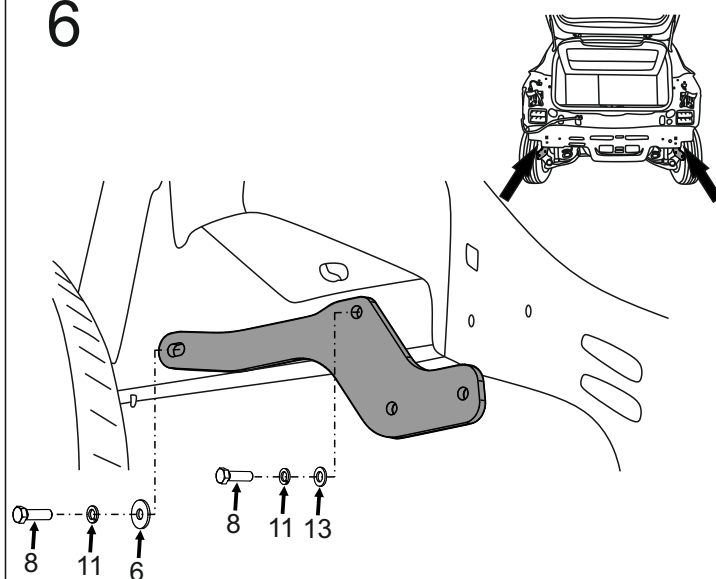


7

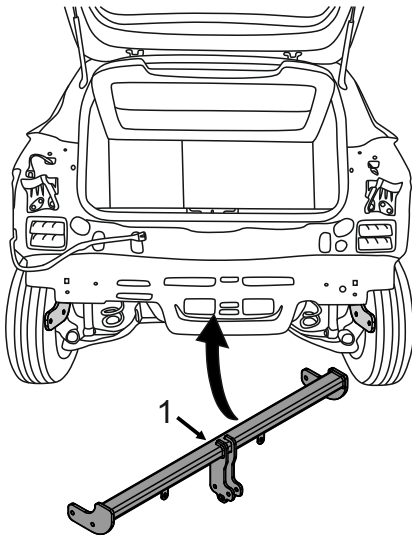

8

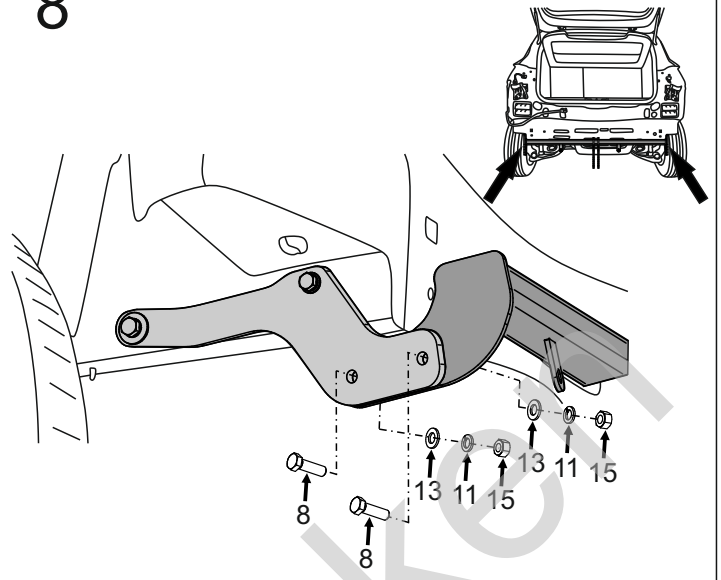


9

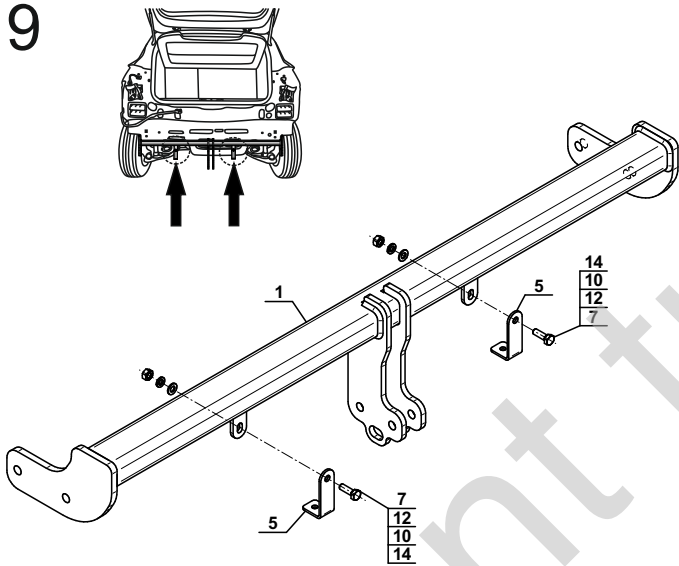


10

(mm)

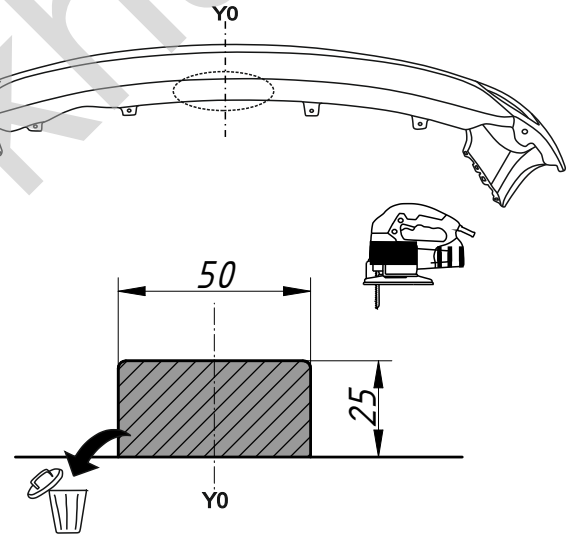


11

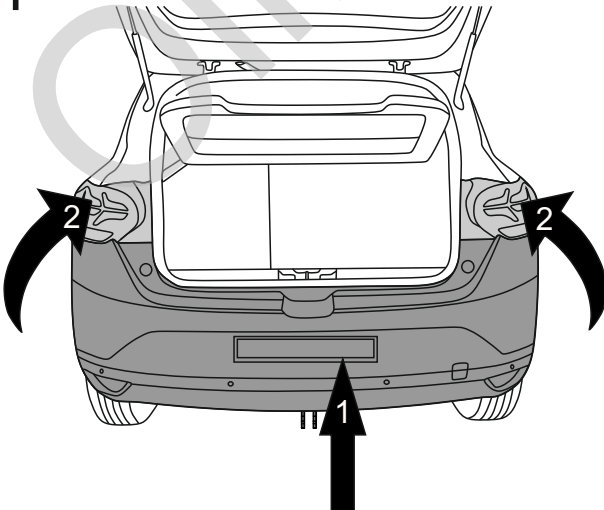


12

(mm)

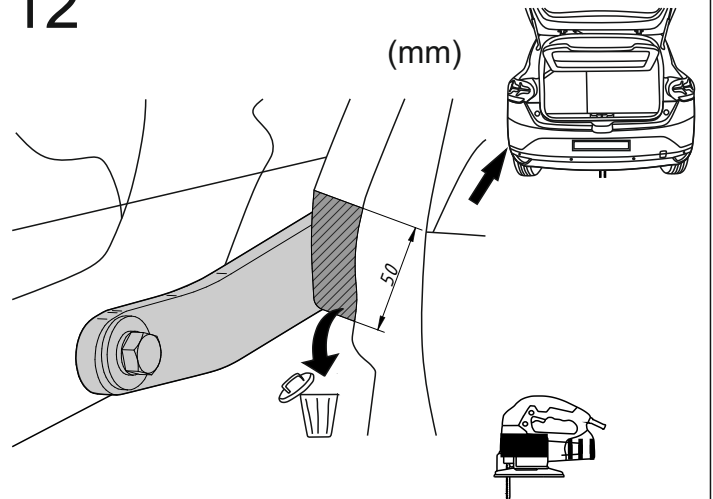

13

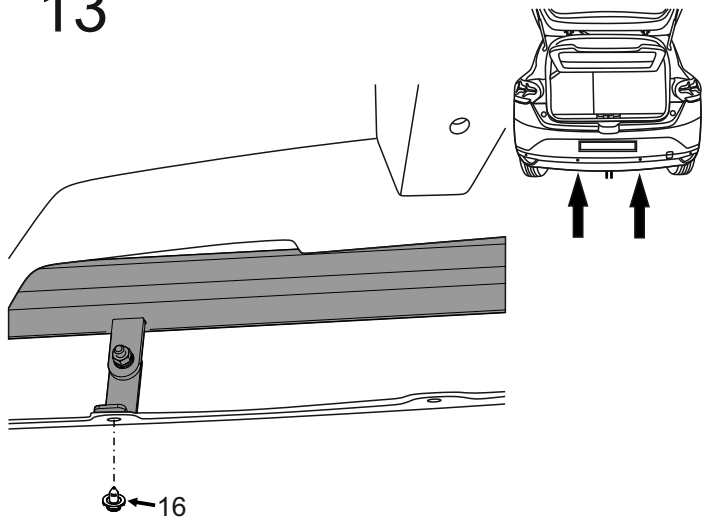

14

