


Honda Civic (5D)



(2006 - 2011)

H-031

- PL** **Zaczep kulowy** Instrukcja montażu i eksploatacji
- GB** **Tow bar** Installation and operating instructions
- D** **Die Anhängerkupplung** Montage- und Gebrauchsanleitung
- ES** **Gancho de remolque** Las instrucciones de instalación y de operación
- RU** **Фаркоп** Инструкция по установке и эксплуатации ТСУ
- FR** **Attelage** Notice de montage et d'utilisation
- IT** **Gancio traino** Istruzioni di montaggio
- CZ** **Tažné zařízení** Návod na montáž a použití
- RO** **Cârlig de remorcare** Instrucția de montaj și exploatare
- SE** **Dragkulan** Monterings- och bruksanvisningar.

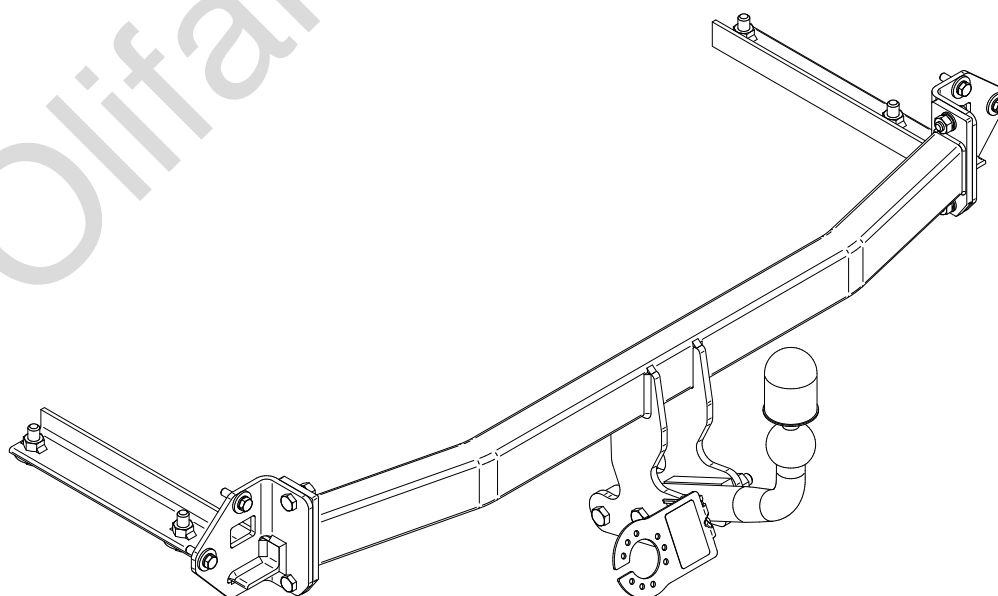

Typ: H-031
A50-X
e20 0383-00
D=8,8kN
S=75kg

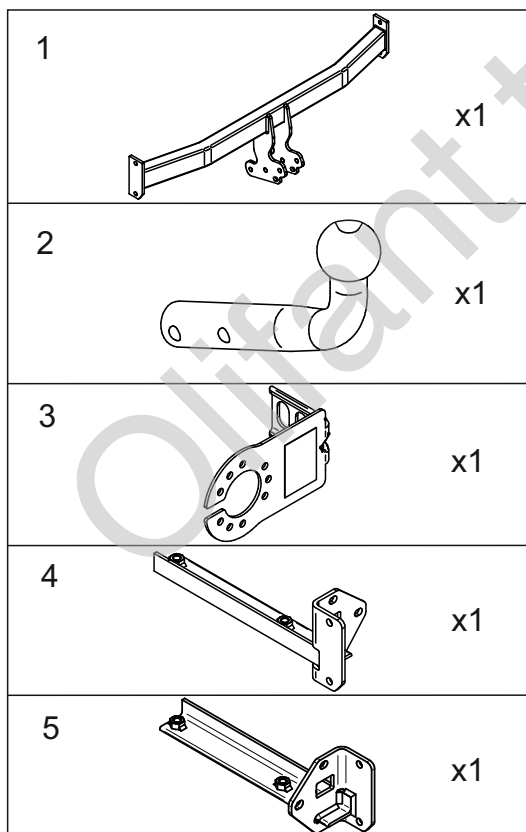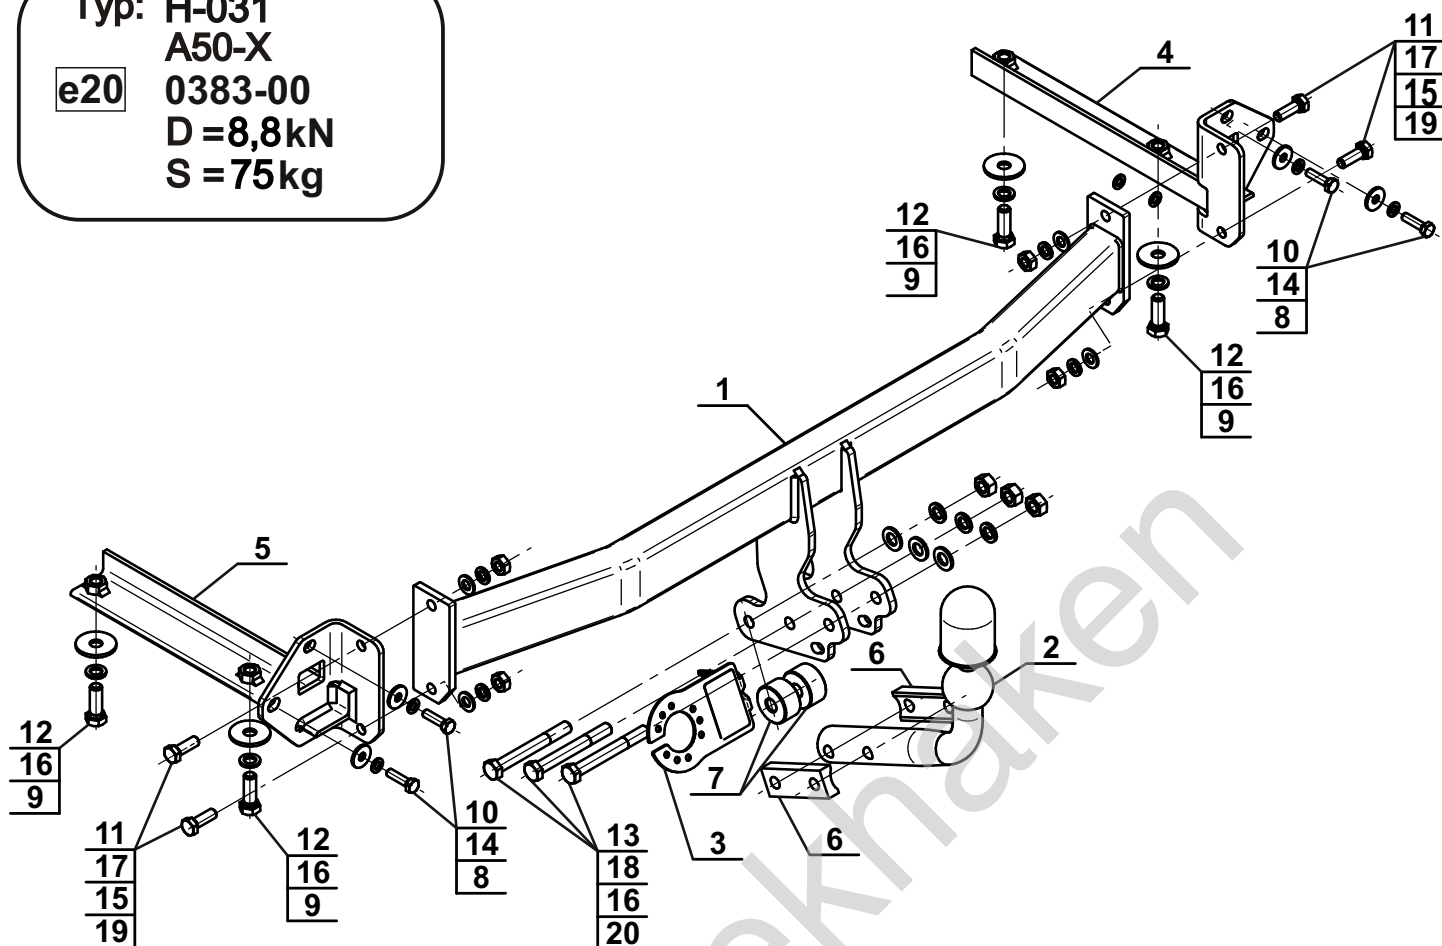


6		x2
7	Ø40/Ø12,5x21,5	x2
8	Ø24/Ø8,5x2,5	x4
9	Ø40/Ø12,5x2,5	x4
10	M8x30 (PN/M-82105) (8.8)	x4
11	M10x30 (PN/M-82105) (8.8)	x4
12	M12x35 (PN/M-82105) (8.8)	x4
13	M12x100 (PN/M-82101) (8.8)	x3
14	Ø8,2	x4
15	Ø10,2	x4
16	Ø12,2	x7
17	Ø10,5	x4
18	Ø13,0	x3
19	M10 (8)	x4
20	M12 (8)	x3




8.8	
M6 - 10 (Nm)	M12 - 85 (Nm)
M8 - 25 (Nm)	M14 - 135 (Nm)
M10 - 50 (Nm)	M16 - 200 (Nm)


1

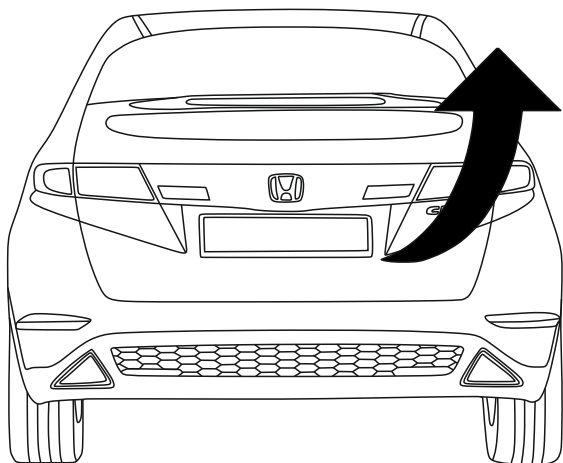


2

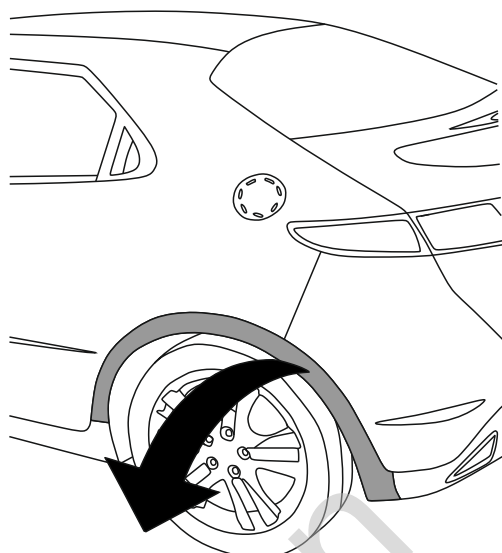


3

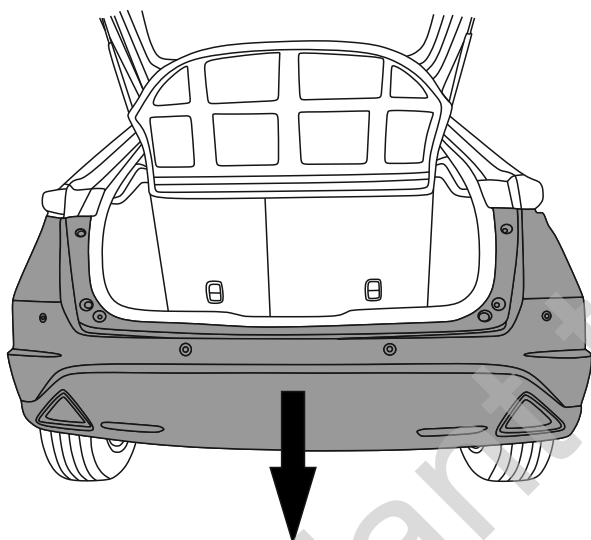


4






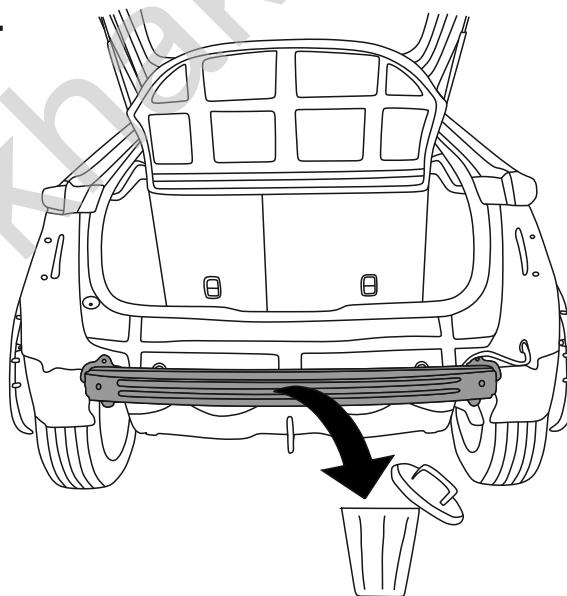


5

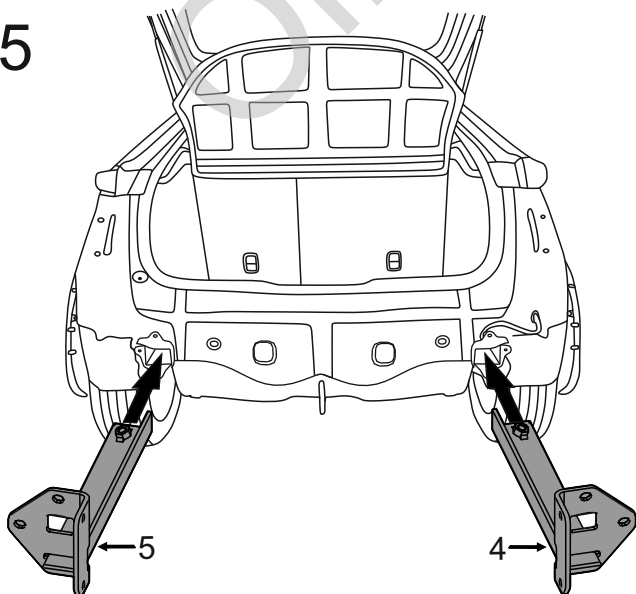


6

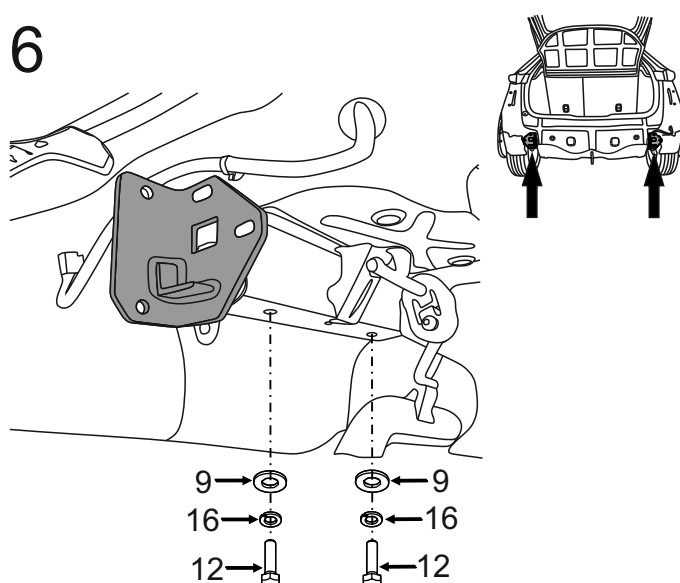

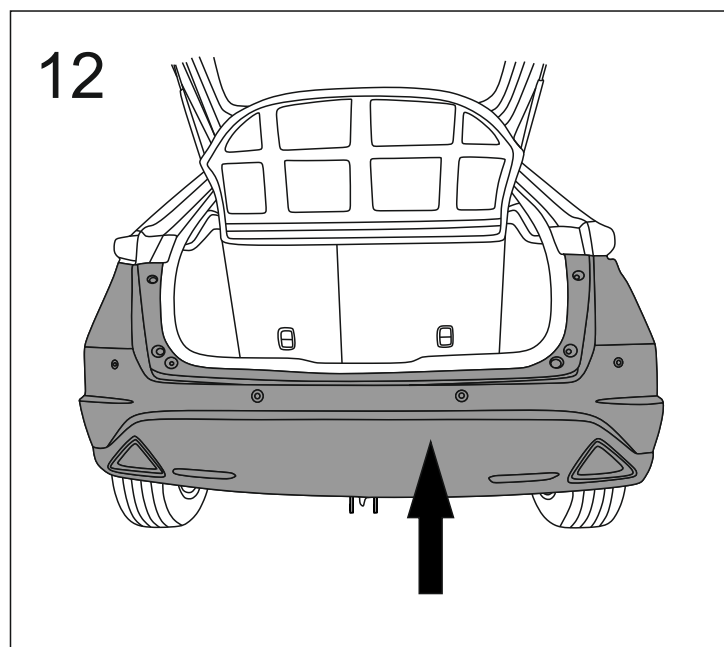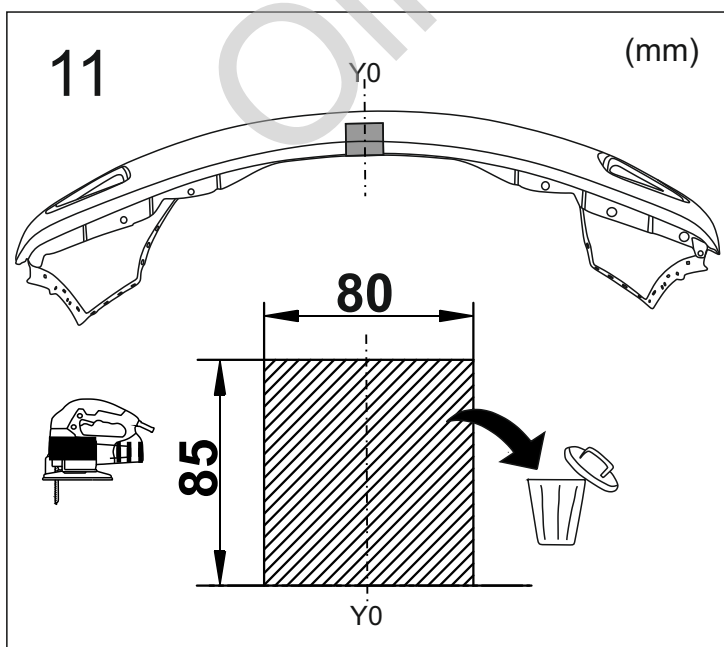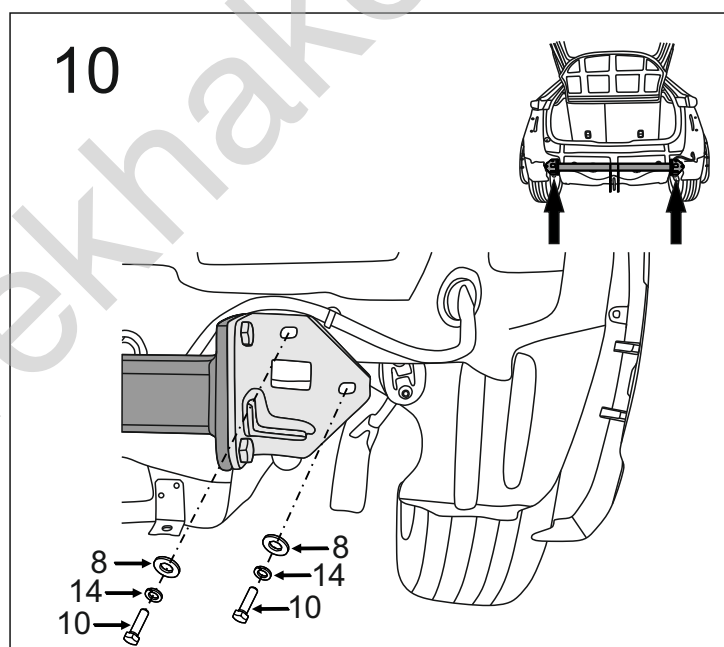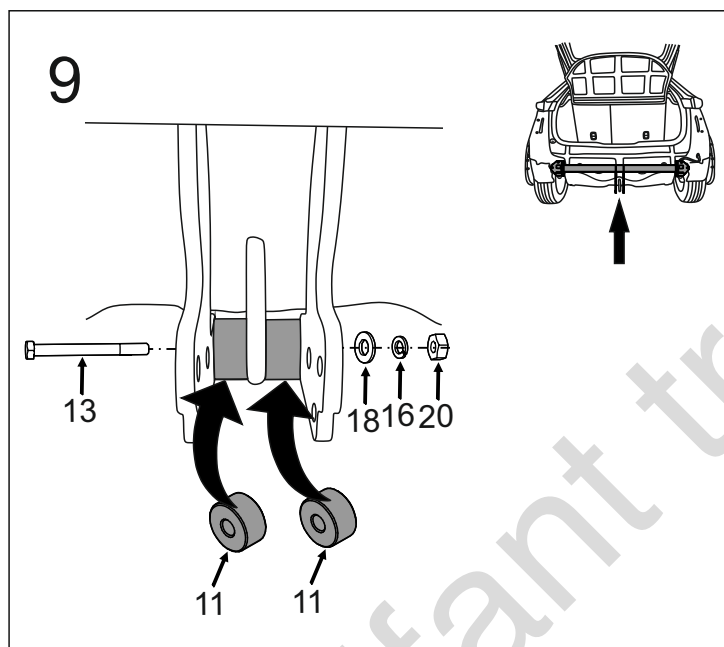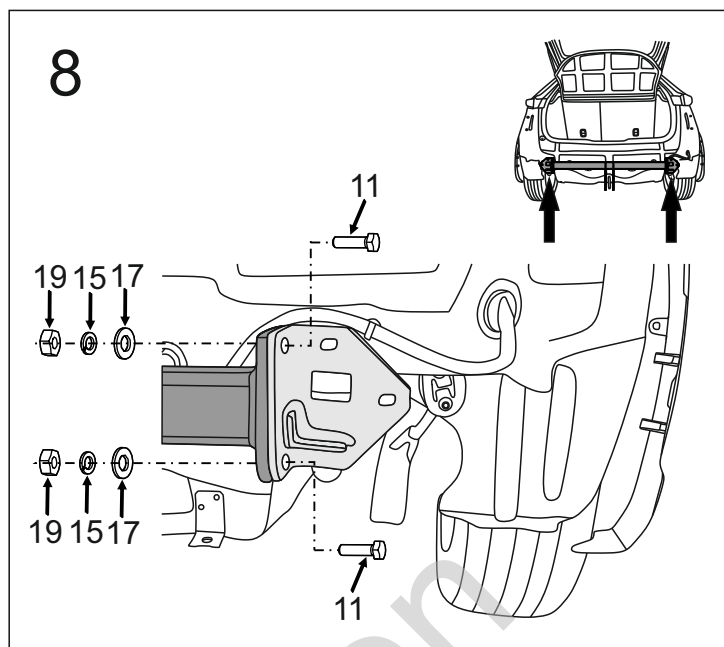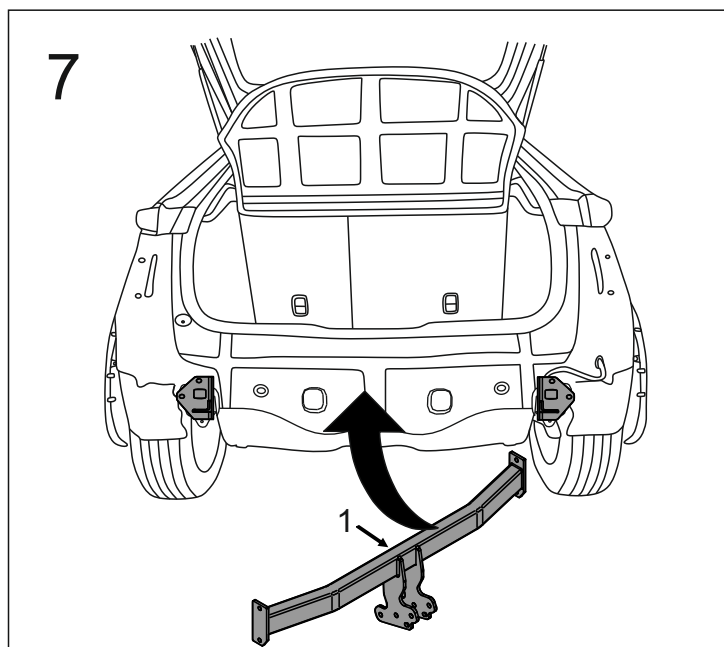

13

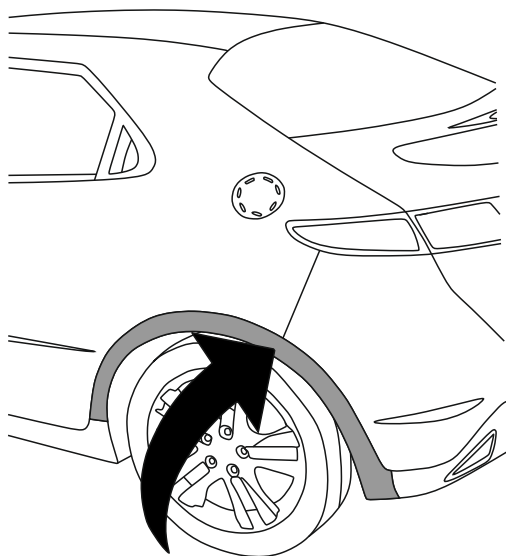

14

