

Hyundai i30 III (5D),
~~(Fastback)~~, ~~(AdBlue)~~

(2017 - →)

H-261


- PL** **Zaczep Kulowy** Instrukcja montażu i eksploatacji
- GB** **Tow bar** Installation and operating instructions
- D** **Die Anhängerkupplung** Montage- und Gebrauchsanleitung
- ES** **Gancho de remolque** Las instrucciones de instalación y de operación
- RU** **Фаркоп** Инструкция по установке и эксплуатации ТСУ
- FR** **Attelage** Notice de montage et d'utilisation
- IT** **Gancio traino** Istruzioni di montaggio
- CZ** **Tažné zařízení** Návod na montáž a použití
- RO** **Cârlig de remorcare** Instrucția de montaj și exploatare
- SE** **Dragkulan** Monterings- och bruksanvisningar.









YES NO
☐ A ☐ B



YES NO
☐ ☒

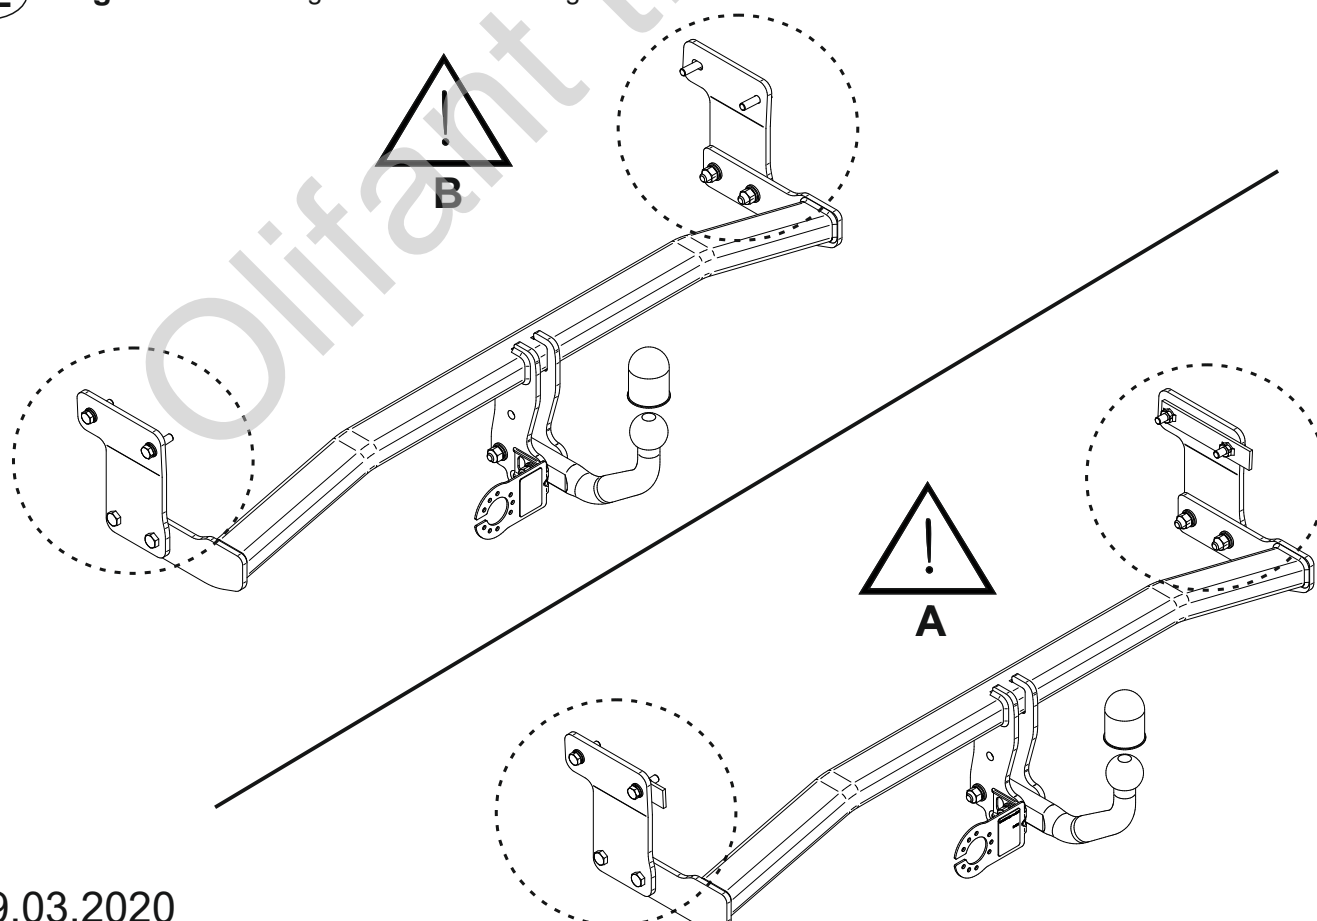

Typ: H-261
A50-X
E20 55R-01 5122
D=8,4 kN
S=80 kg

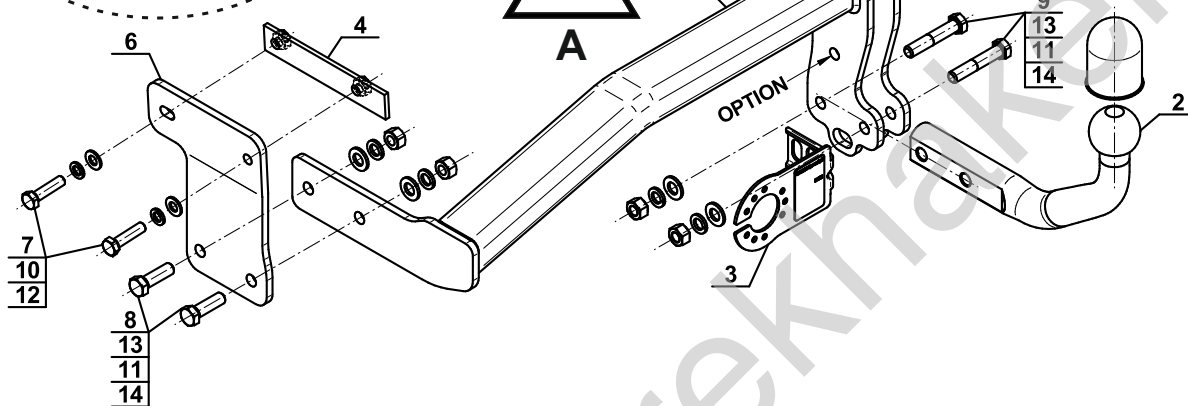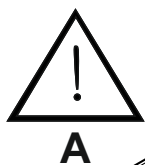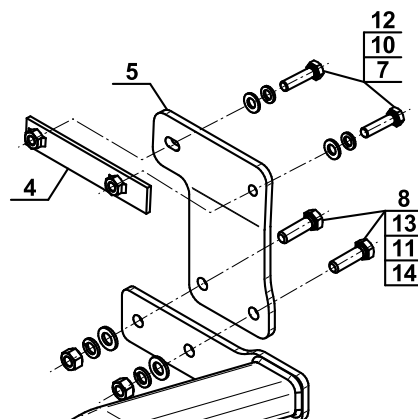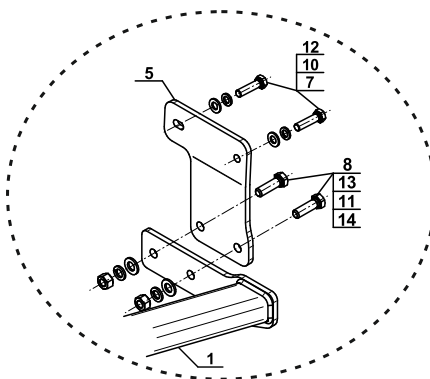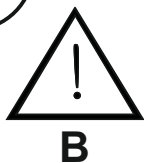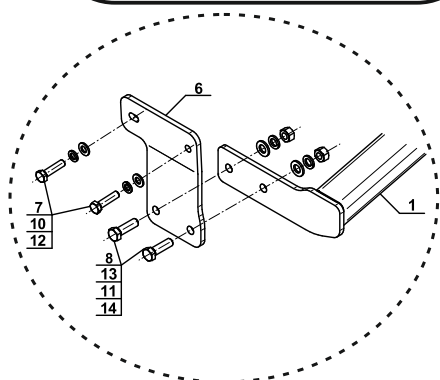

1		x1
2		x1
3		x1
4		x2
5		x1
6		x1

7		M10x1,25x40 (PN/M-82105)	(8.8)	x4
8		M12x40 (PN/M-82105)	(8.8)	x4
9		M12x65 (PN/M-82101)	(8.8)	x2
10		Ø10,2		x4
11		Ø12,2		x6
12		Ø10,5		x4
13		Ø13,0		x6
14		M12 (8)		x6







OPTION







	1x		M12x35	1x		Ø12,2
	1x		Ø13,0	1x		M12

(CZ-050.00)




8.8	
M6 - 10 (Nm)	M12 - 85 (Nm)
M8 - 25 (Nm)	M14 - 135 (Nm)
M10 - 50 (Nm)	M16 - 200 (Nm)

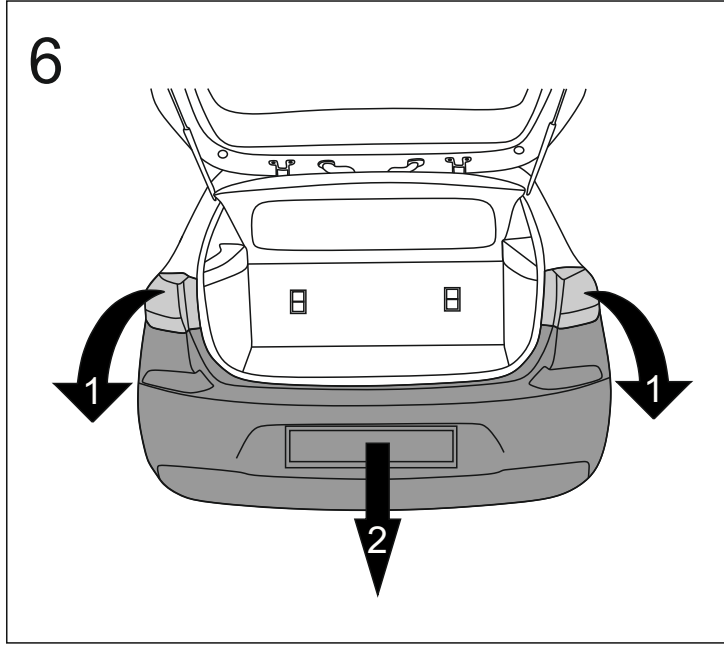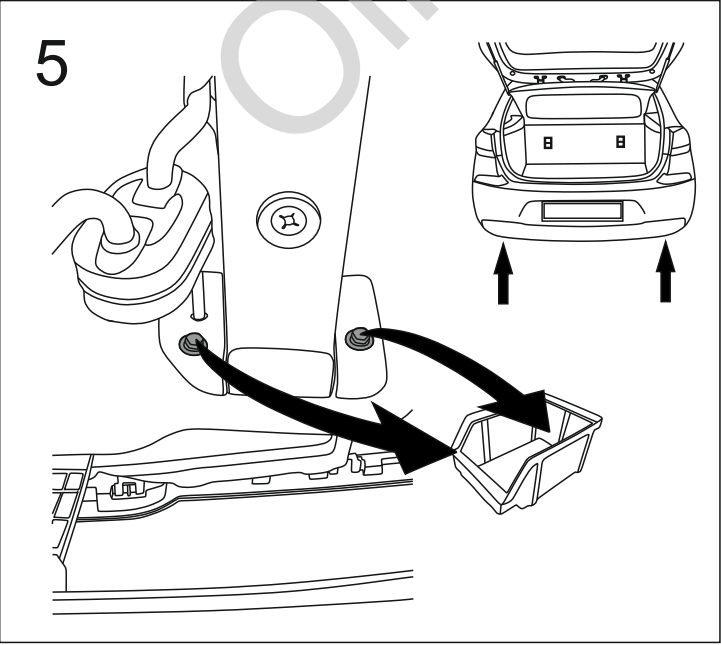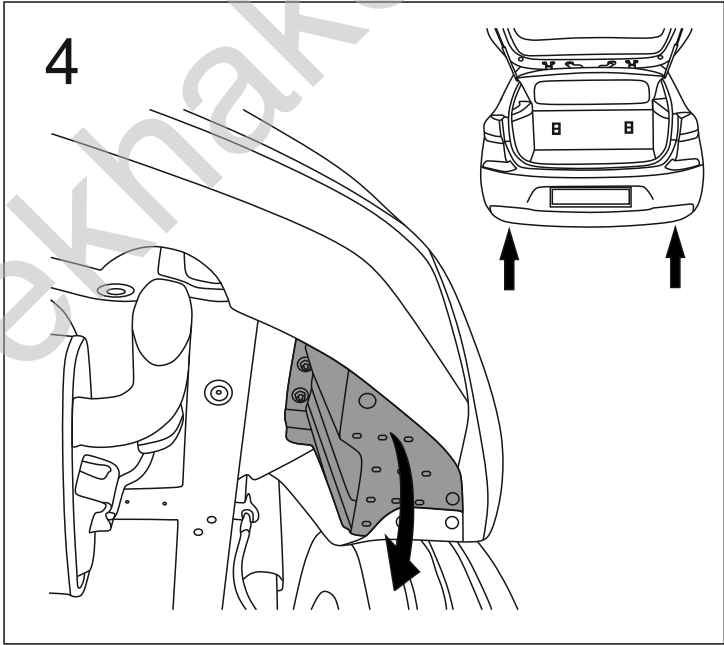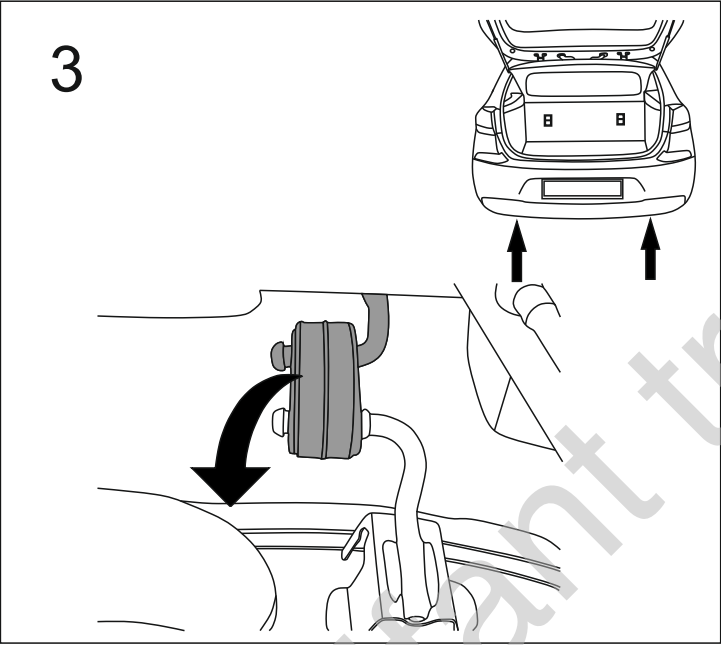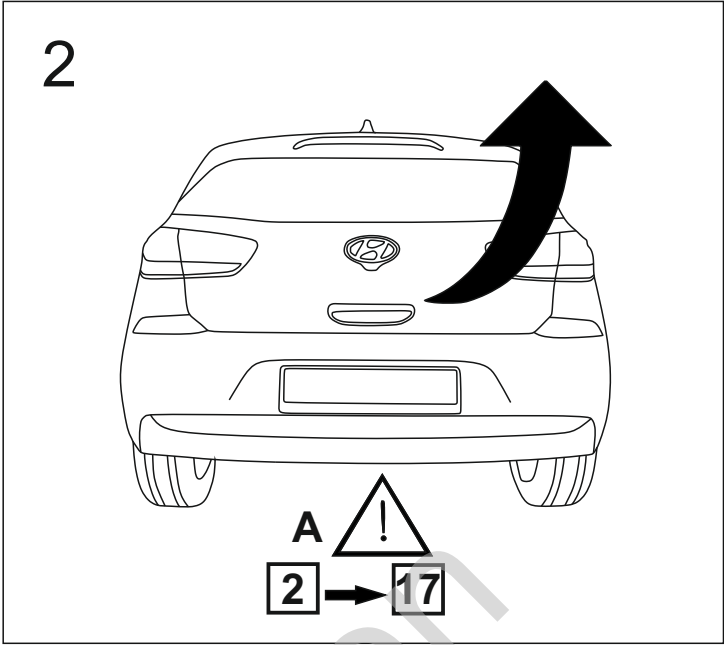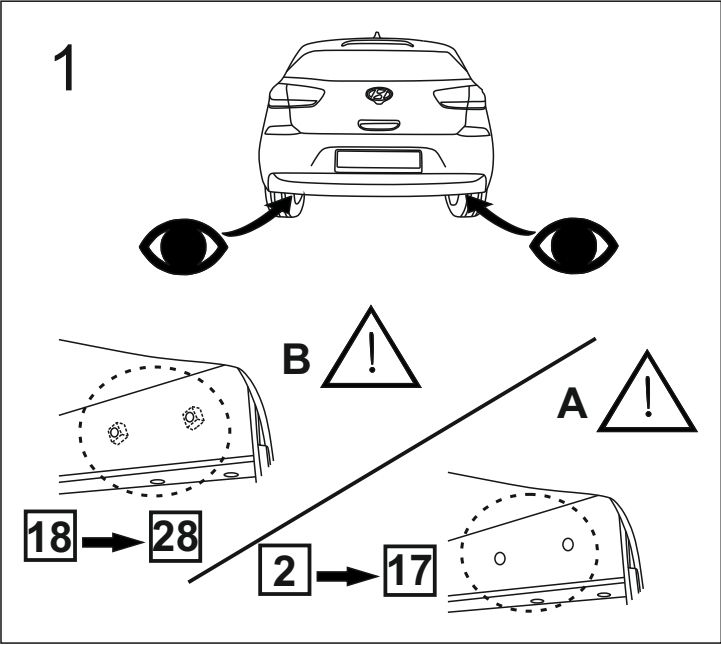


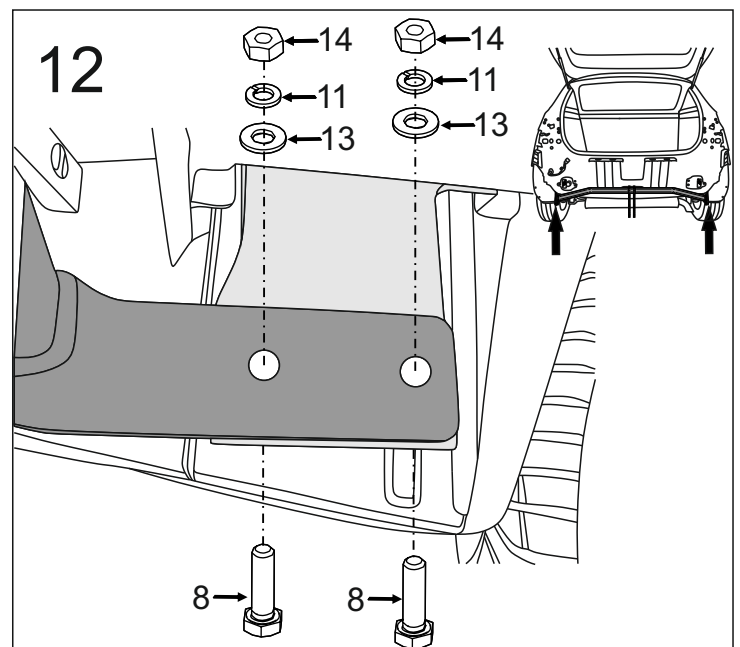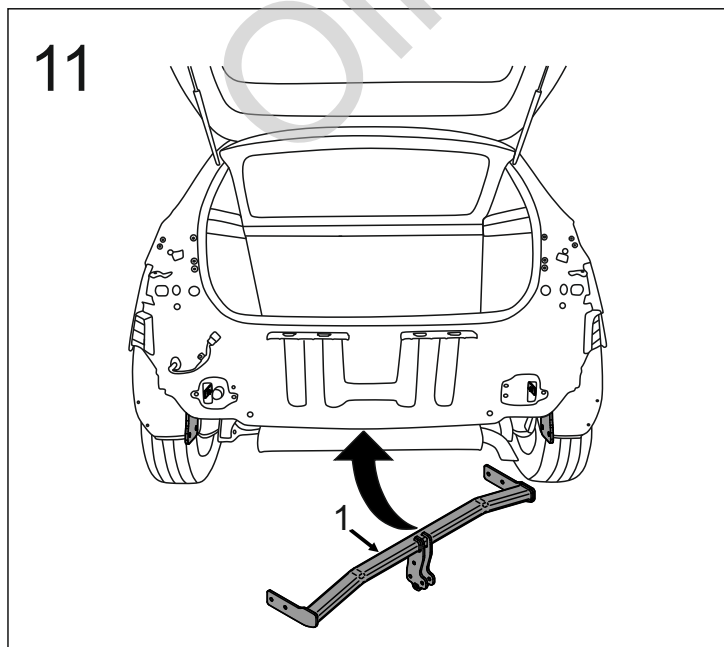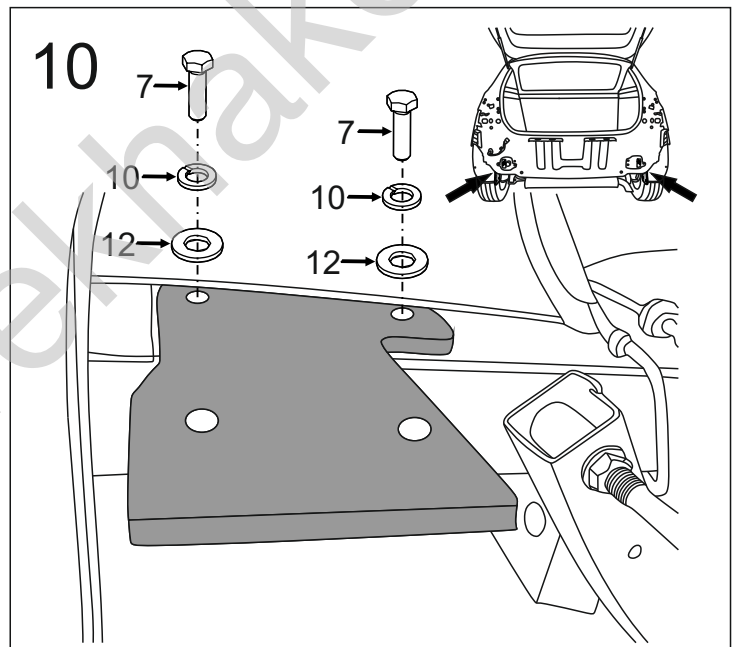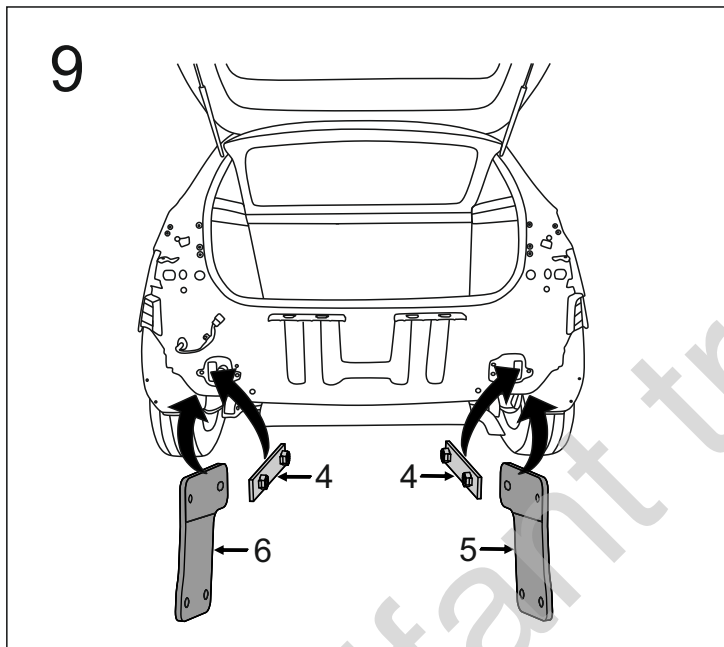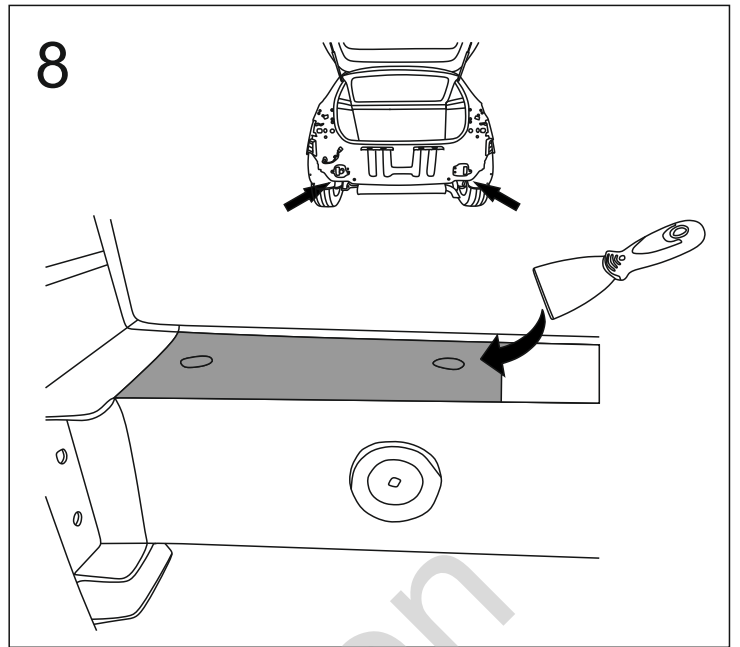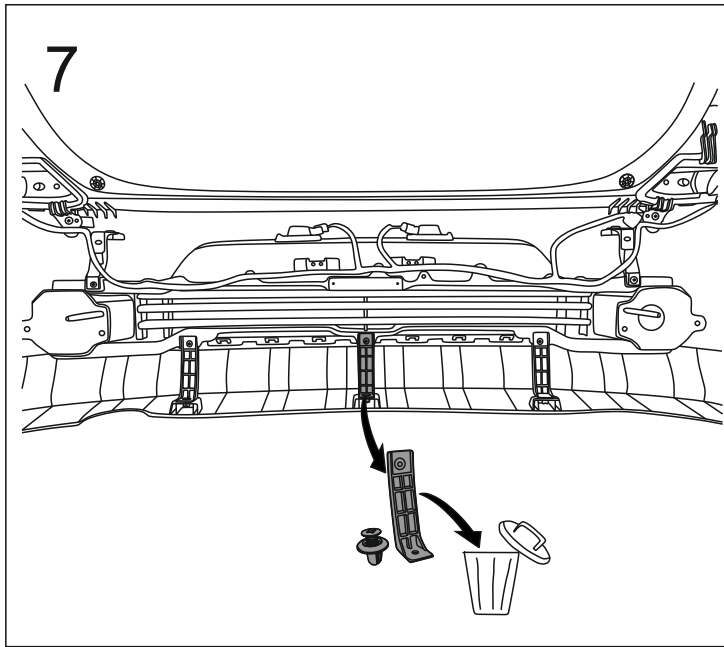


13

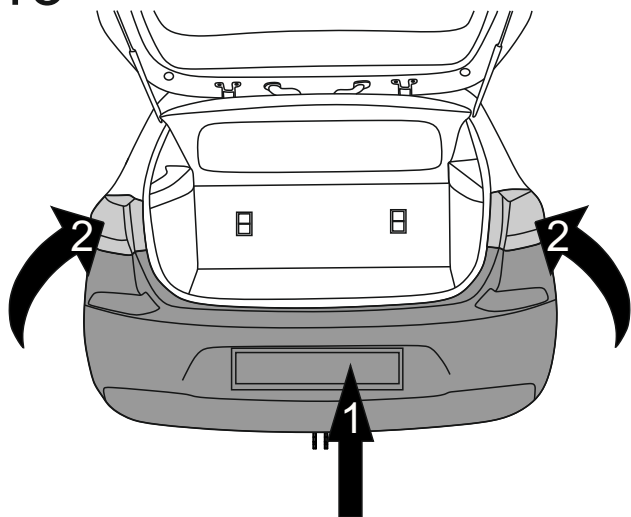


14

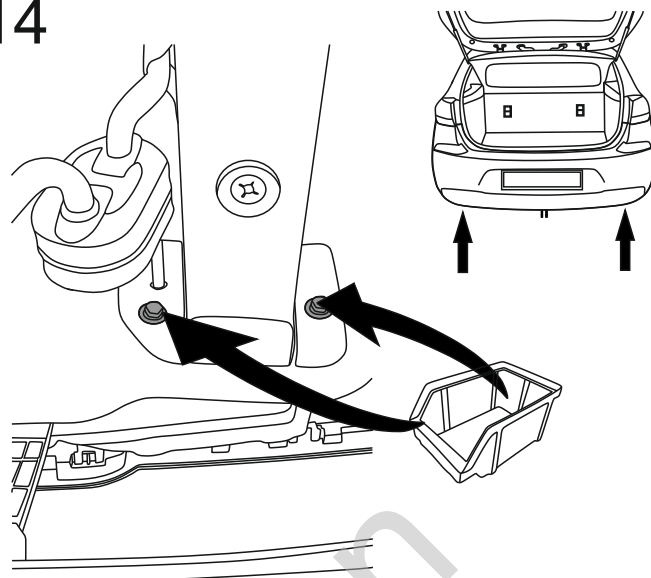


15

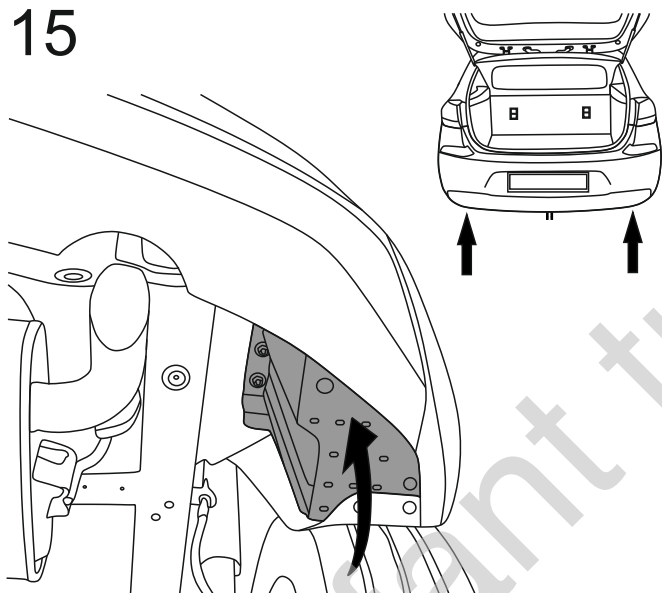


16

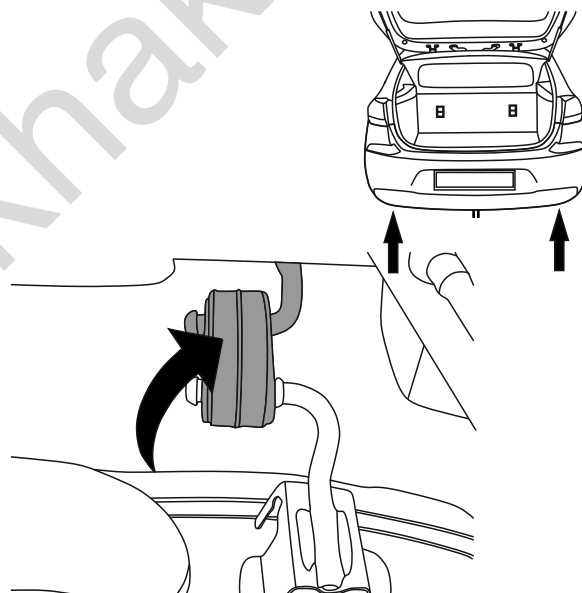


17

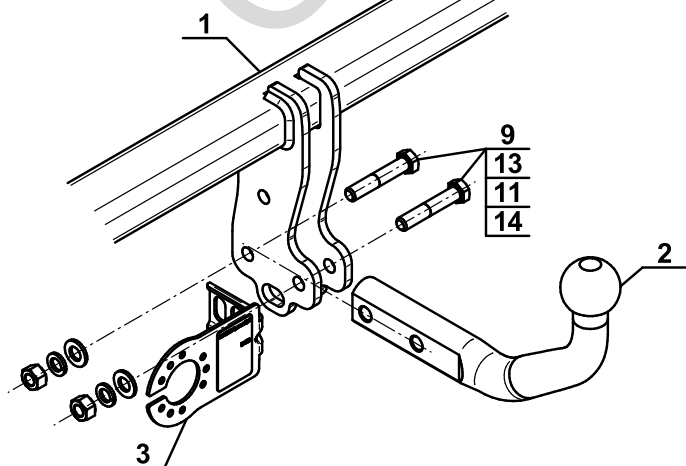


18

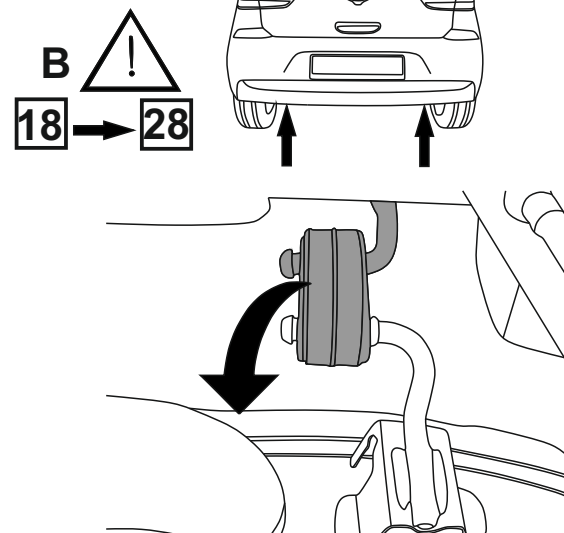


19

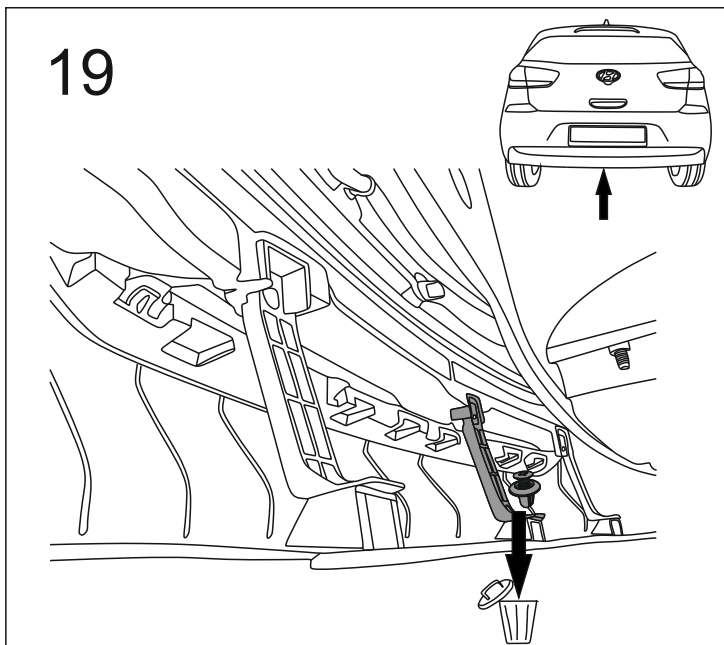


20

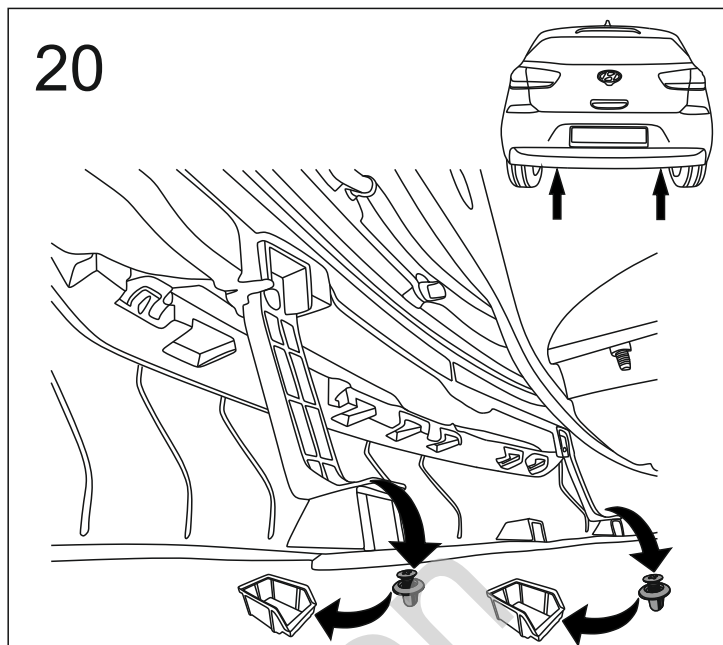


21

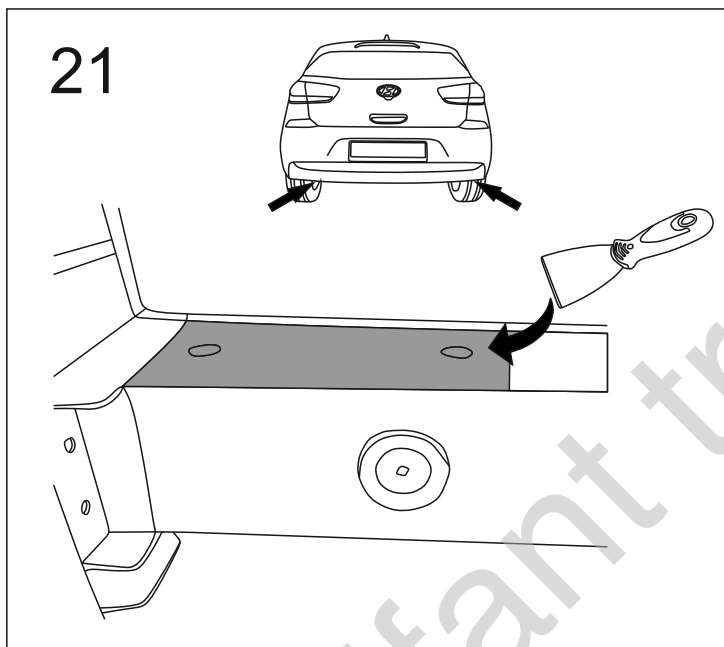


22




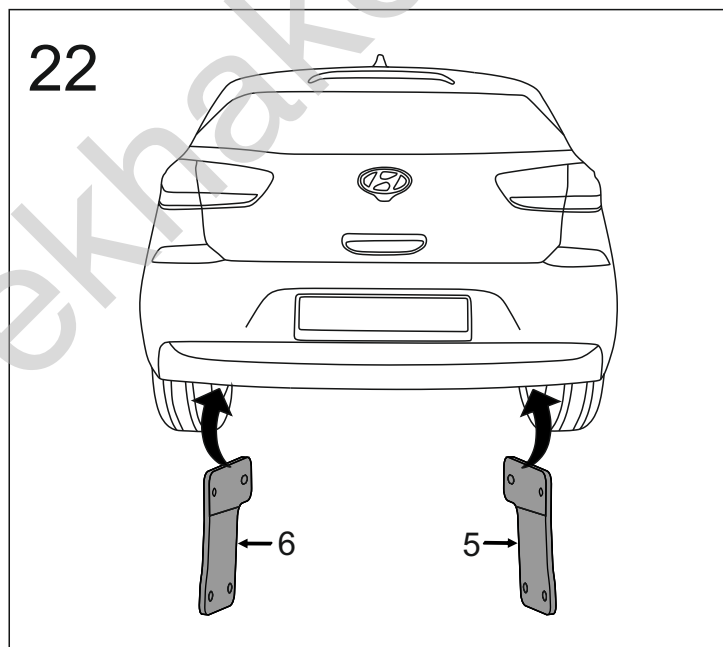


23

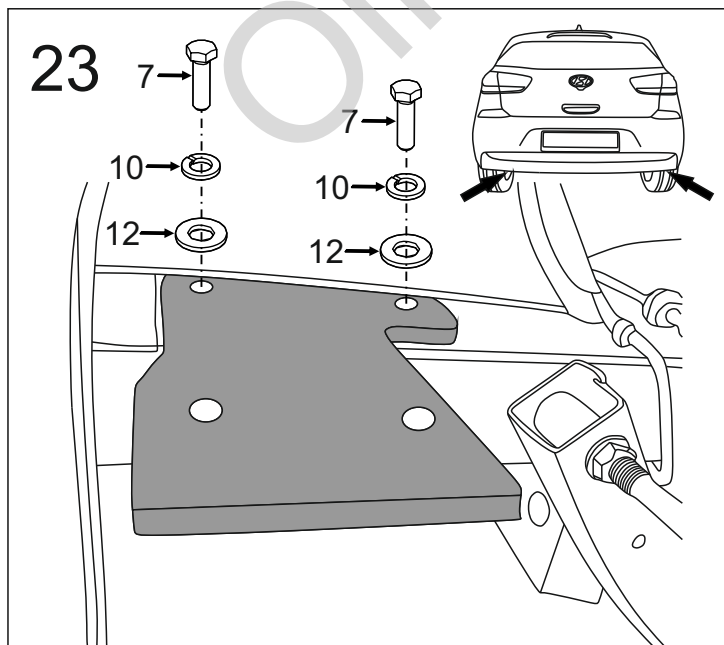

24

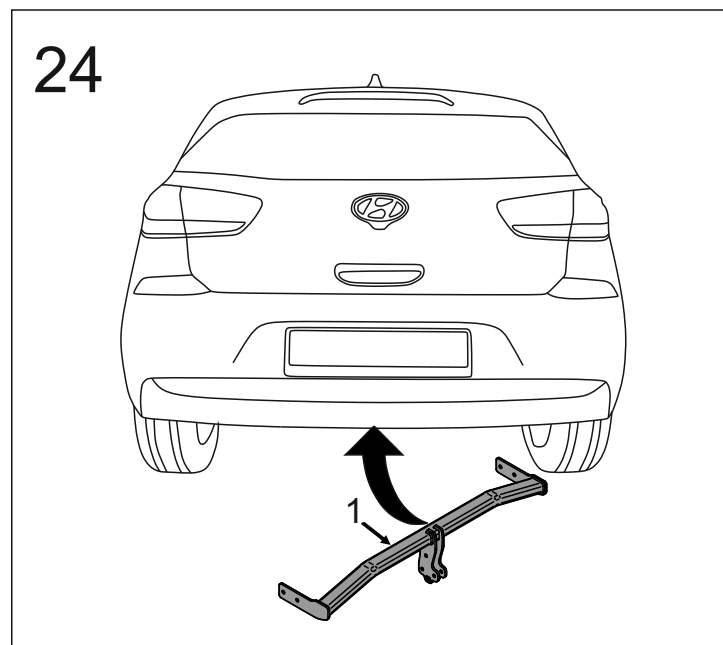

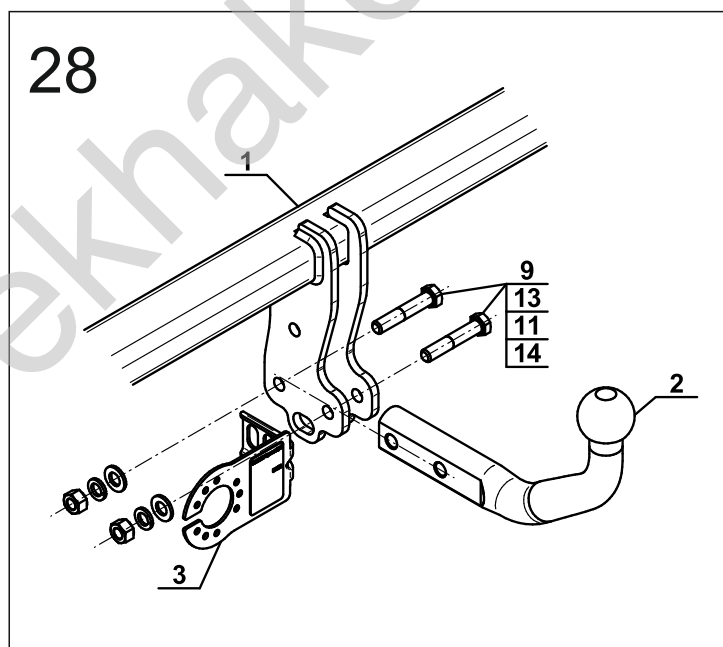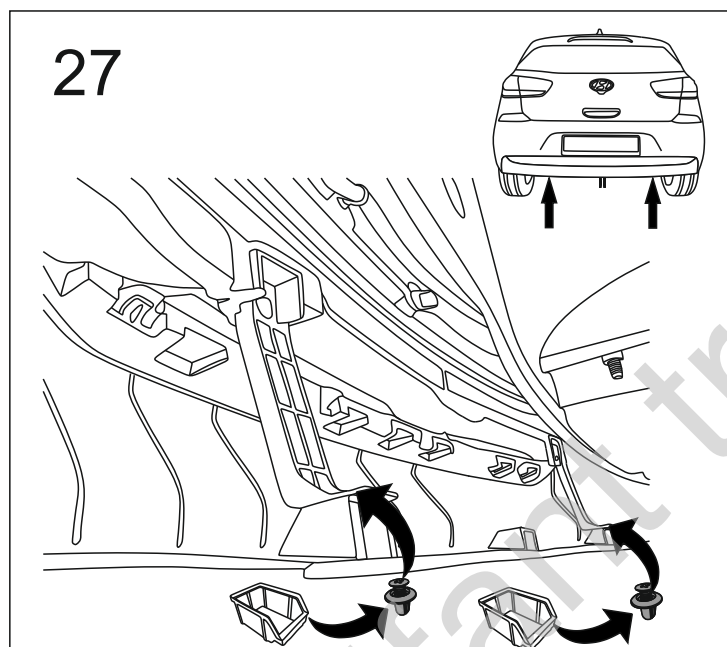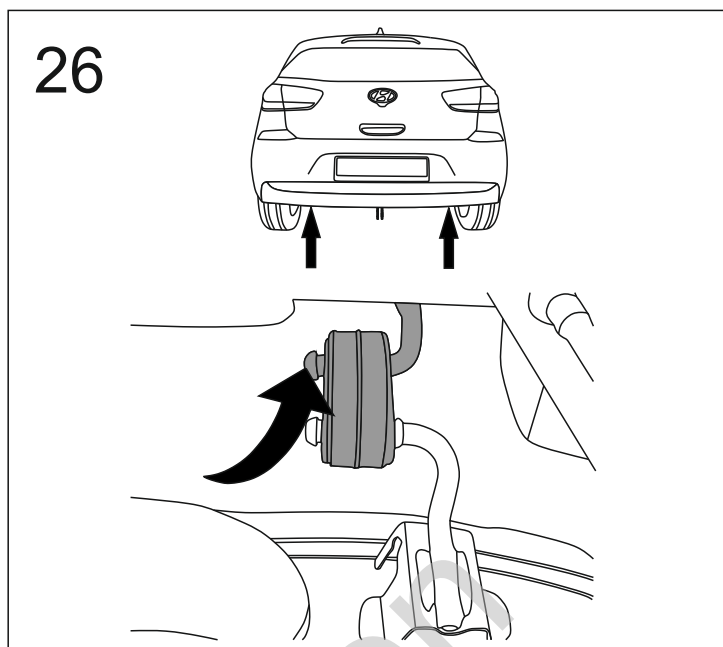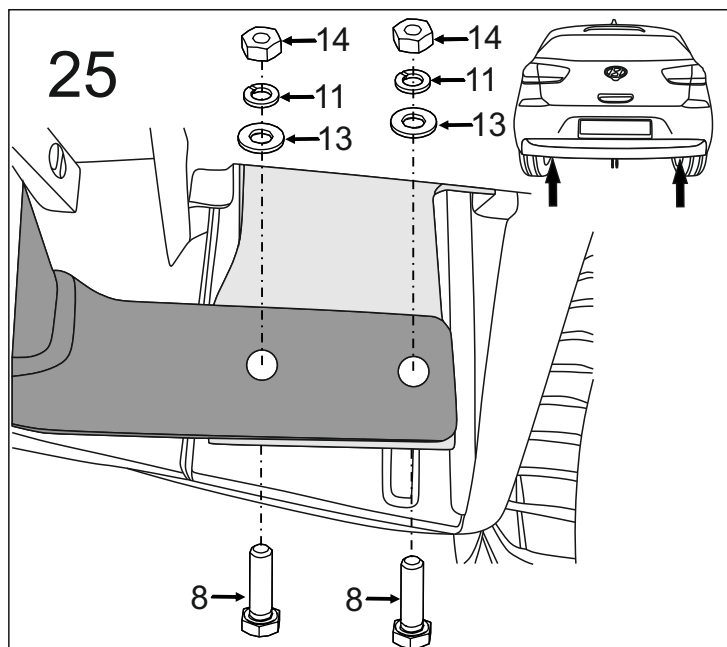

OPTION

