


33-100 Tarnów ul.Przemysłowa 27a
www.steinhof.pl

**Kia Sportage V (NQ5), (+Hybrid),
(+GT-Line), (2WD/4WD)**

(11/2021 - →)

K-098


- PL** **Zaczep Kulowy** Instrukcja montażu i eksploatacji
- GB** **Tow bar** Installation and operating instructions
- D** **Die Anhängerkupplung** Montage- und Gebrauchsanleitung
- ES** **Gancho de remolque** Las instrucciones de instalación y de operación
- RU** **Фаркоп** Инструкция по установке и эксплуатации ТСУ
- FR** **Attelage** Notice de montage et d'utilisation
- IT** **Gancio traino** Istruzioni di montaggio
- CZ** **Tažné zařízení** Návod na montáž a použití
- RO** **Cârlig de remorcare** Instrucția de montaj și exploatare
- SE** **Dragkulan** Monterings- och bruksanvisningar.

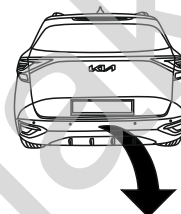

YES	NO
☒	☐



YES	NO
☒	☐

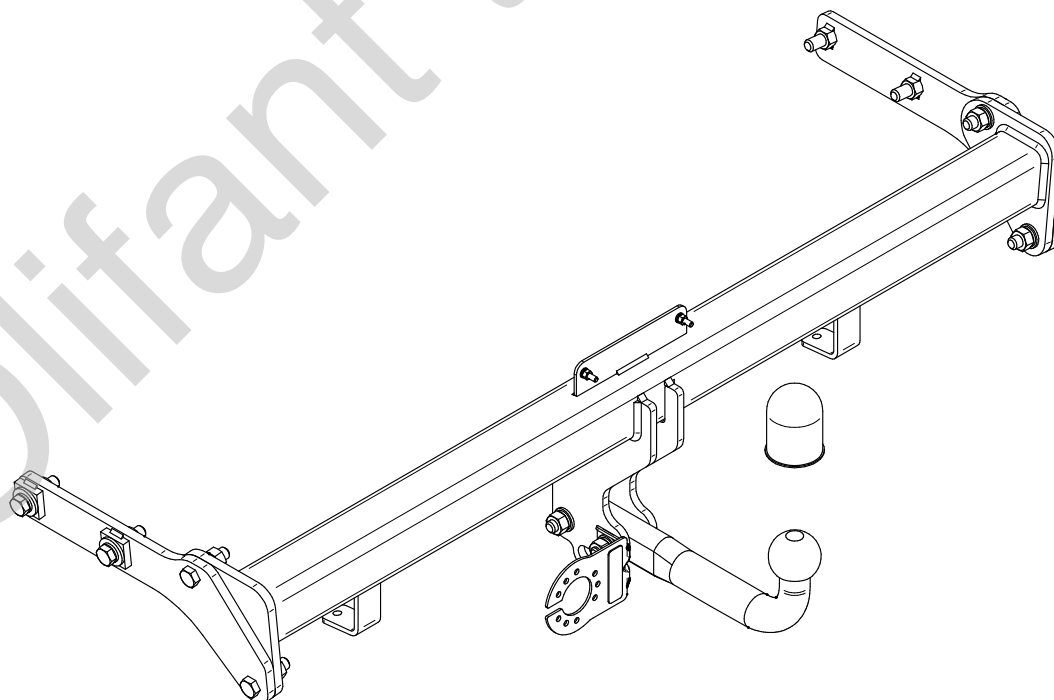


Typ: K-098

A50-X

E₂₀ 55R-02 6436

D = 11,2 kN

S = 120 kg

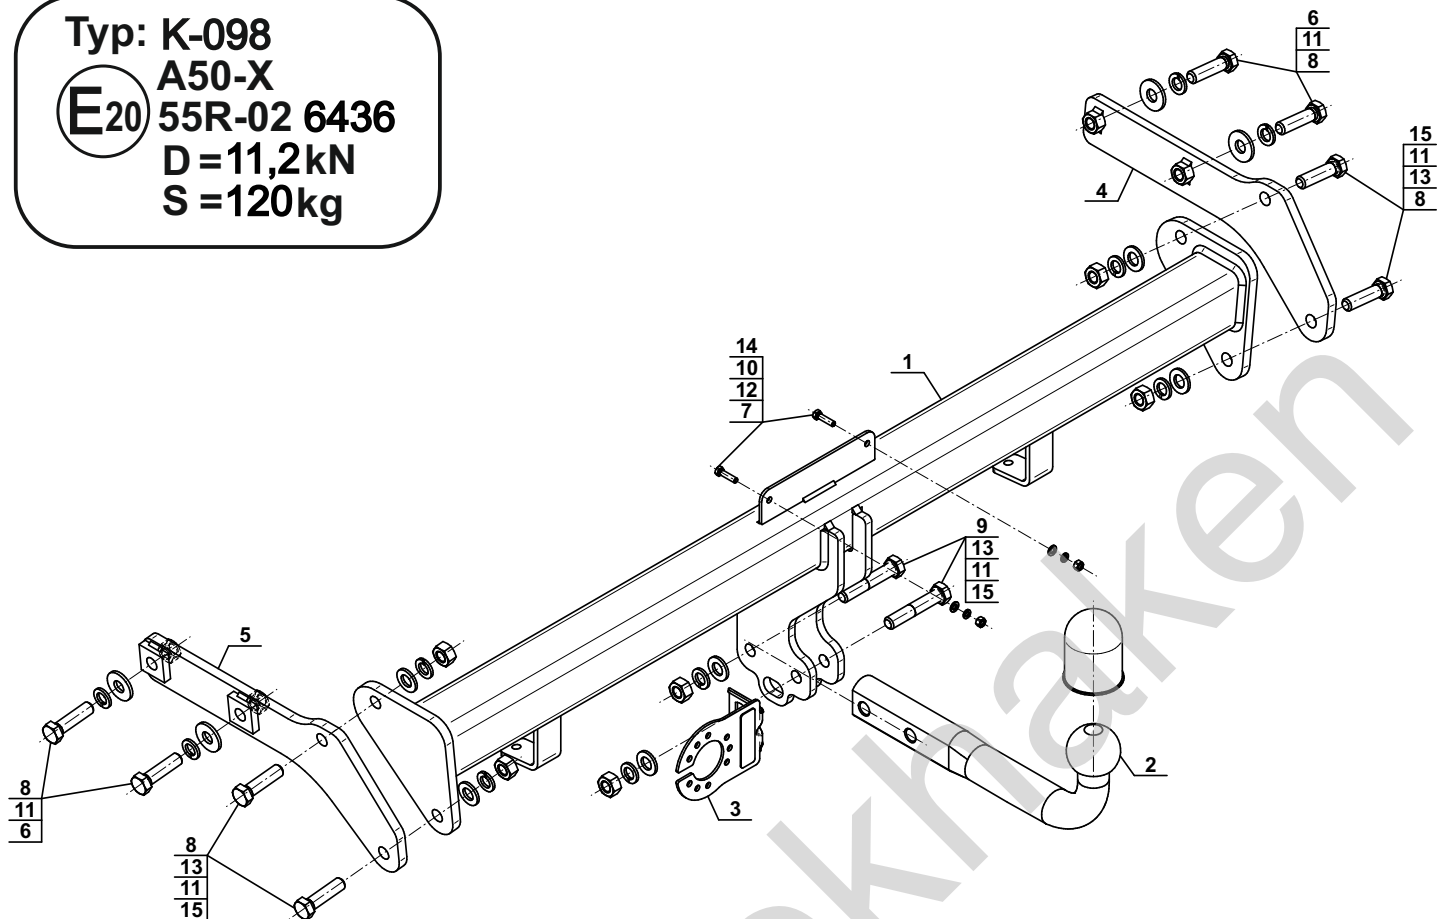


1		x1
2		x1
3		x1
4		x1
5		x1

6		Ø30/Ø12,5x3	x4
7		M5x20 (PN/M-82105)	x2
8		M12x45 (PN/M-82105) (8.8)	x8
9		M12x65 (PN/M-82101) (8.8)	x2
10		Ø5,1	x2
11		Ø12,2	x10
12		Ø5,3	x2
13		Ø13,0	x6
14		M5	x2
15		M12 (8)	x6




8.8	
M6 - 10 (Nm)	M12 - 85 (Nm)
M8 - 25 (Nm)	M14 - 135 (Nm)
M10 - 50 (Nm)	M16 - 200 (Nm)


1

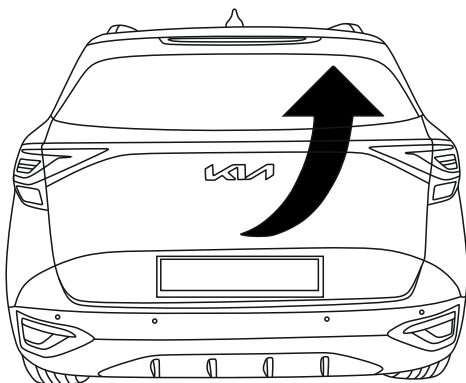


2

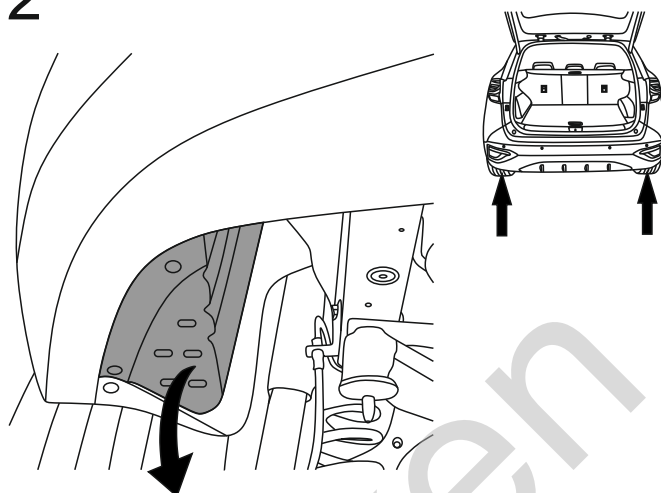


3

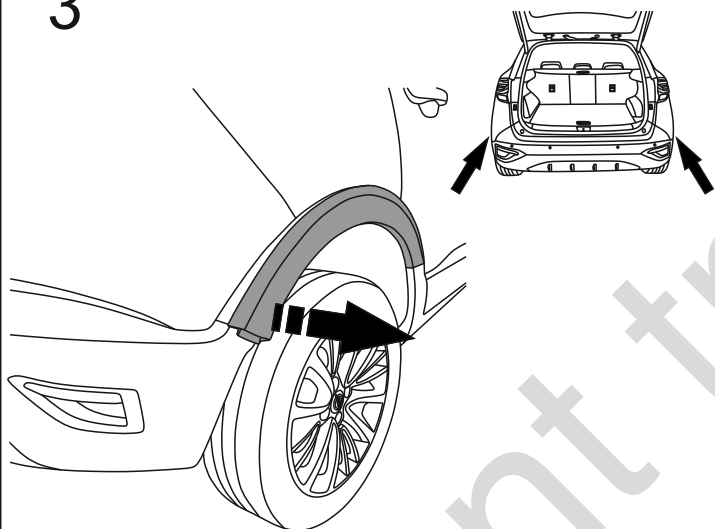


4

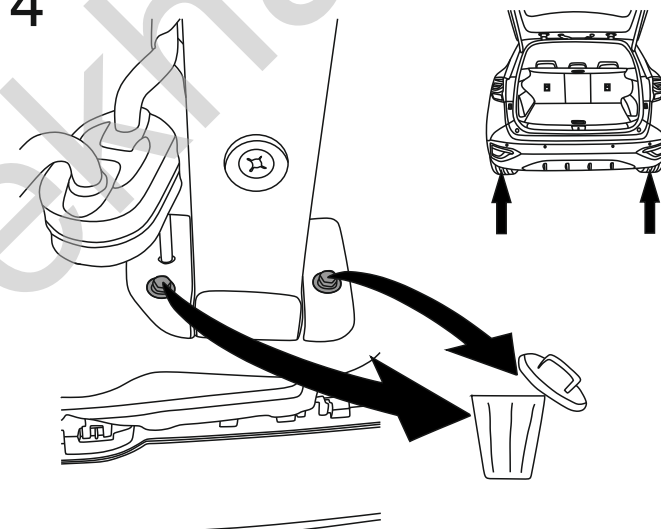


5

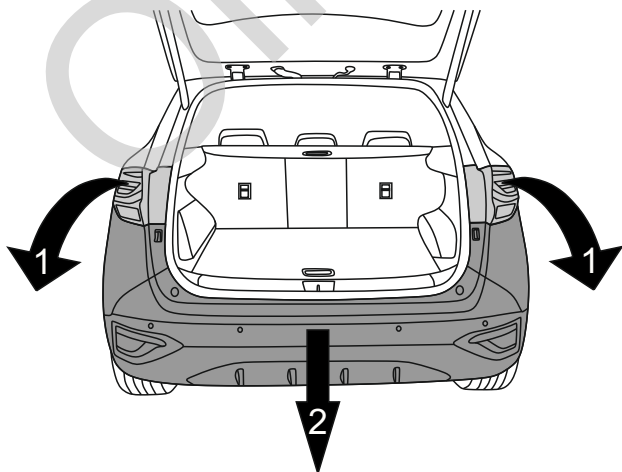


6

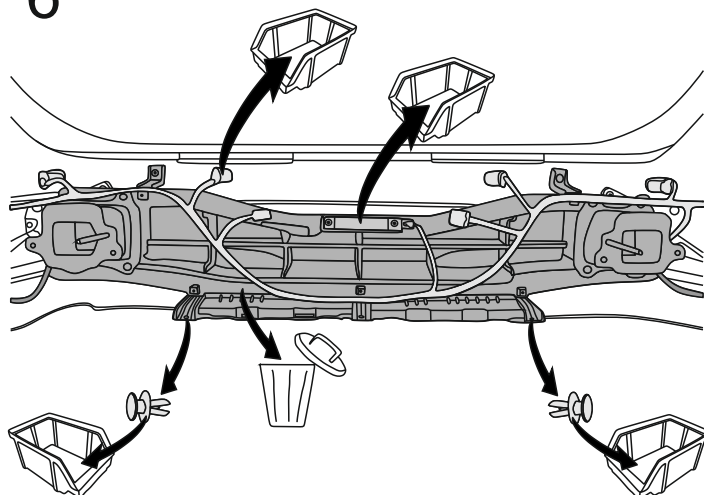


7

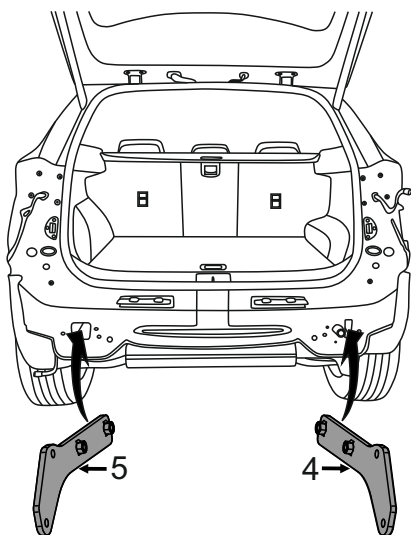


8

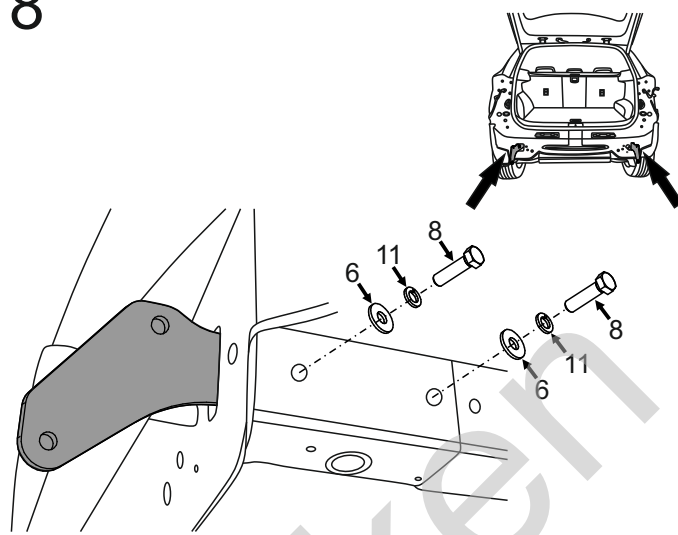


9

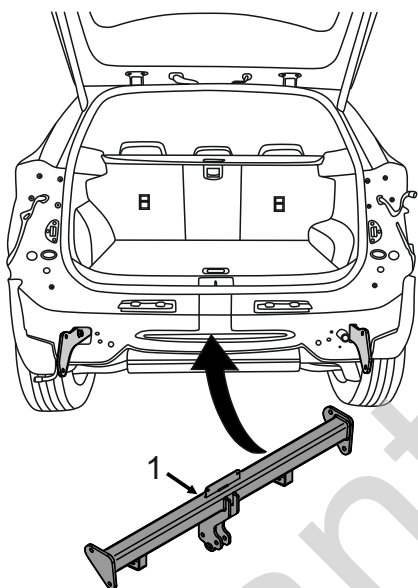

10

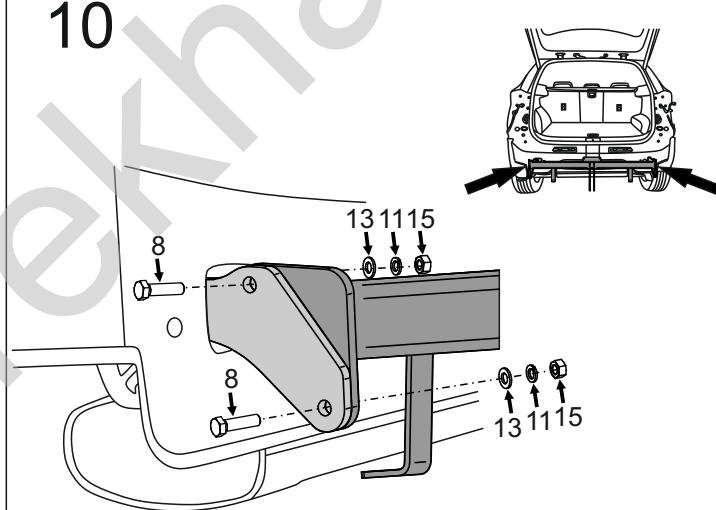

11

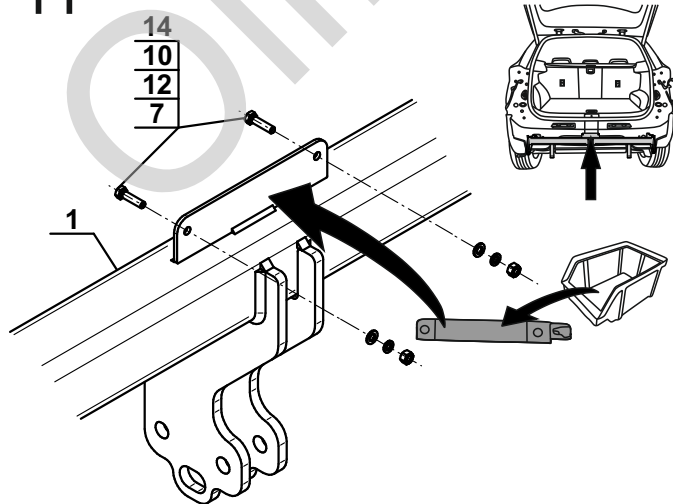

12

