


Mercedes GLE (W166)

(04/2015 -10/2018)

M-171


- PL** **Zaczep Kulowy** Instrukcja montażu i eksploatacji
GB **Tow bar** Installation and operating instructions
D **Die Anhängerkupplung** Montage- und Gebrauchsanleitung
ES **Gancho de remolque** Las instrucciones de instalación y de operación
RU **Фаркоп** Инструкция по установке и эксплуатации ТСУ
FR **Attelage** Notice de montage et d'utilisation
IT **Gancio traino** Istruzioni di montaggio
CZ **Tažné zařízení** Návod na montáž a použití
RO **Cârlig de remorcare** Instrucția de montaj și exploatare
SE **Dragkulan** Monterings- och bruksanvisningar.

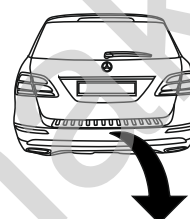

YES ☒ NO ☐



YES ☒ NO ☐

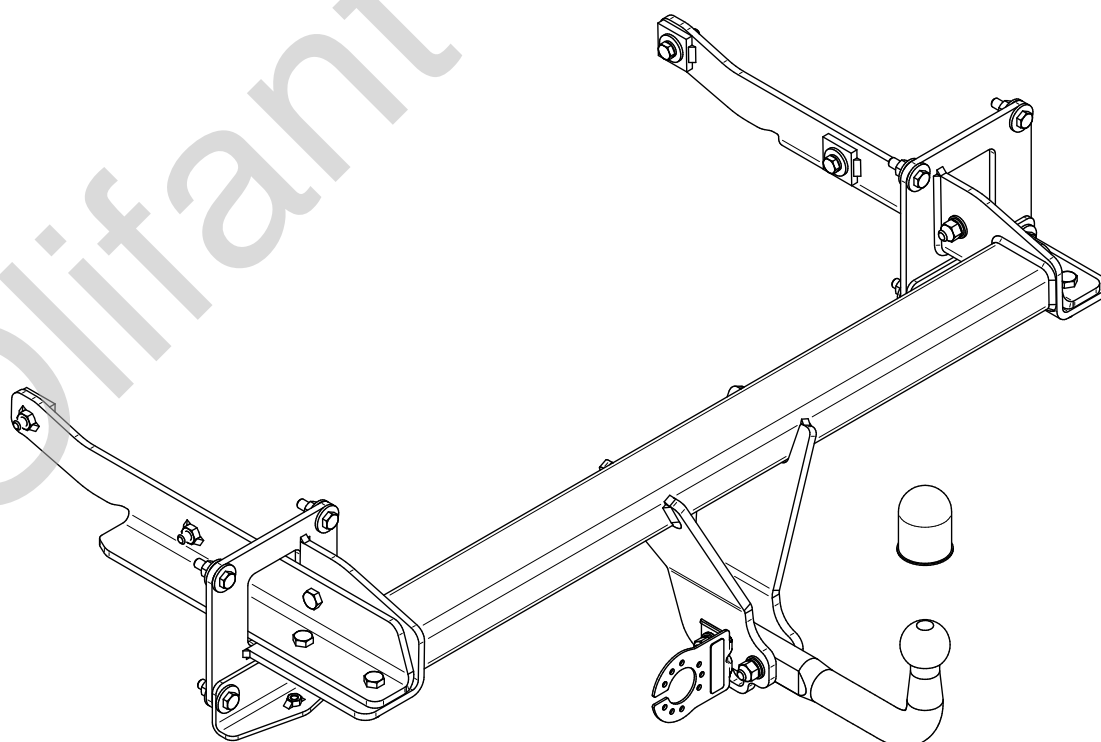



Typ: M-171


A50-X

E20 55R-02 6199

D=16,55kN

S=140kg

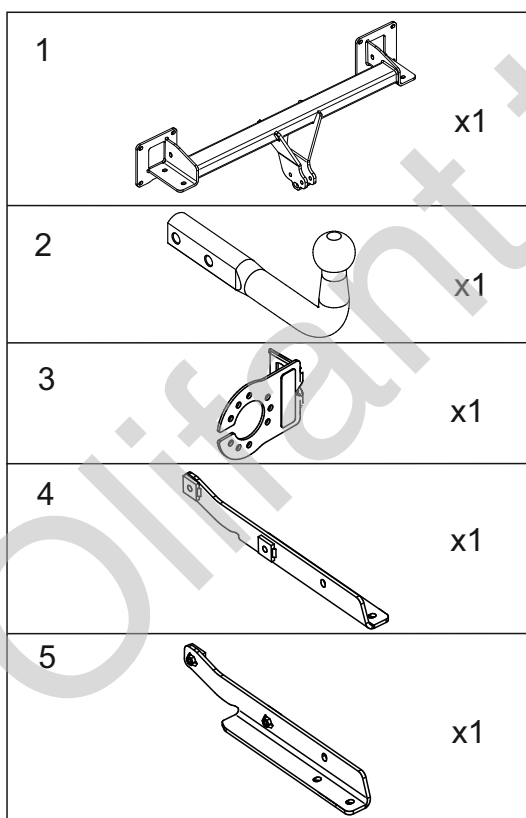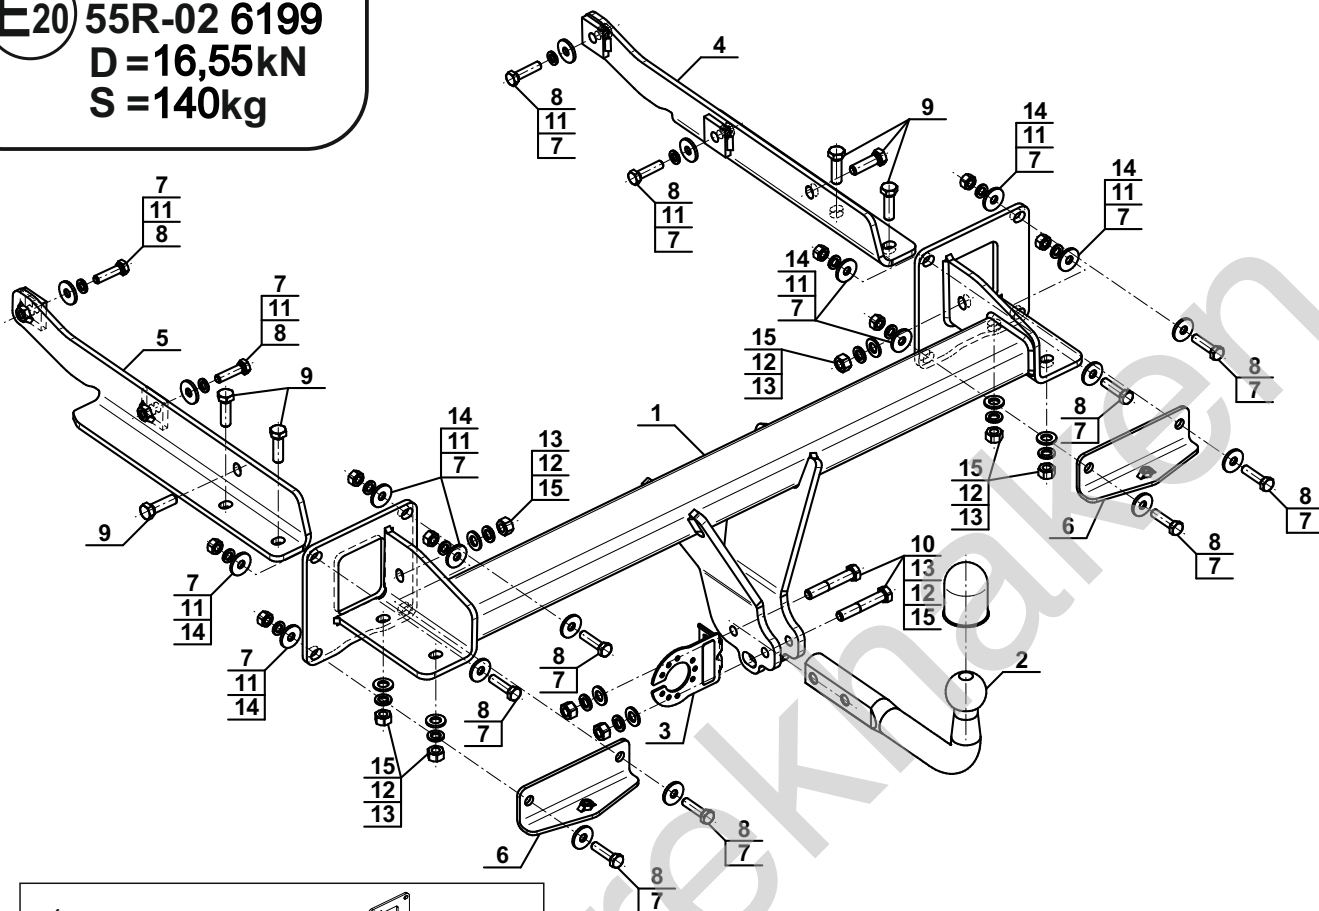


6		x2
7	 Ø30/Ø10,5x3	x20
8	 M10x40 (PN/M-82105) (8.8)	x12
9	 M12x40 (PN/M-82105) (8.8)	x6
10	 M12x70 (PN/M-82101) (8.8)	x2
11	 Ø10,2	x12
12	 Ø12,2	x8
13	 Ø13,0	x8
14	 M10 (8)	x8
15	 M12 (8)	x8




8.8	
M6 - 10 (Nm)	M12 - 85 (Nm)
M8 - 25 (Nm)	M14 - 135 (Nm)
M10 - 50 (Nm)	M16 - 200 (Nm)


1

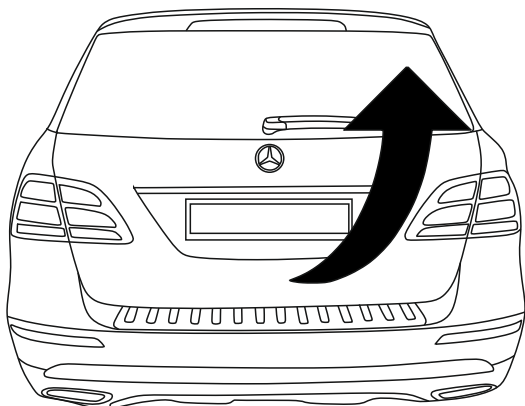


2

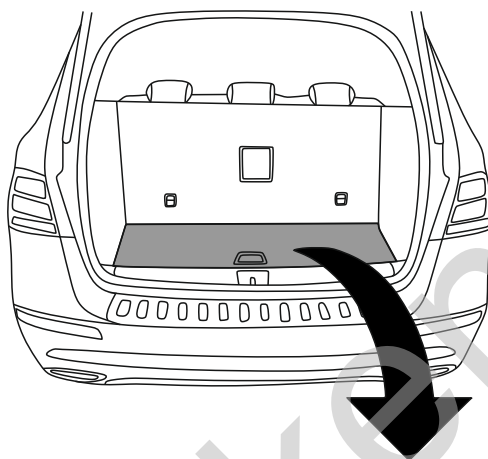


3

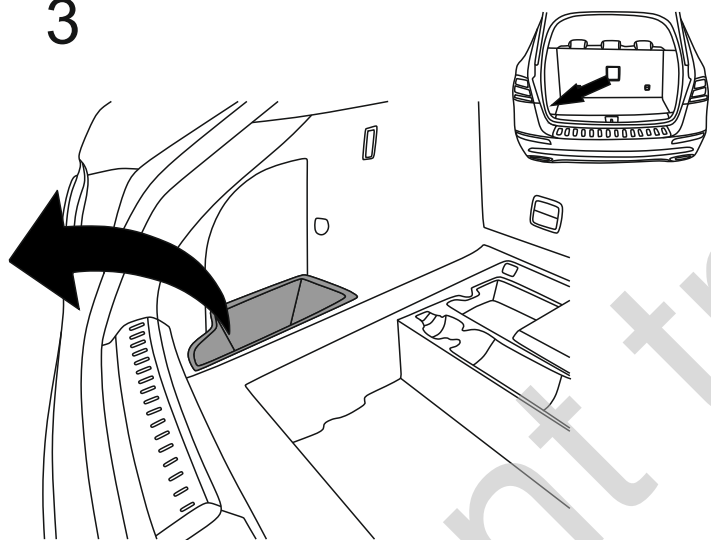


4






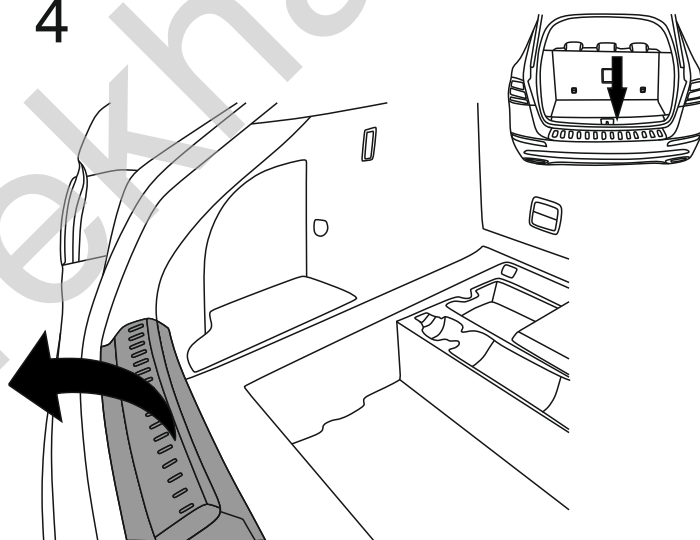








5






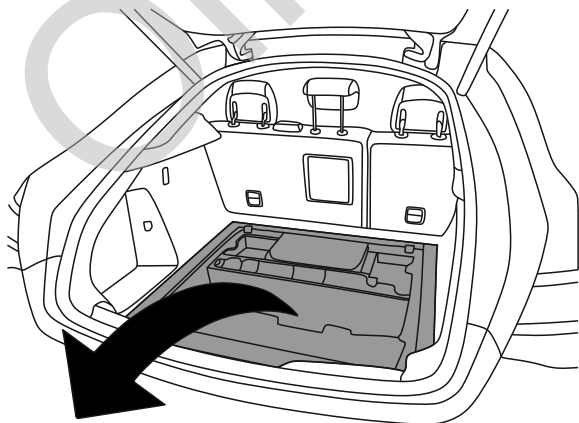


6

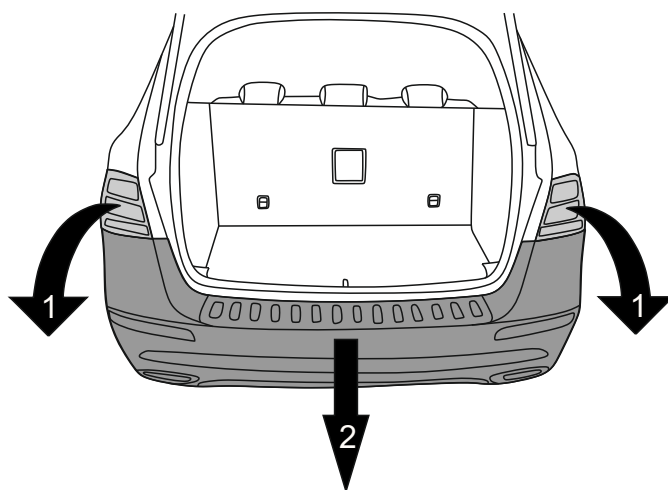


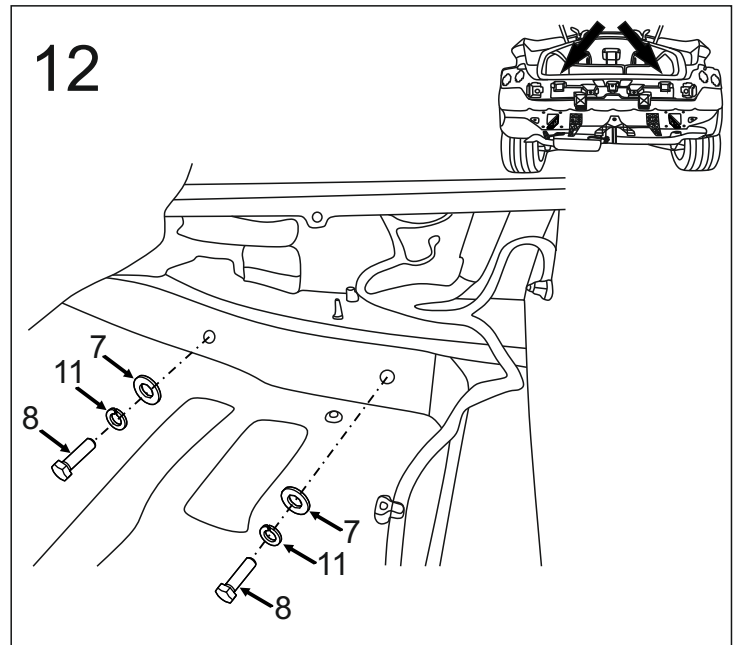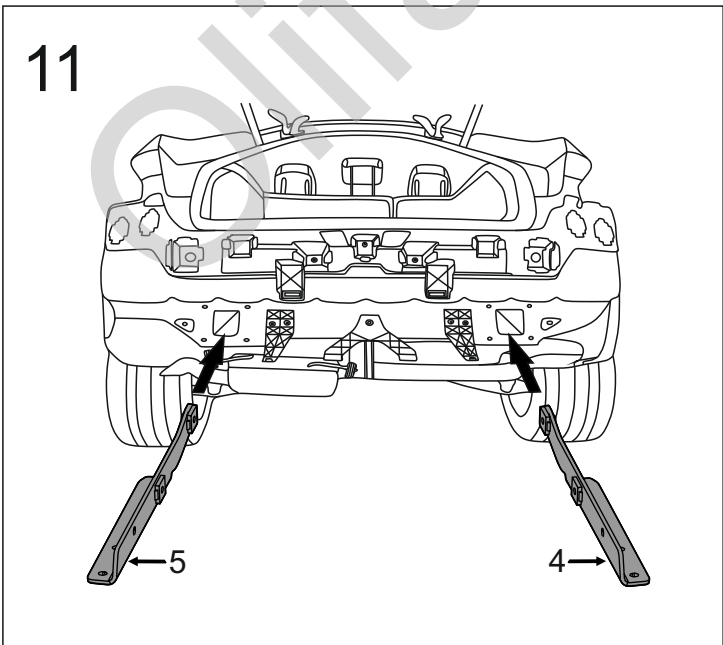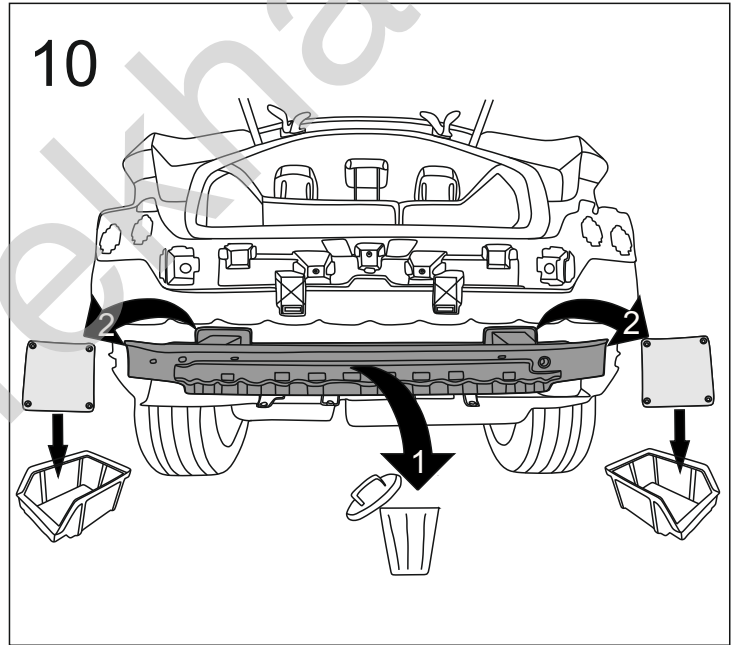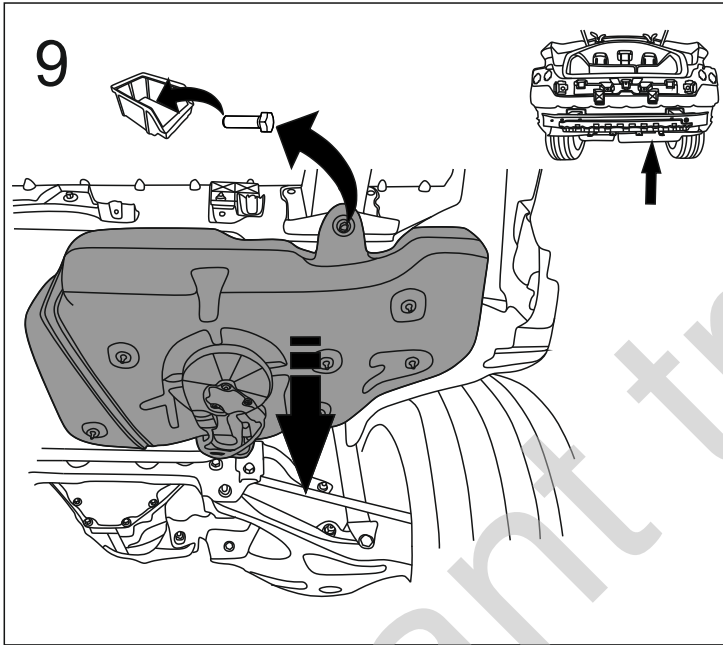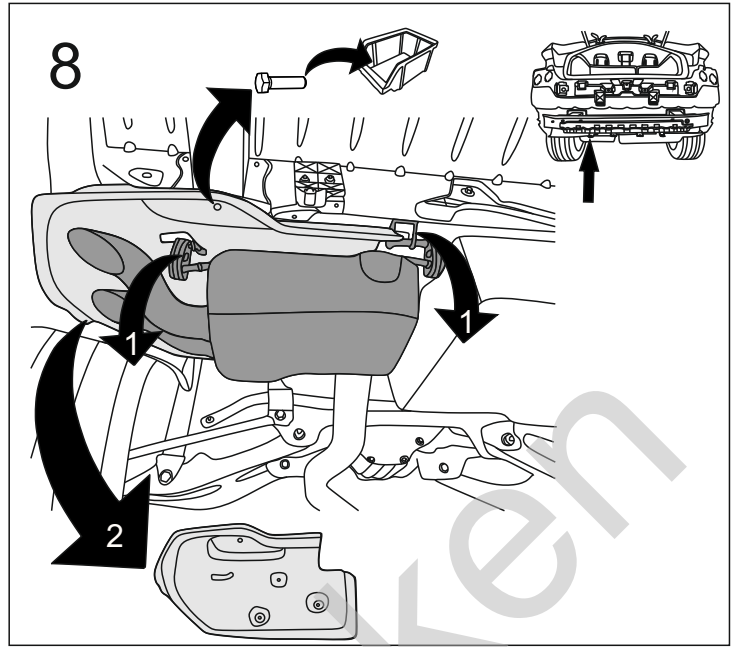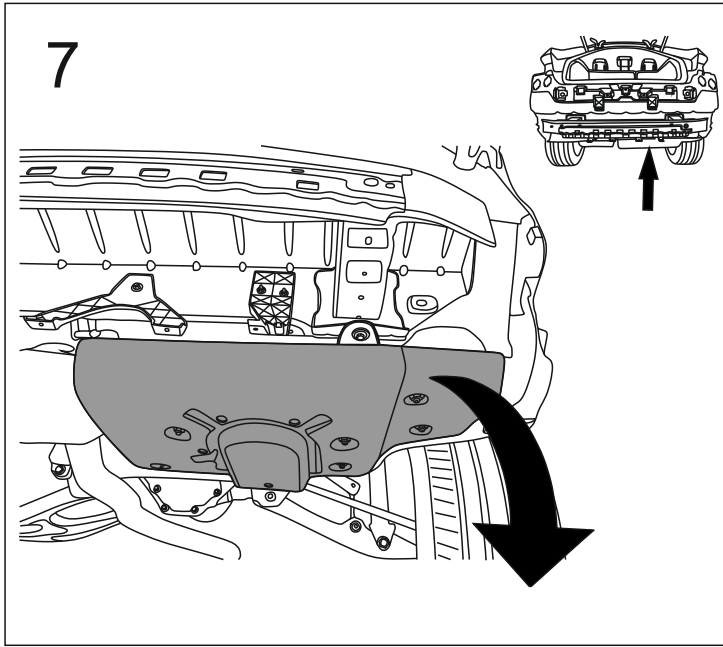

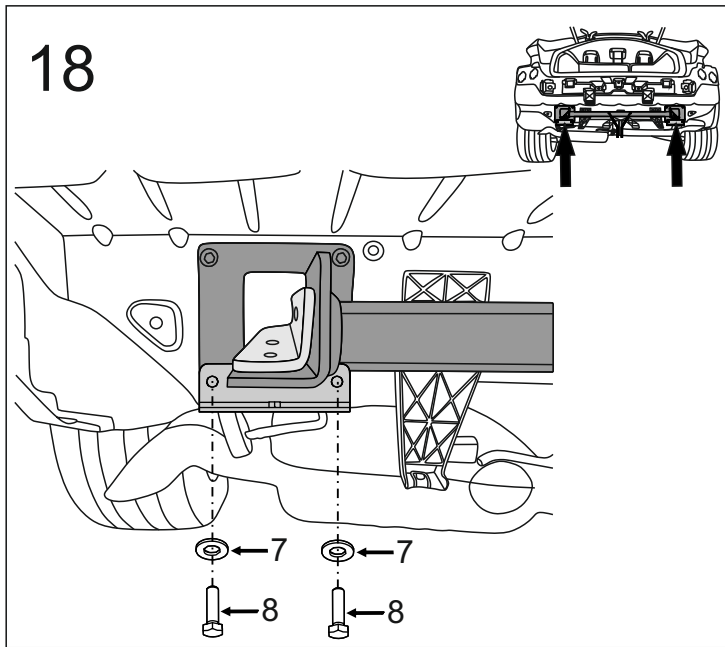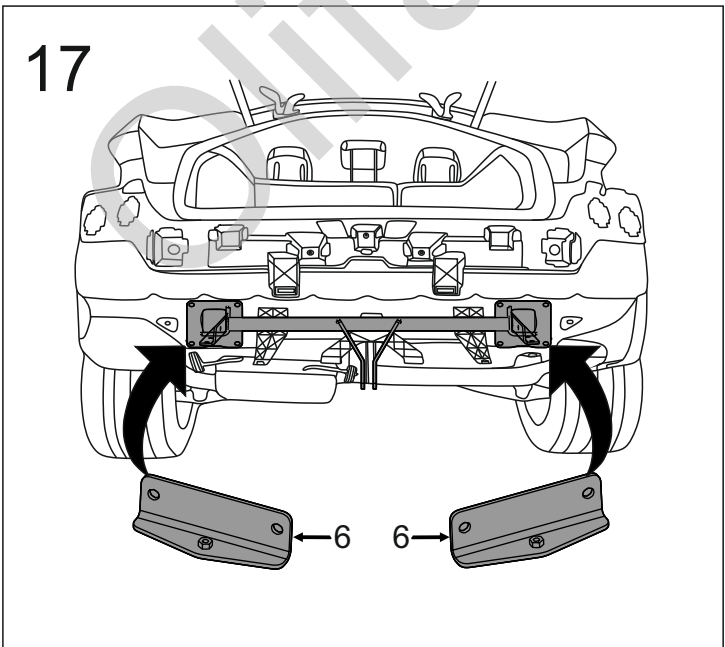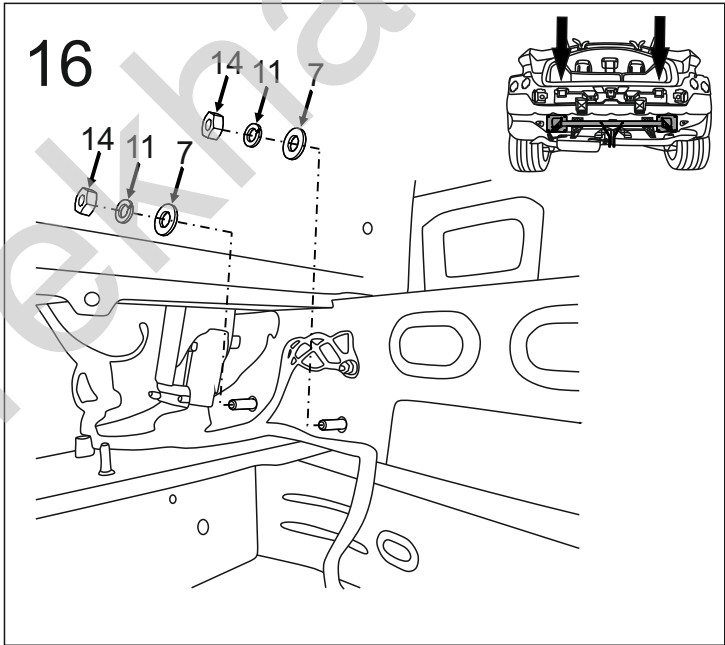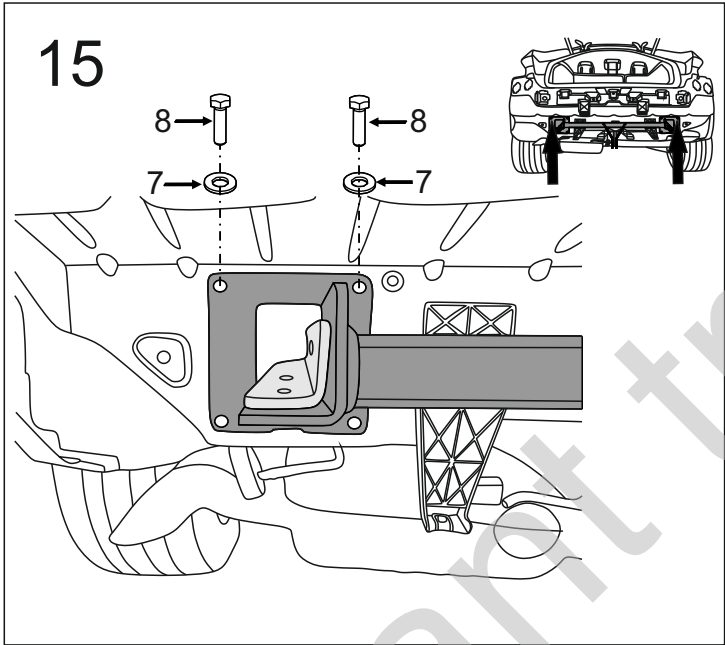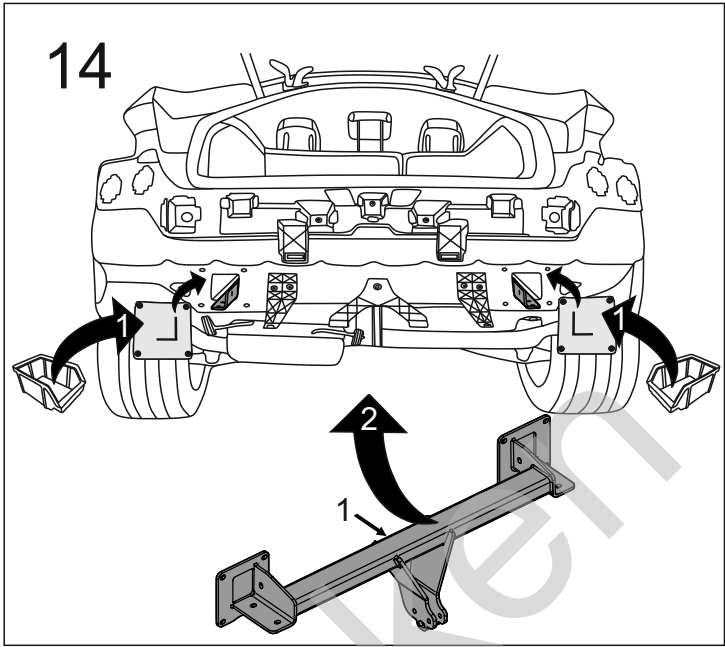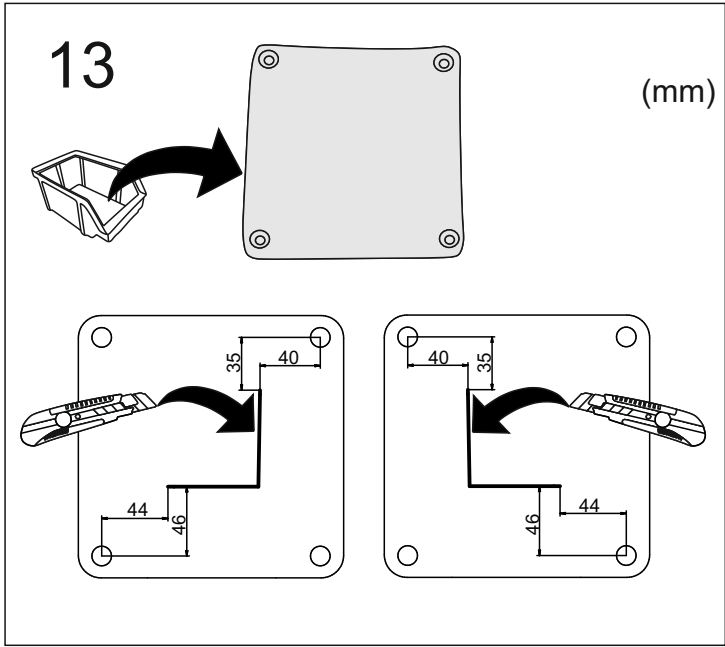


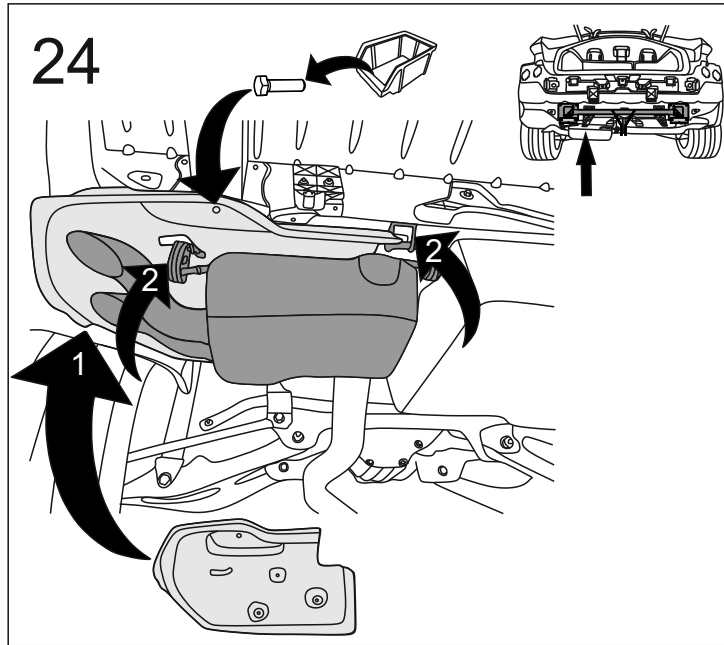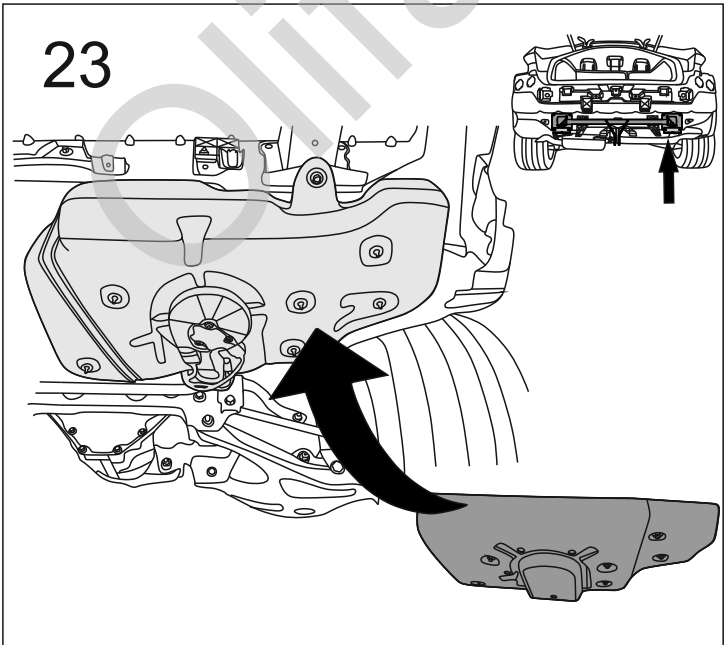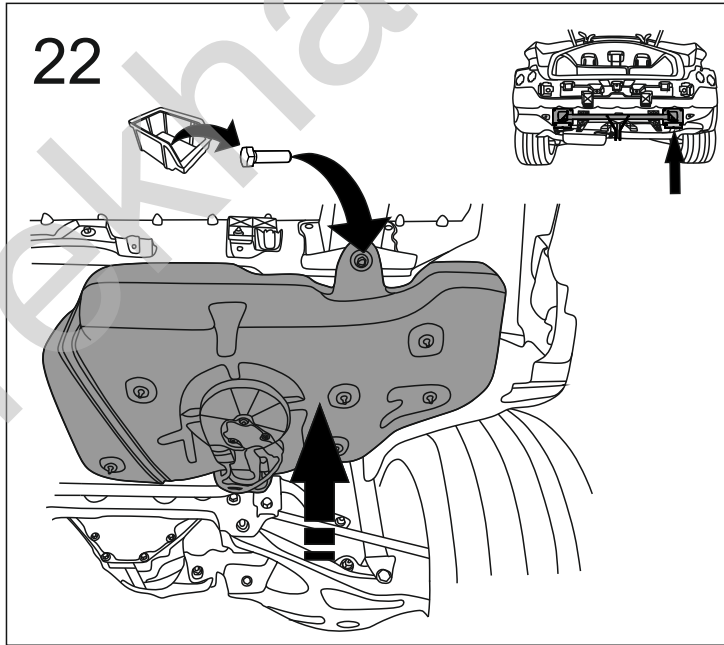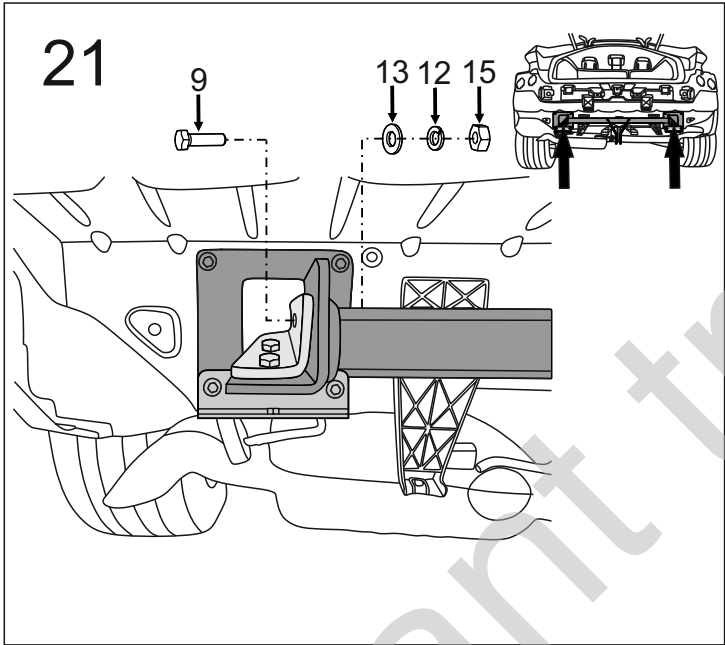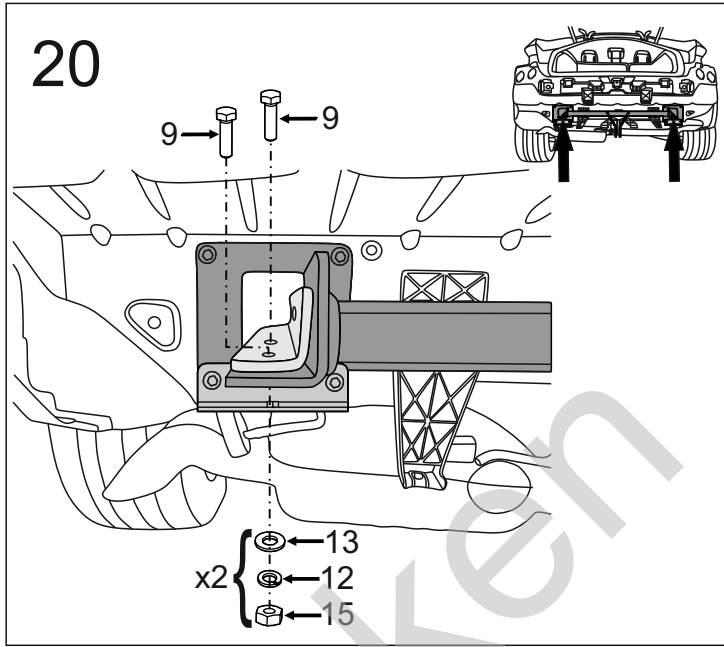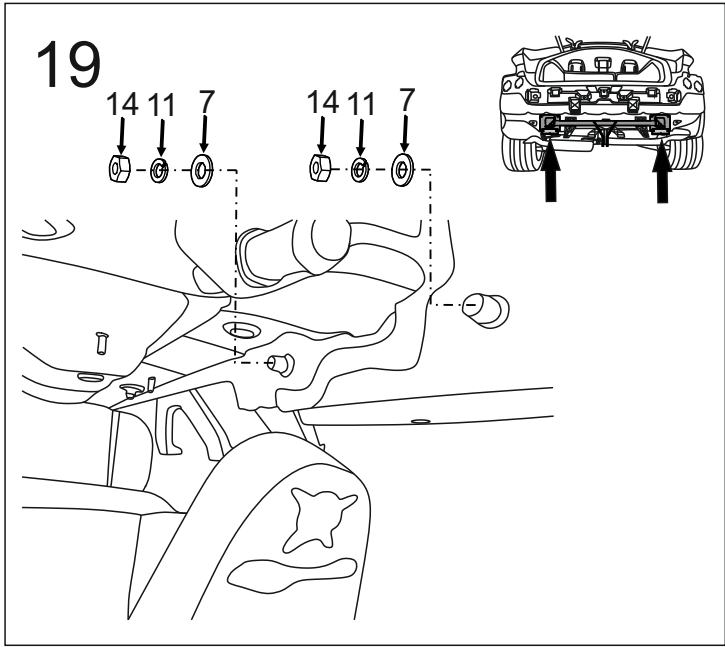


25 (mm)

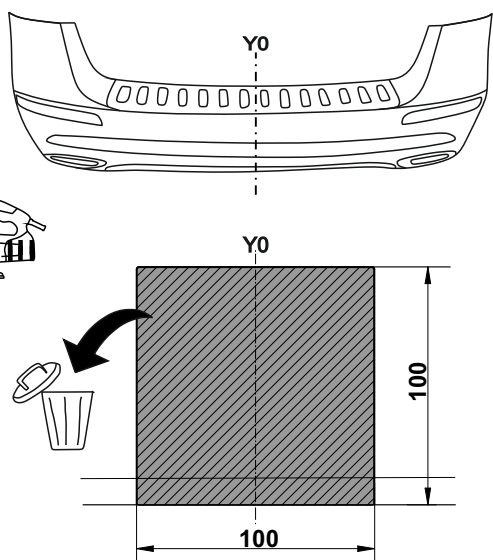


26

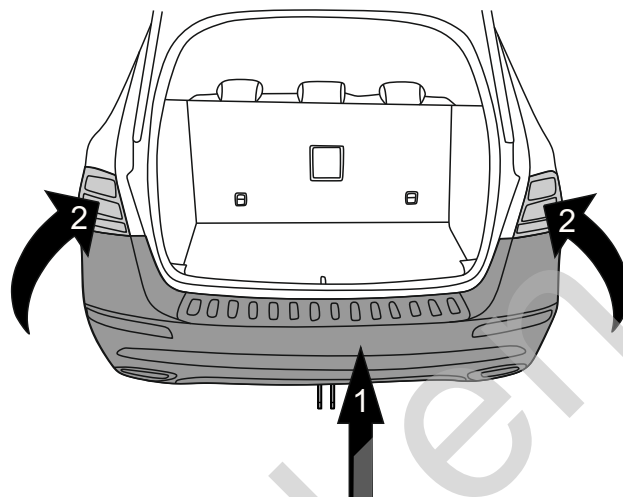


27

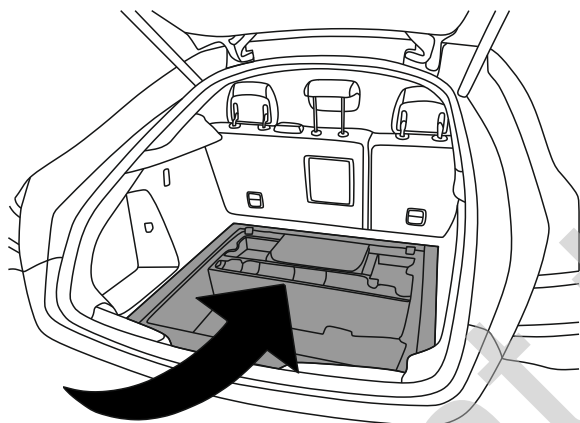


28

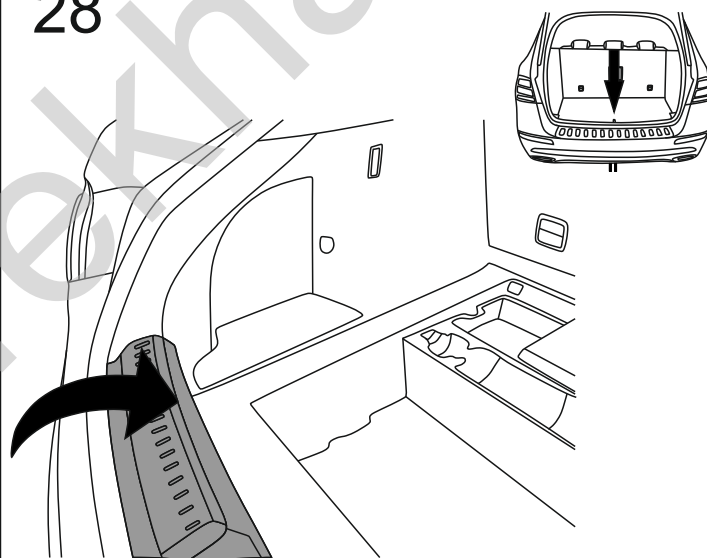


29

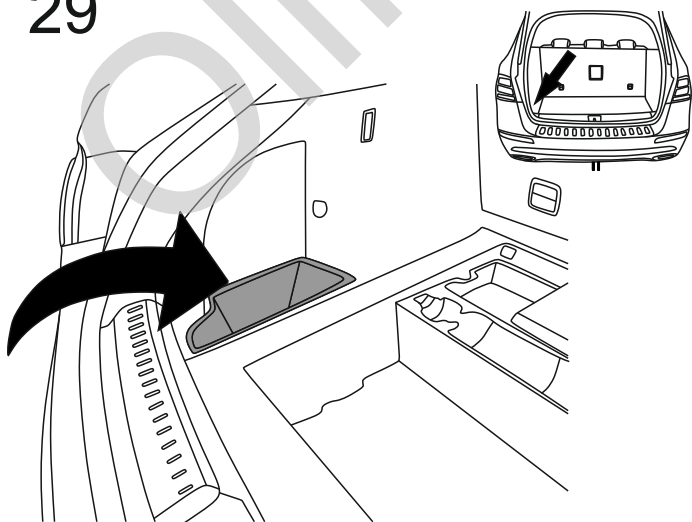

30

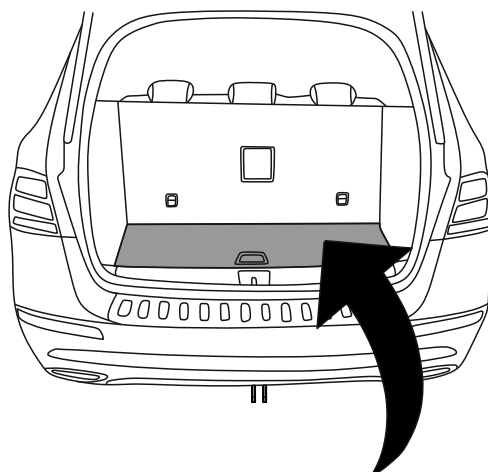

31

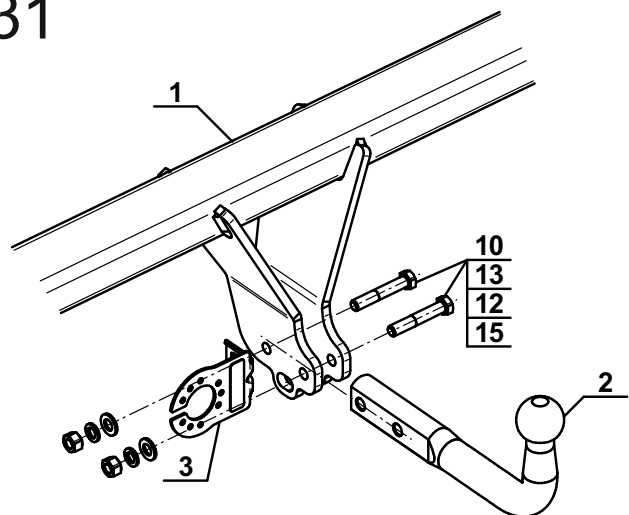

Olifant trekhaken