


MG 3
5D (+HEV)

(2024 - →)

M-277


- PL** **Zaczep Kulowy** Instrukcja montażu i eksploatacji
- GB** **Tow bar** Installation and operating instructions
- D** **Die Anhängerkupplung** Montage- und Gebrauchsanleitung
- ES** **Gancho de remolque** Las instrucciones de instalación y de operación
- RU** **Фаркоп** Инструкция по установке и эксплуатации ТСУ
- FR** **Attelage** Notice de montage et d'utilisation
- IT** **Gancio traino** Istruzioni di montaggio
- CZ** **Tažné zařízení** Návod na montáž a použití
- RO** **Cârlig de remorcare** Instrucția de montaj și exploatare
- SE** **Dragkulan** Monterings- och bruksanvisningar.

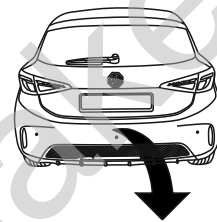

YES ☒ NO ☐



YES ☒ NO ☐

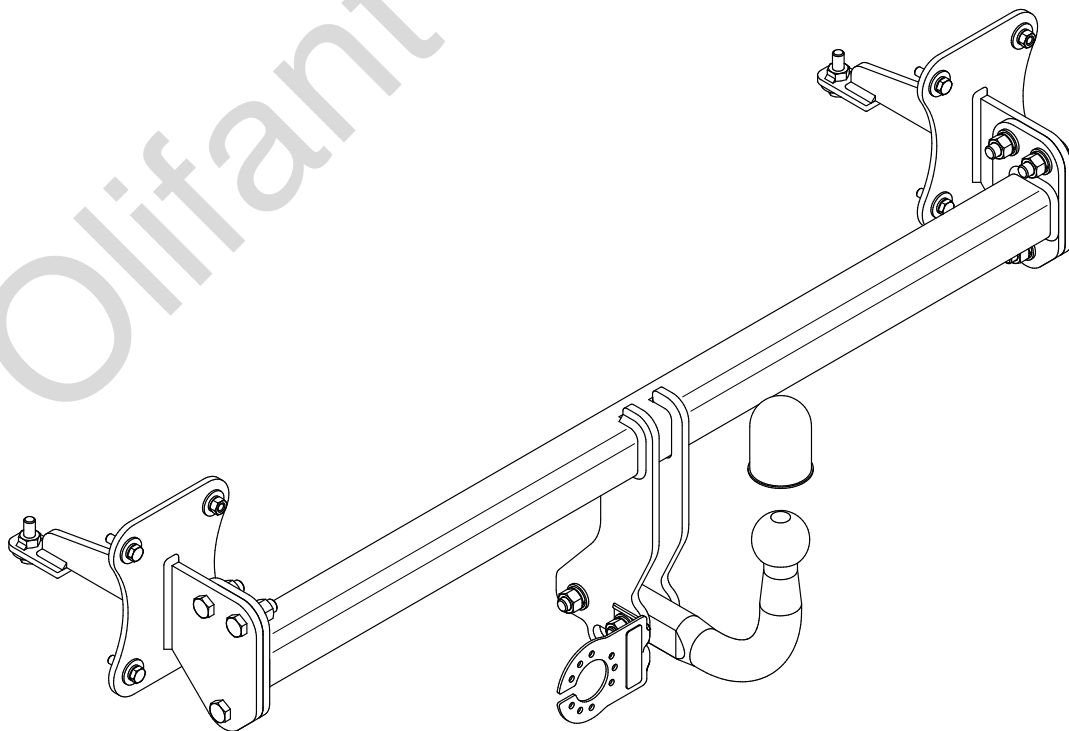



Typ: M-277

A50-X

E₂₀ 55R-03 7169

D = 5,95kN

S = 50kg

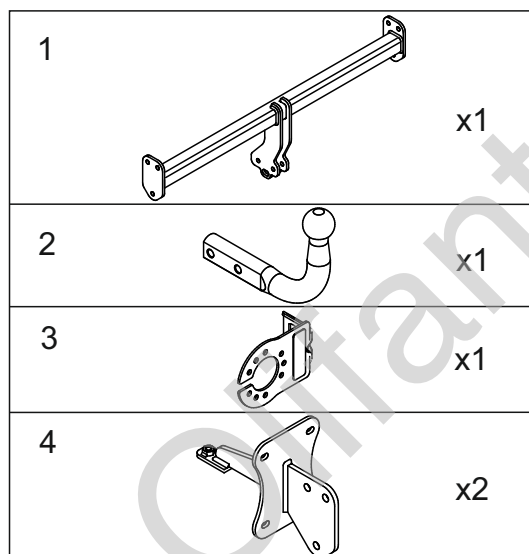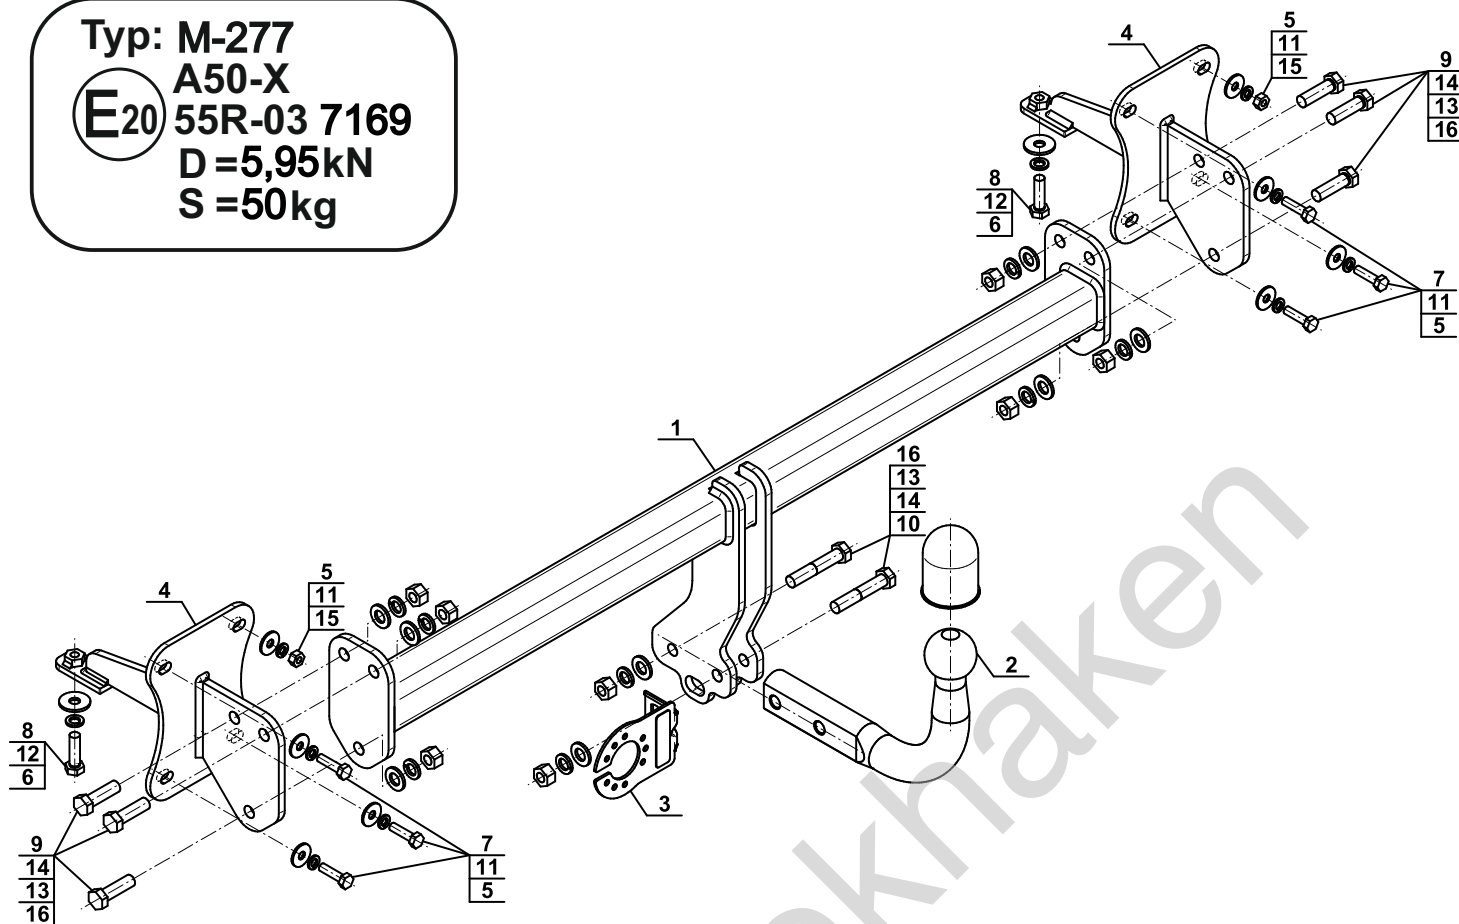


5		Ø24/Ø8,5x2	x8
6		Ø30/Ø10,5x3	x2
7		M8x30 (ISO 4017) (8.8)	x6
8		M10x35 (ISO 4017) (8.8)	x2
9		M12x40 (ISO 4017) (8.8)	x6
10		M12x65 (ISO 4014) (8.8)	x2
11		Ø8,2	x8
12		Ø10,2	x2
13		Ø12,2	x8
14		Ø13,0	x8
15		M8 (8)	x2
16		M12 (8)	x8




8.8	
M8 - 25 (Nm)	M14 - 135 (Nm)
M10 - 50 (Nm)	M16 - 200 (Nm)
M12 - 85 (Nm)	


1

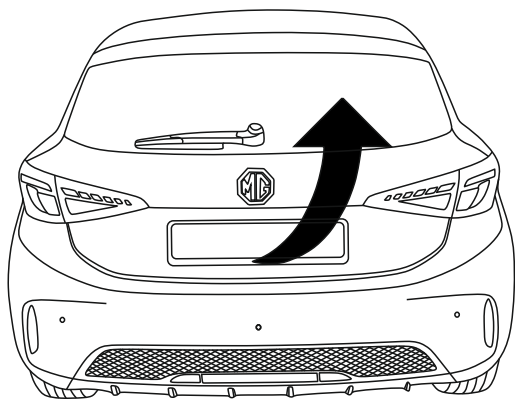


2

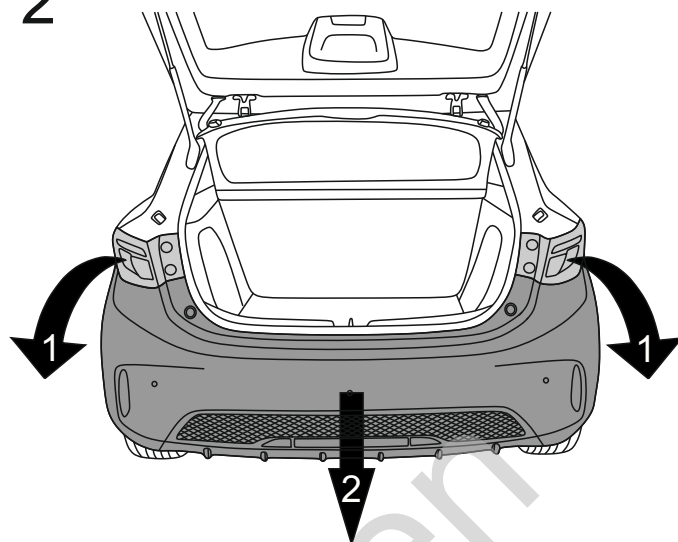


3

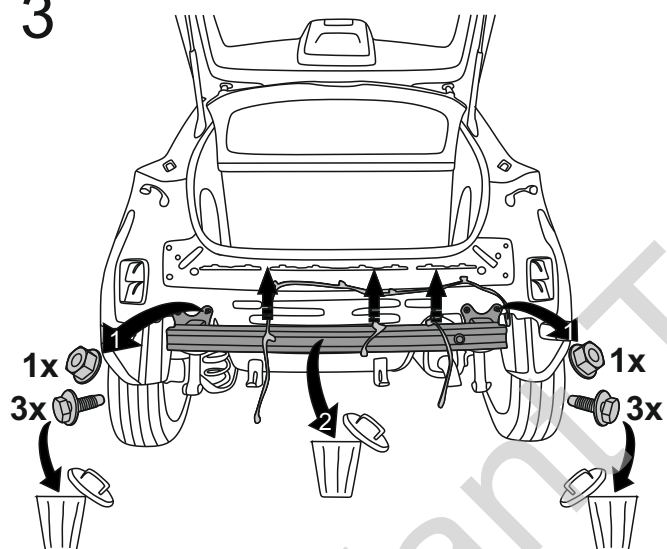


4






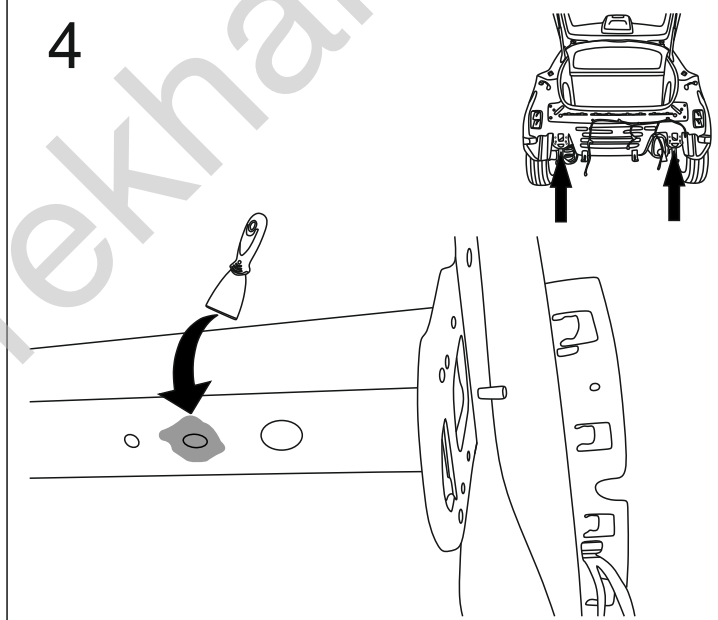


5

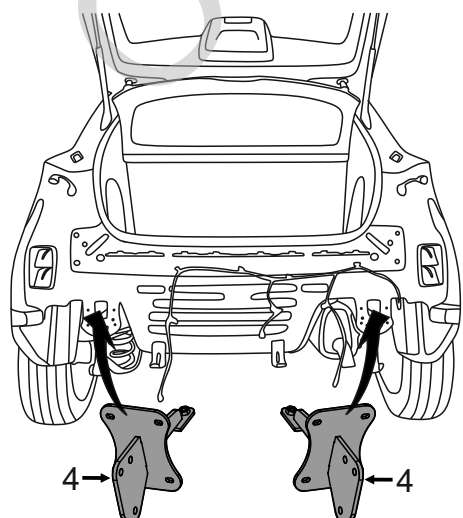


6

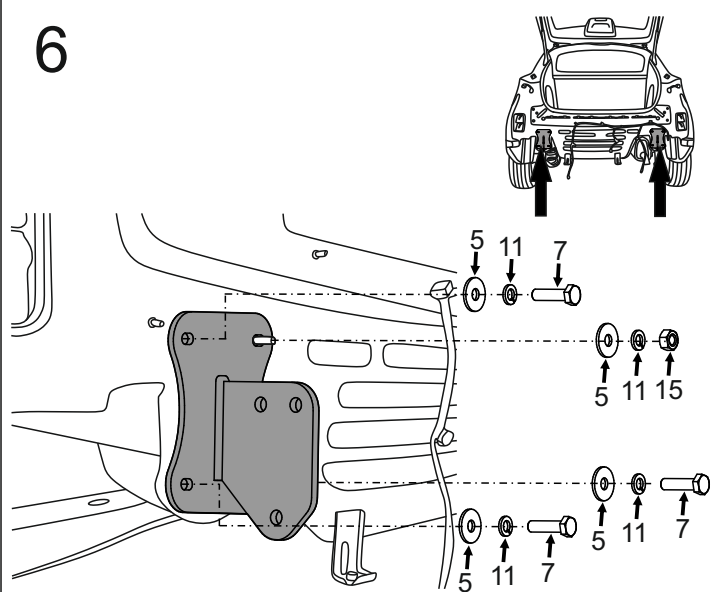

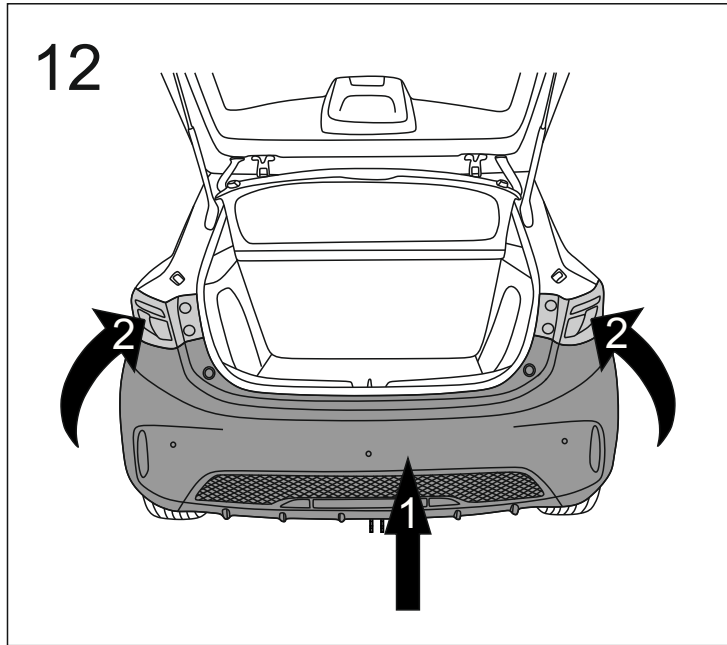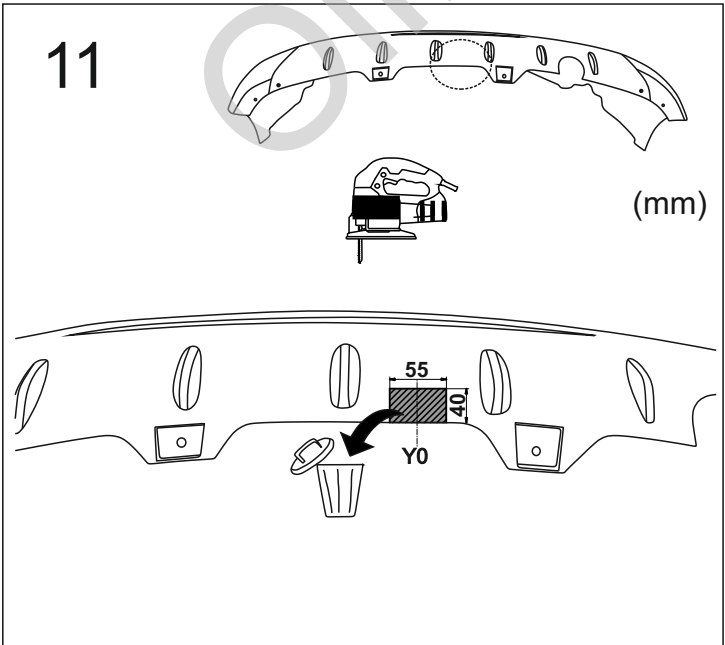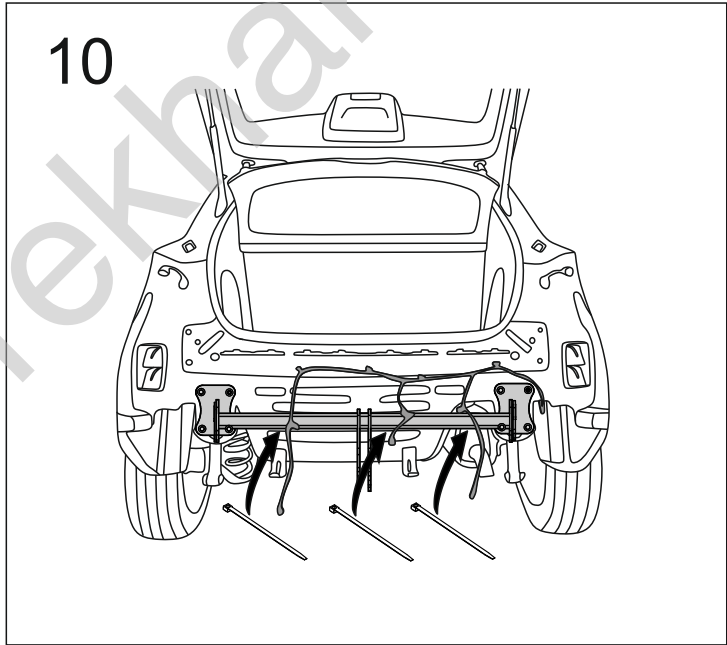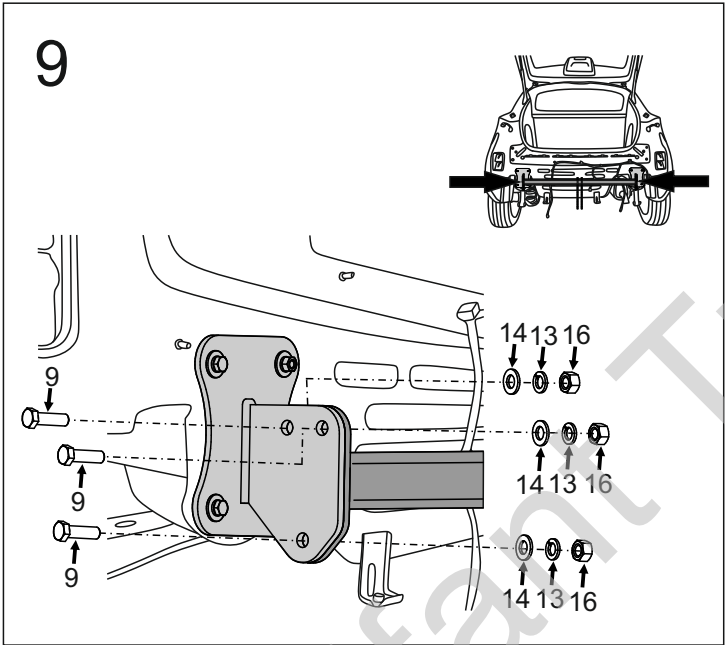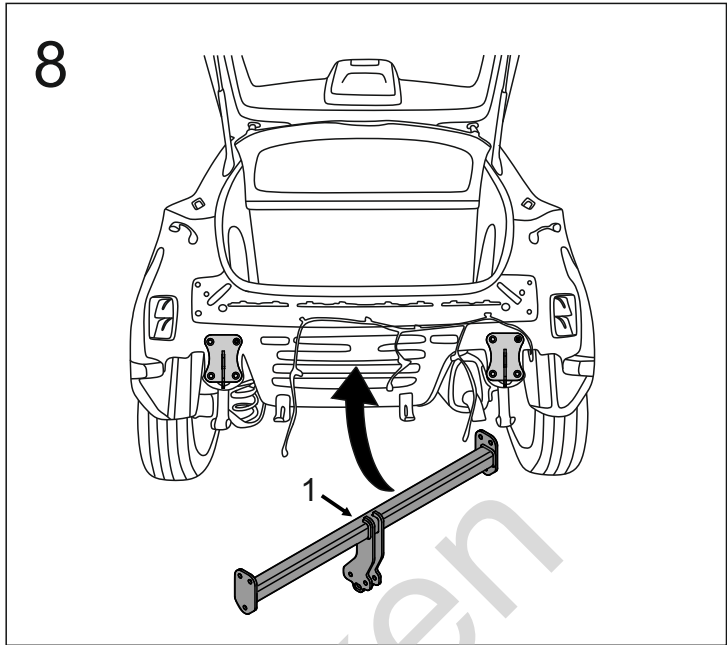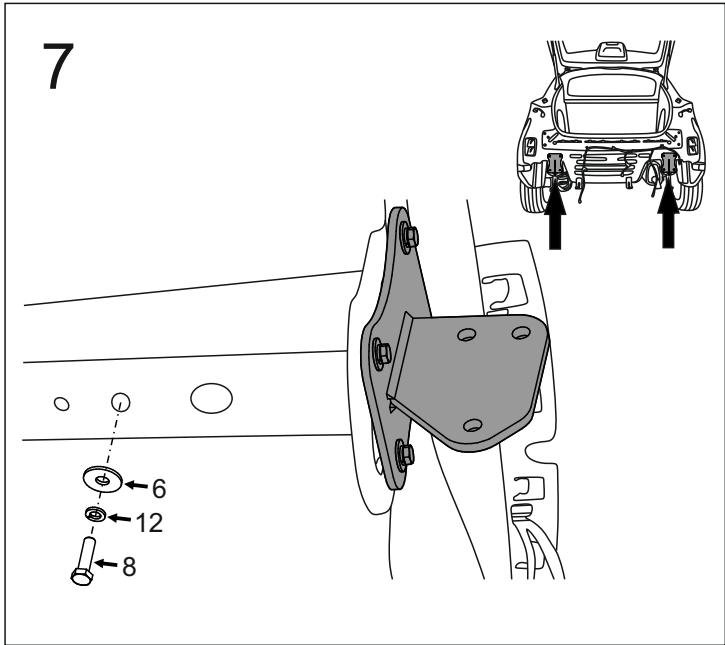

13

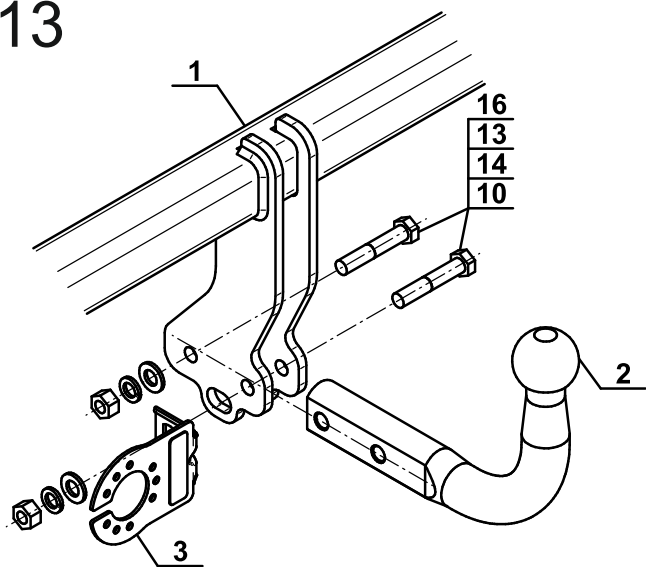

Olifant Trekhaken