




TREKHAKEN • ATTELAGES • ANHÄNGERVORRICHTUNGEN • TOWBARS • ENHANCES • ANHÆNGERTRÆK

Montagehandleiding | instructions de montage | Einbauanleitung | Mounting instruction
Instrucciones de montaje | monteringsvejledning



Skoda Kodiaq 2 (PS7)

01/'24-

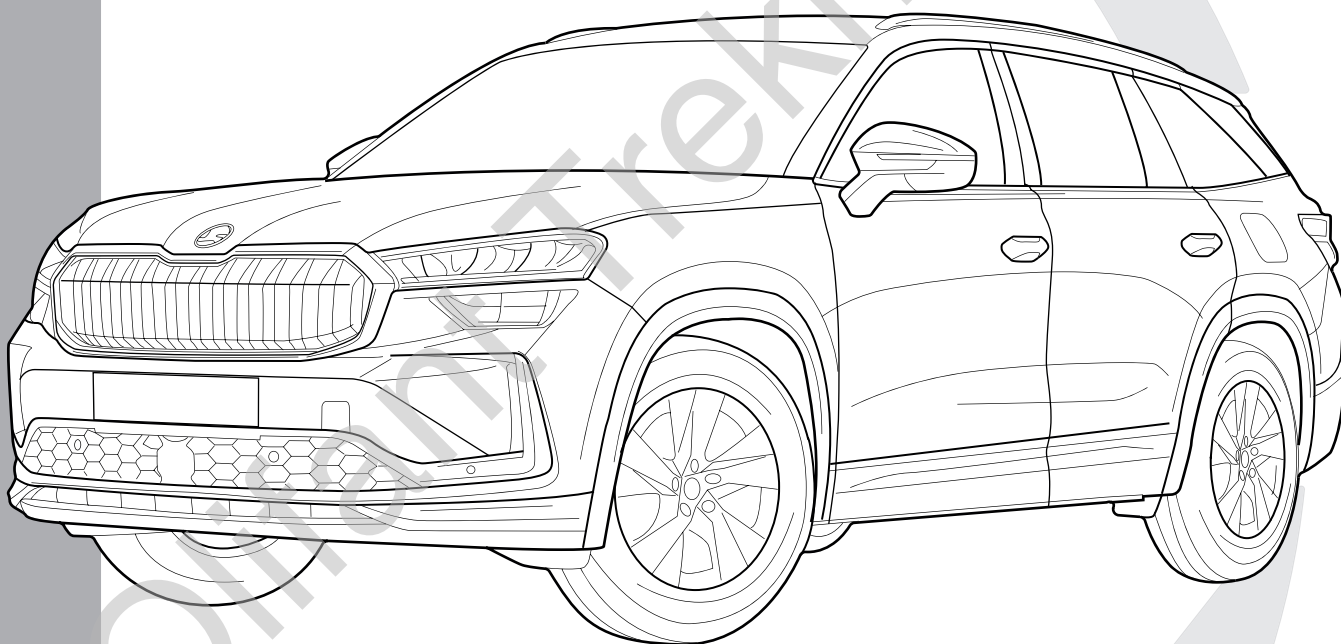

SCAN FOR THE
LATEST VERSION



Gdw nv. Hoogmolenwegel 23 | B | 8790 Waregem | T +32 (0)56 60 42 12 | F +32 (0)56 60 01 93 | gdw@gdwtowbars.com | www.gdwtowbars.com

REVISIENUMMER 000 | N° REVISION 000

11•04•2025

2896T60

MADE BY



D 12,80

F

E6

BELGIUM

S 100

EC-N°

55R-02 1865

REF N°

2896T60

SERIAL N°

XXXX

DESCRIPTION

Skoda Kodiaq 2 (PS7) 01/'24-



$$D = \frac{\text{max kg (car)} \times \text{max kg (trailer)}}{\text{max kg (car)} + \text{max kg (trailer)}} \times 0.00981 \leq 12,80 \text{ kN}$$





$$S = \text{hook load} \leq 100 \text{ kg} \quad \text{trailer load} \leq 2500 \text{ kg}$$



See the Certificate Of Conformity (COC) of your vehicle or contact your dealer to verify the max. trailer weight of your car!



See the user manual of the vehicle for correct use of bicycle carriers!

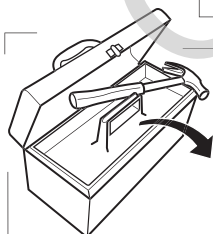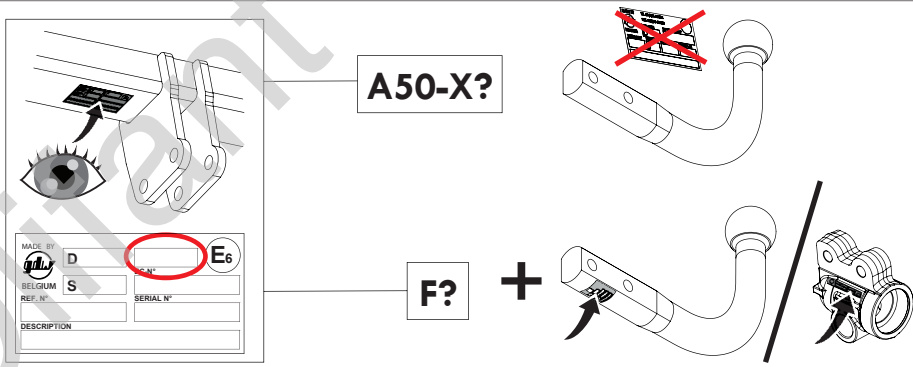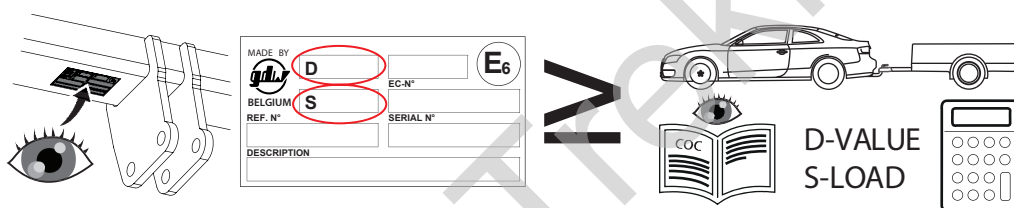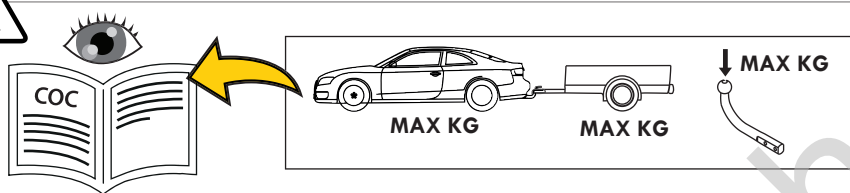





13


17

19

TX15

TX25




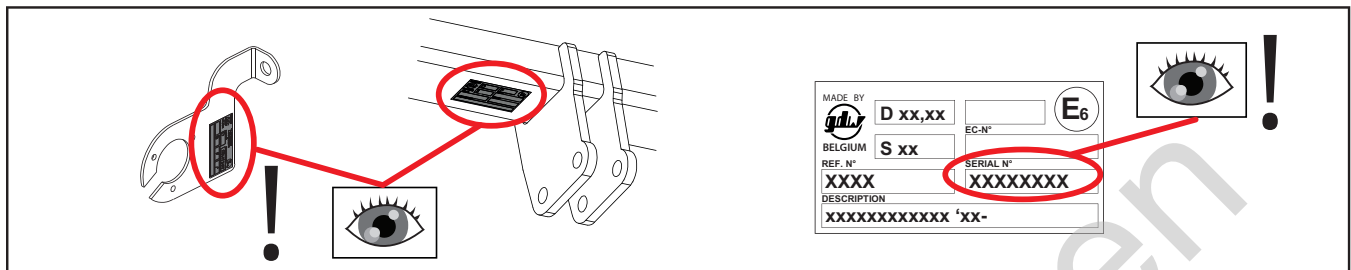





helpdesk@gdwtowbars.com


+32 56 62 77 79





Monday	08:00 - 12:00	12:30 - 16:30
Tuesday	08:00 - 12:00	12:30 - 16:30
Wednesday	08:00 - 12:00	12:30 - 16:30
Thursday	08:00 - 12:00	12:30 - 16:30
Friday	08:00 - 12:00	12:30 - 15:30

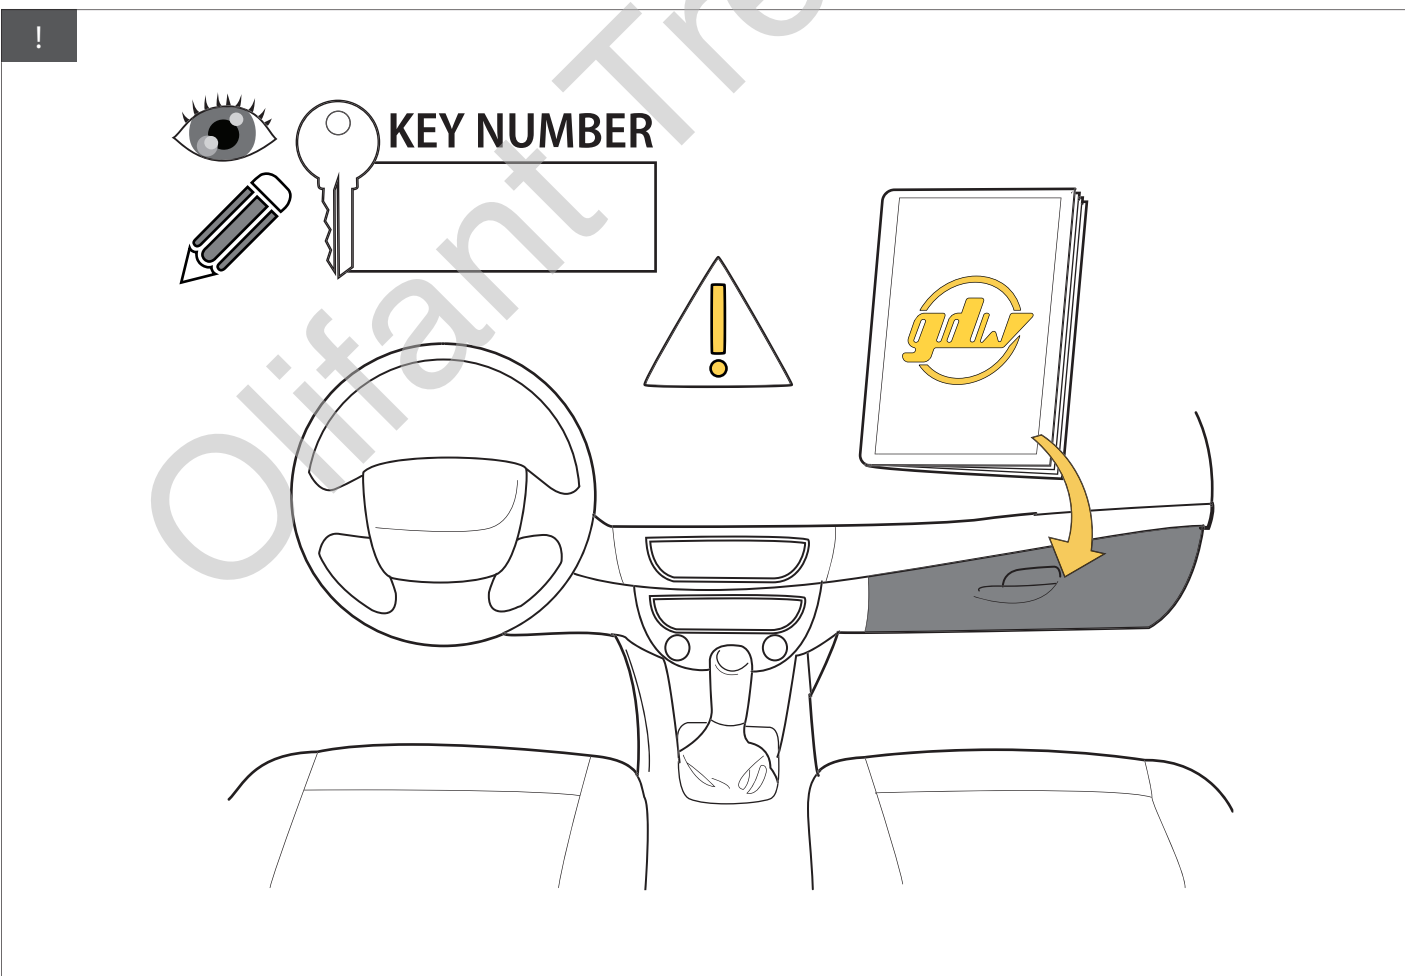

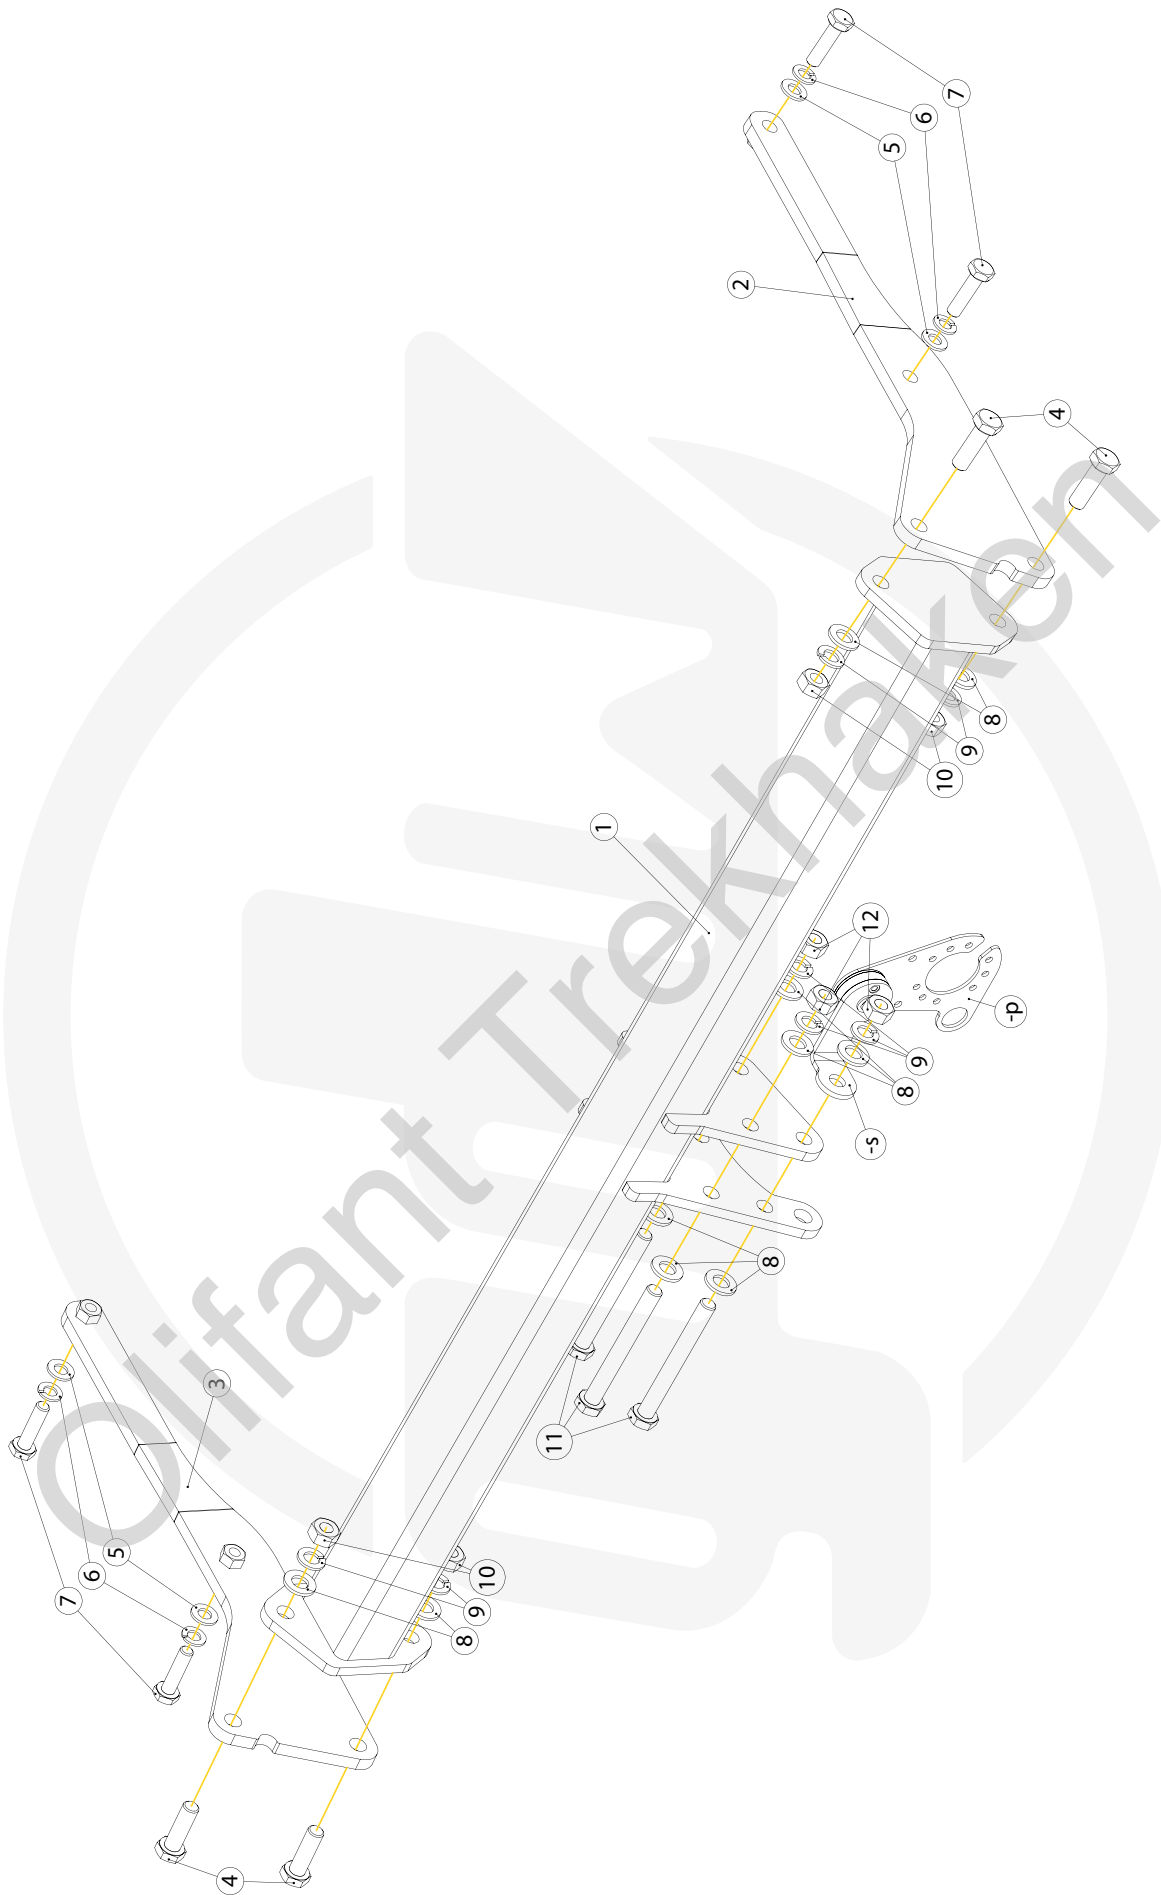


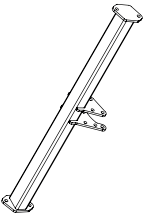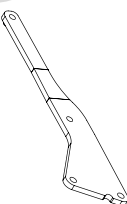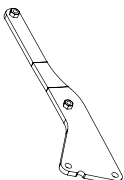1		X1	GDW REF. 2896T60
2		X1	GDW REF. 2
3		X1	GDW REF. 3
4		X4	DIN 933-M12X40-10.9
5		X4	DIN 125A-10.5X20X2
6		X4	GROWER VSK-M10
7		X4	DIN 933-M10X40-10.9
8		X10	DIN 125A-13X24X2.5
9		X7	GROWER VSK-M12
10		X4	DIN 934-M12-KL10
11		X3	DIN 931-M12X110
12		X3	DIN 934-M12
-P		X1	GDW REF. 900.053
-S		X1	GDW REF. 900.101


-P		X1	GDW REF. P46
↑		X1	DIN985-M6
↑		X2	6,2 X 15,4 X 1,6 (NYLON)
↑		X1	GDW REF. 718.16.002
↑		X1	GDW REF. 718.16.003
↑		X1	GDW REF. 908.094
↑		X1	DIN933-M6 X 30
↑		X1	GDW REF. 908.101

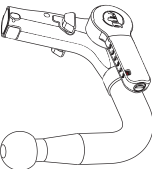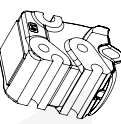Geleverd met - Livré avec - Delivered with Geliefert mit - Elementos adjuntos-Leveres med		
	X1	GDW REF. 960.V0404
↑ 	X1	GDW REF. 740.200
	X1	GDW REF. 912.003
↑ 	X1	GDW REF. 740.112
↑ 	X1	GDW REF. 740.111
	X1	GDW REF. 740.12X X= LAST NUMBER ON KEY
	X1	GDW REF. 718.15.001
	X1	GDW REF. SYST60-10
↑ 	X3	DIN931-M12X110-8.8
↑ 	X3	DIN128A-M12
↑ 	X6	DIN125A-M12
↑ 	X3	DIN934-M12




1

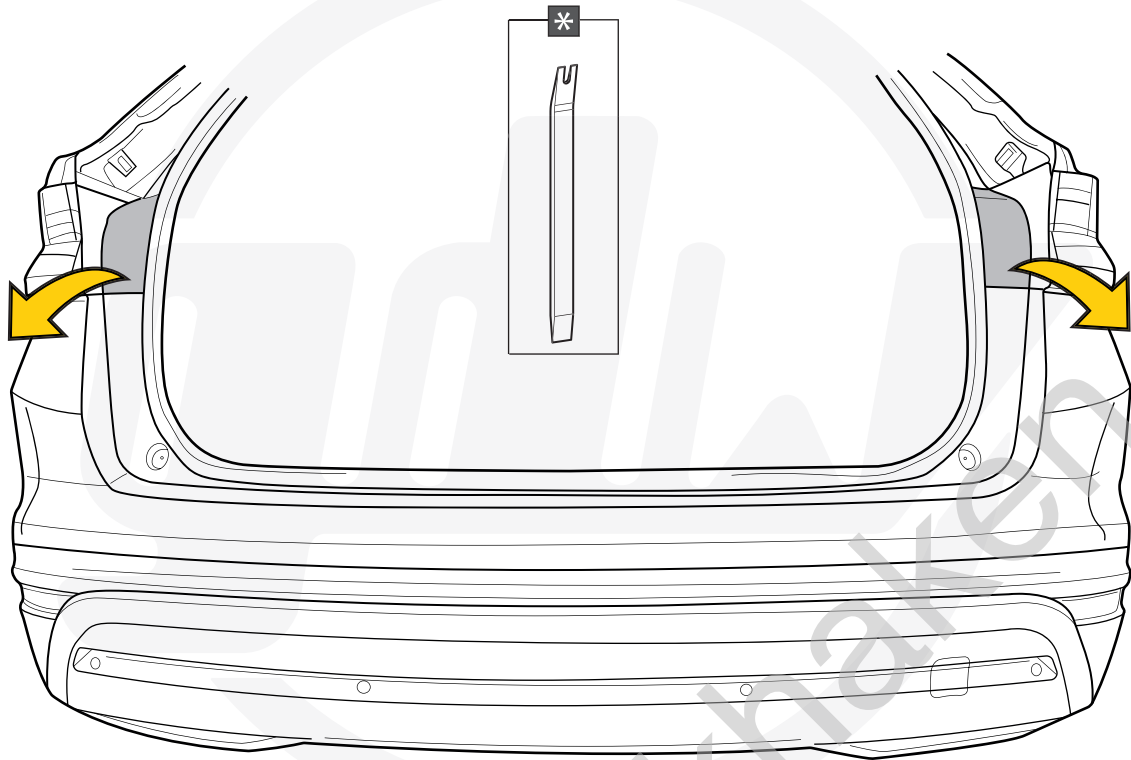





2


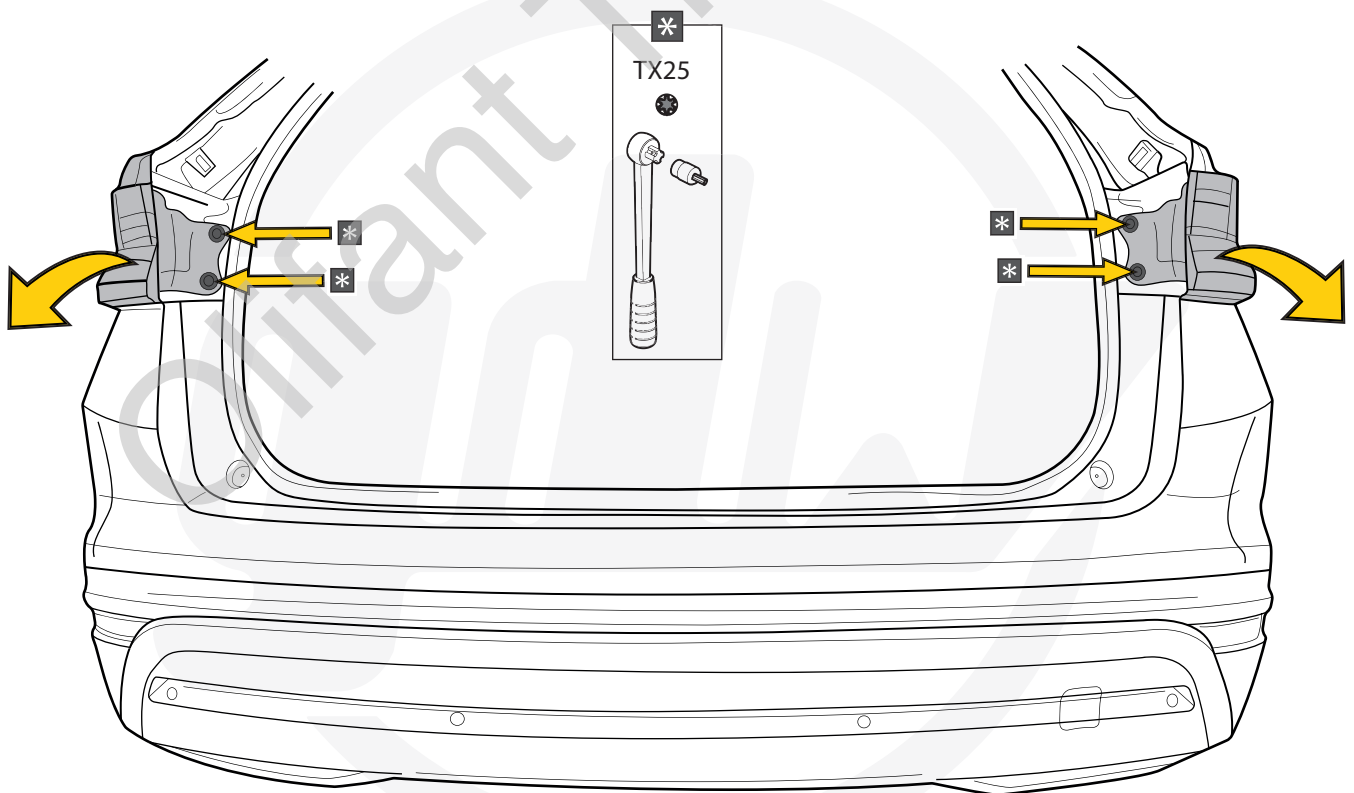




3

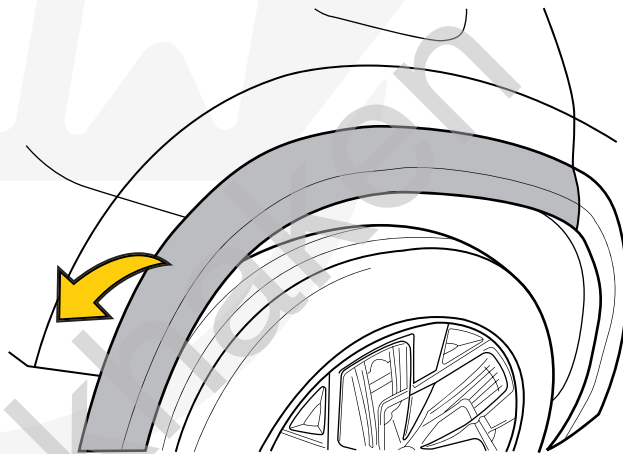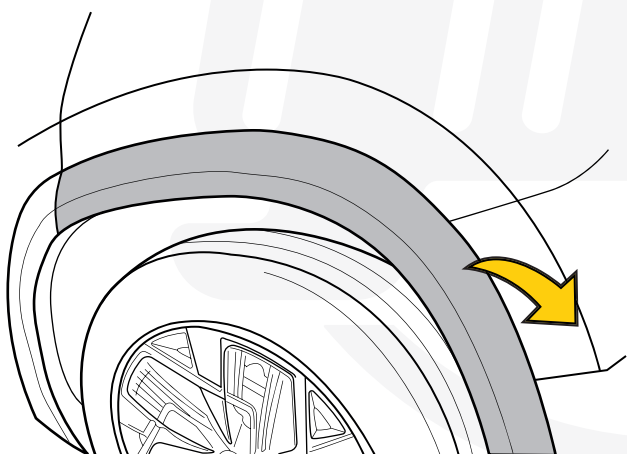
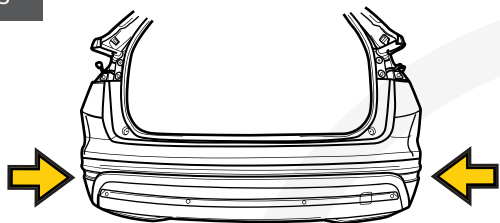


4

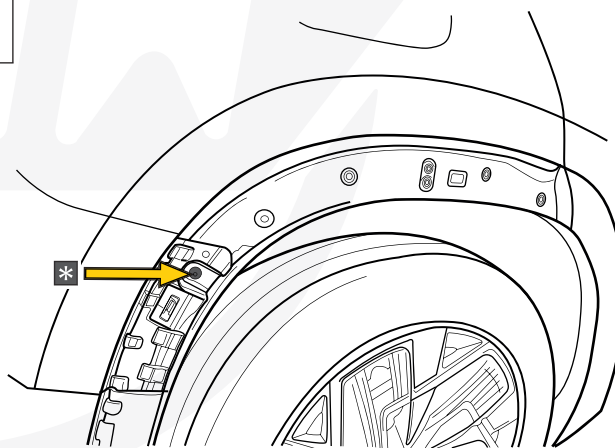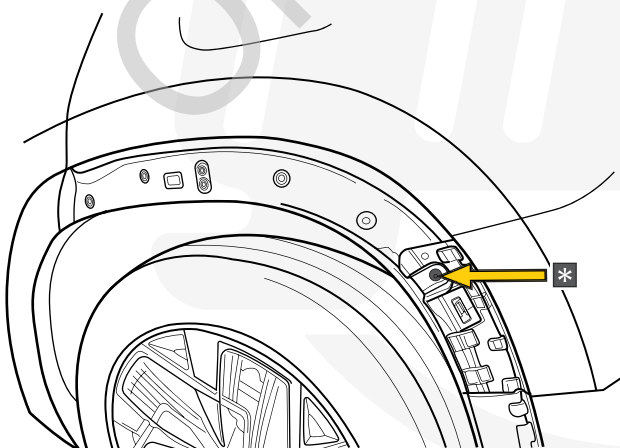
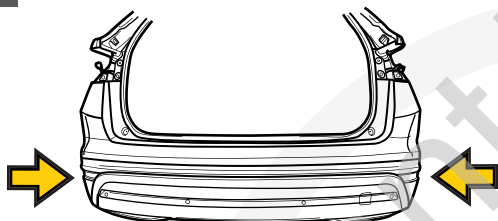


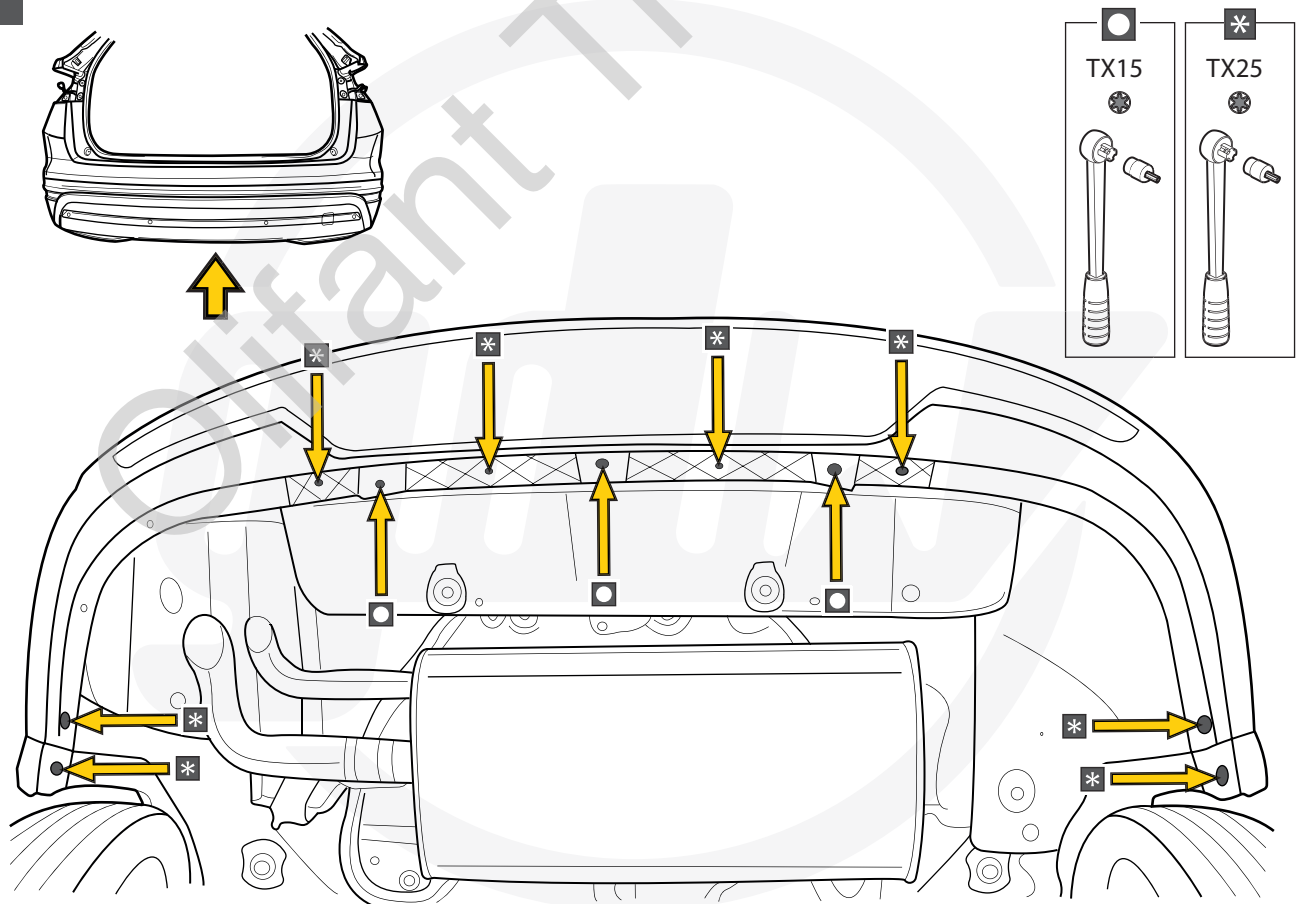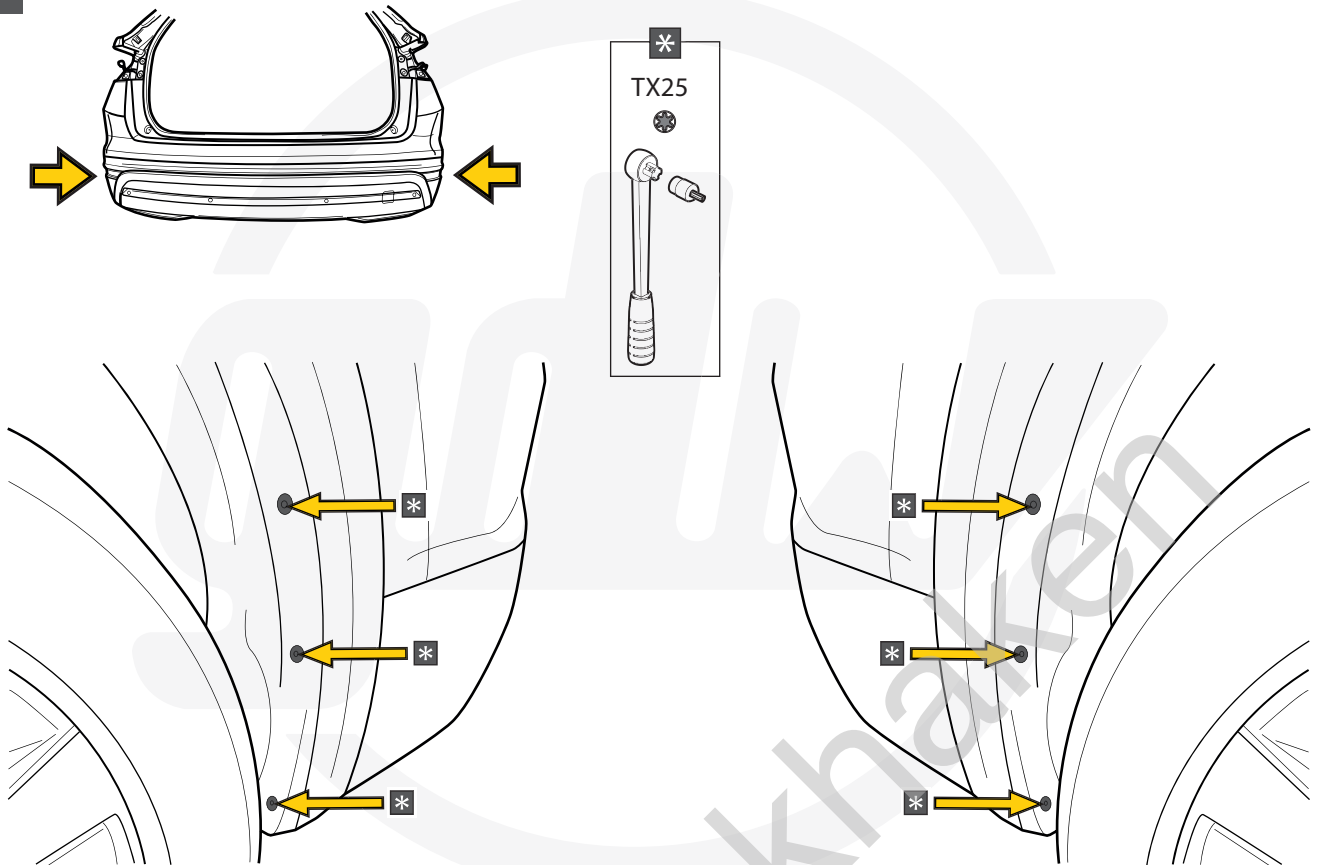

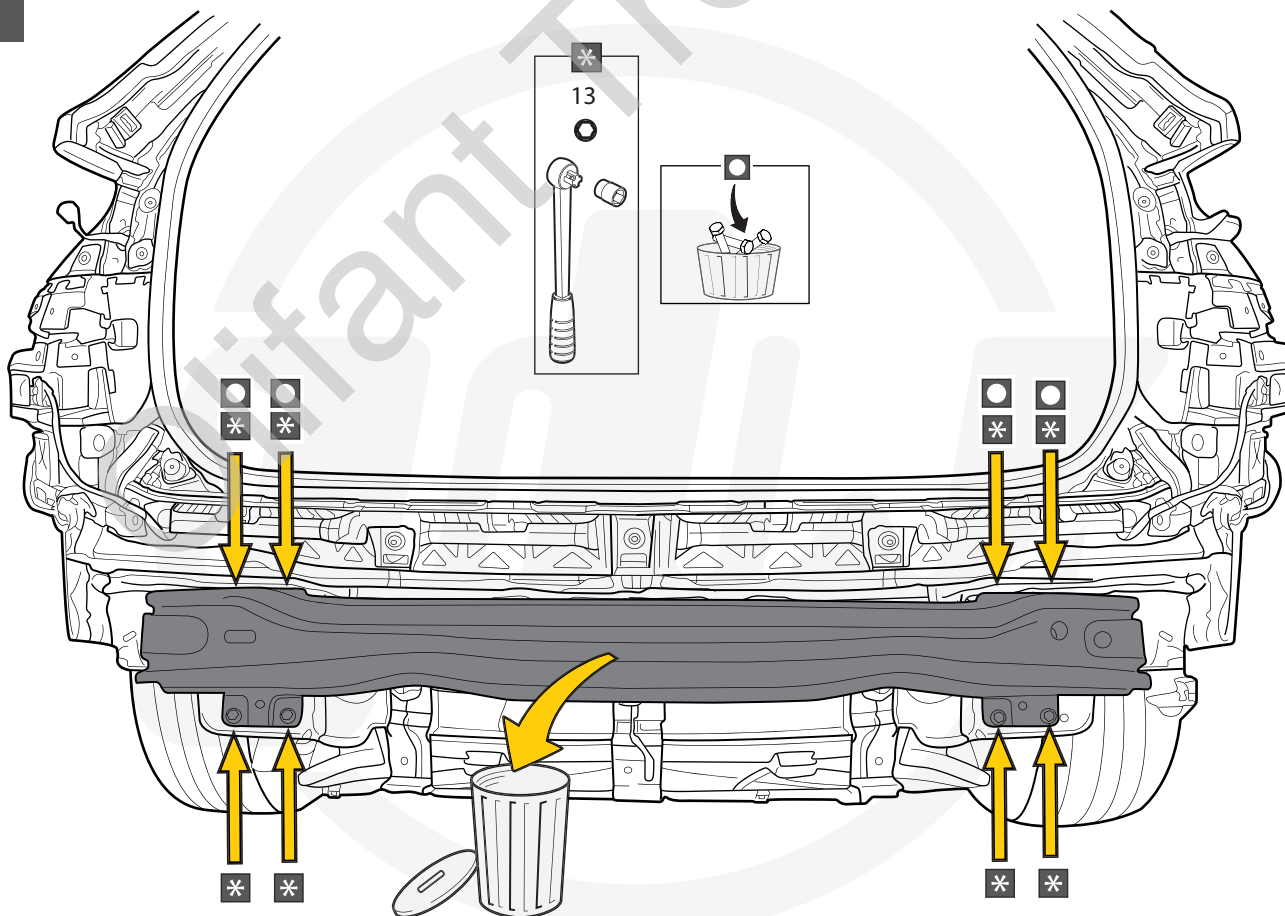
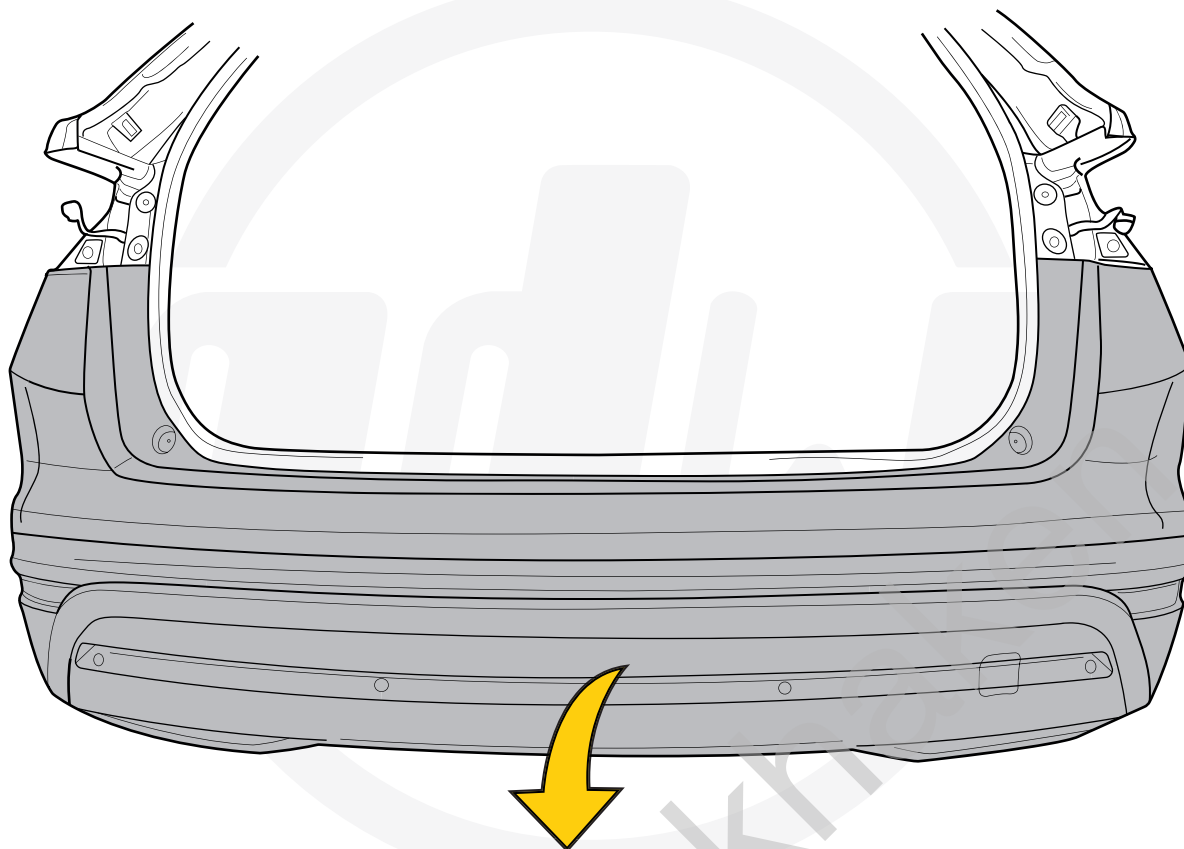


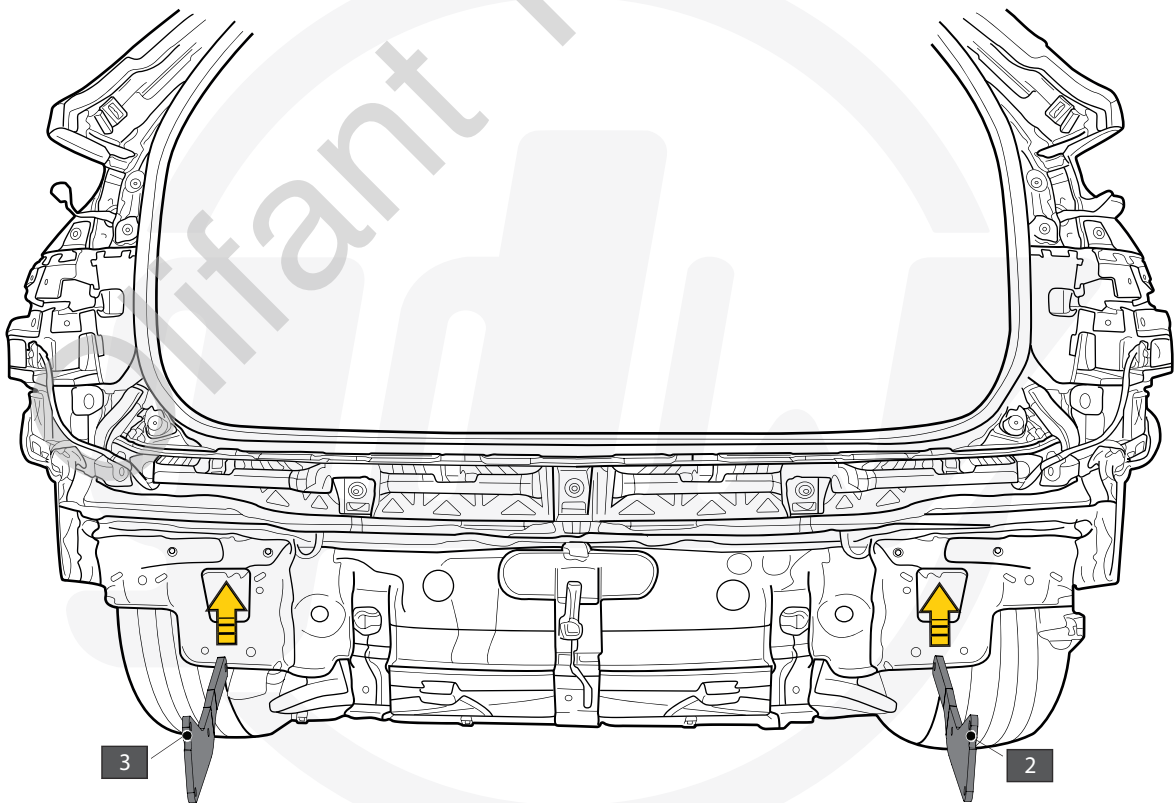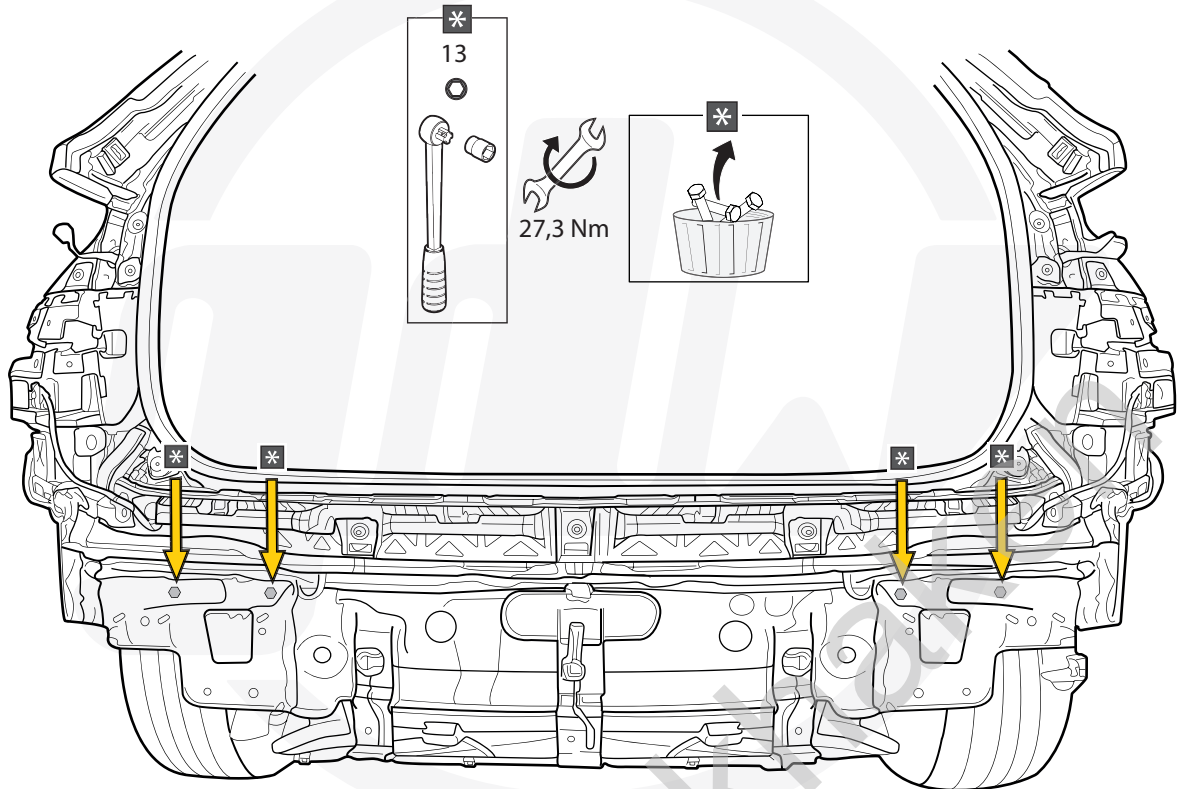



11

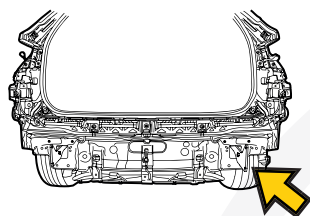



79,0 Nm

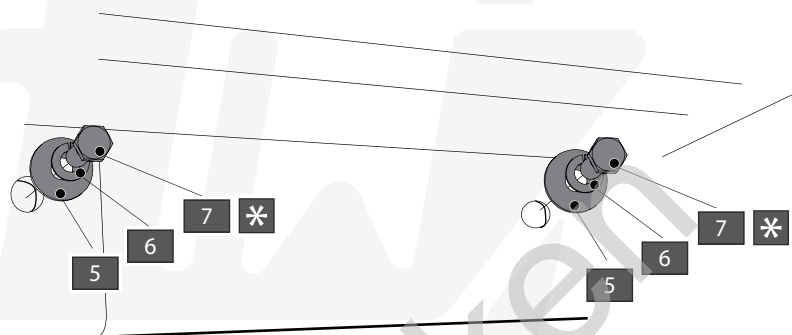
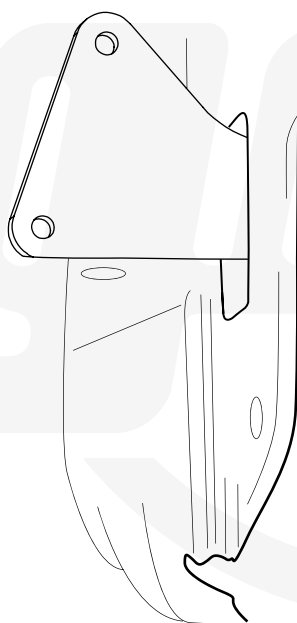


12




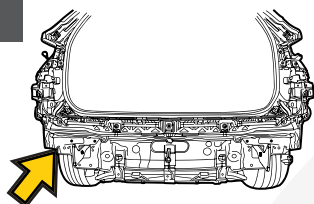




79,0 Nm

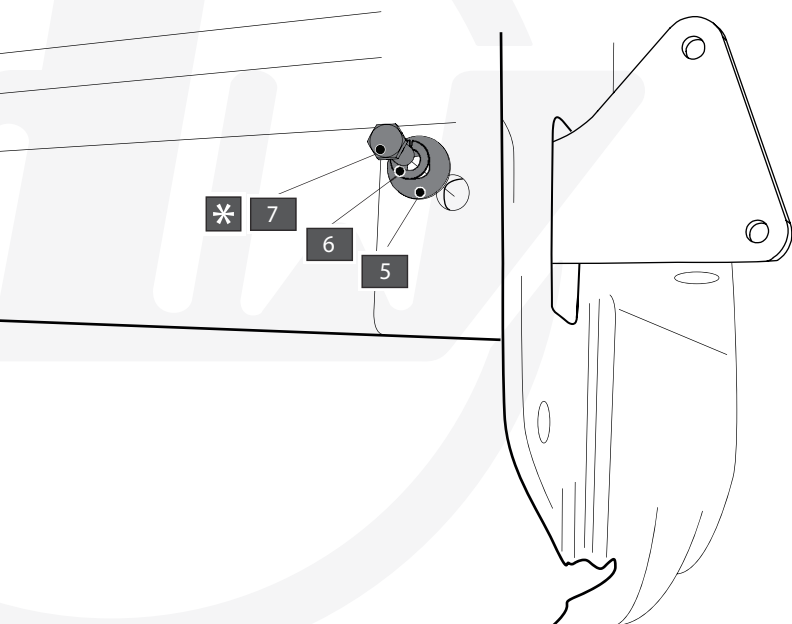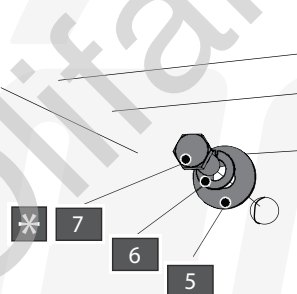


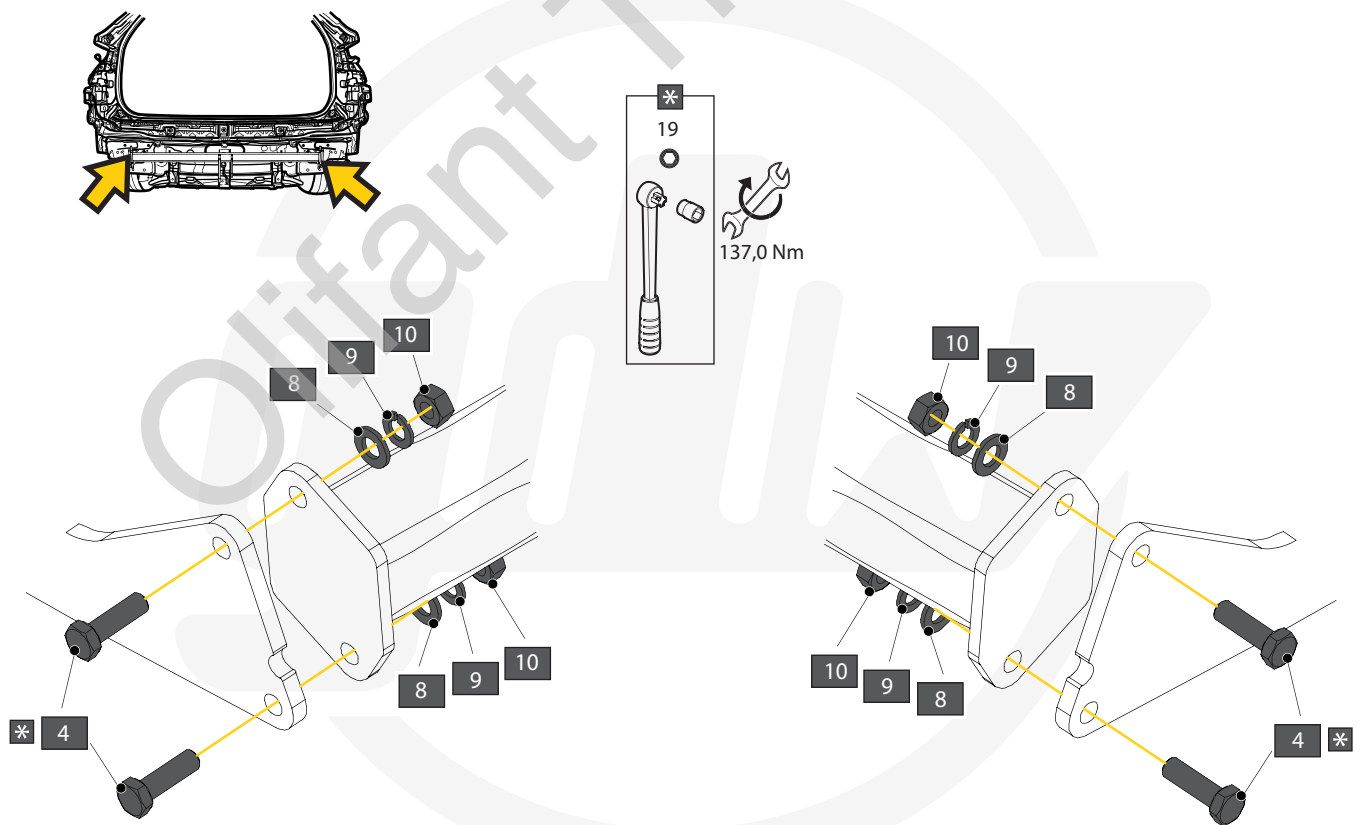
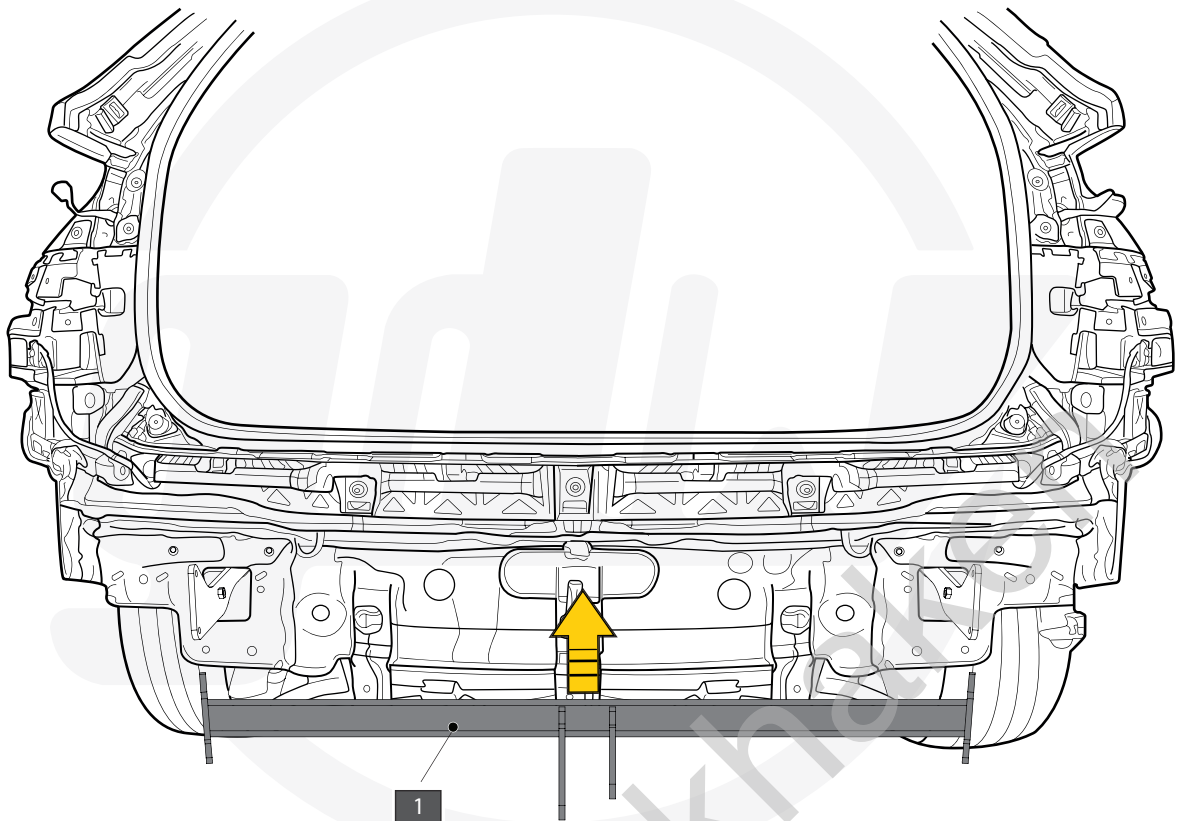


USE THIS CUT IF THERE IS NO STANDARD CUT;
OTHERWISE, USE THE STANDARD CUT + 10MM EXTRA
ON THE LEFT SIDE

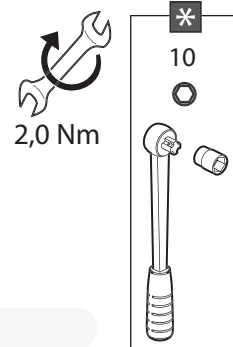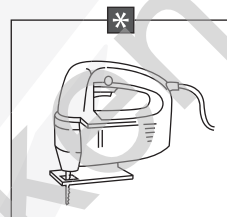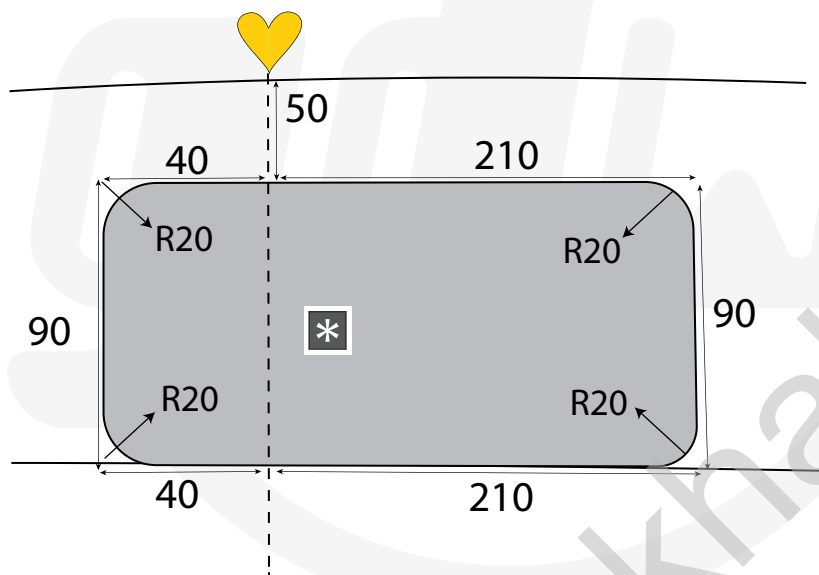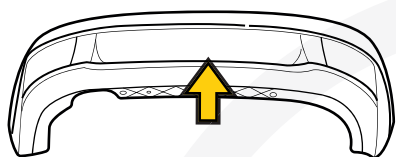


A		X1	GDW REF. 908.101
B		X1	DIN985-M6
C		X2	6,2 X 15,4 X 1,6 (NYLON)
D		X1	GDW REF. 718.16.002
E		X1	GDW REF. 718.16.003
F		X1	GDW REF. 908.094
G		X1	DIN933-M6 X 30

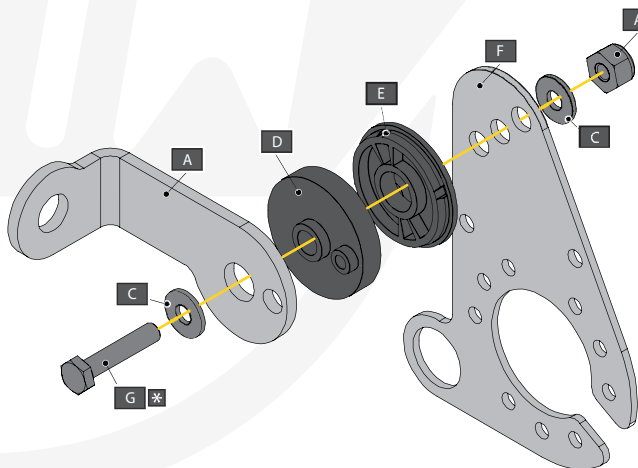

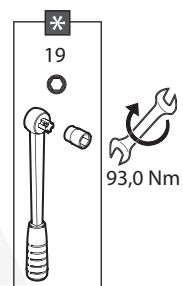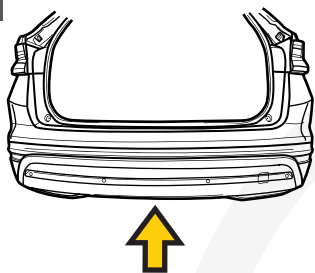

A



X1 GDW REF. 912.003

B



X3 DIN931-M12X110-8.8

C



X3 DIN128A-M12

D



X6 DIN125A-M12

E



X3 DIN934-M12

*

11

8

A

8

9

12

-p

