





TREKHAKEN • ATTELAGES • ANHÄNGERVORRICHTUNGEN • TOWBARS • ENHANCES • ANHÆNGERTRÆK • GANCI DI TRAINO

Montagehandleiding | instructions de montage | Einbauanleitung | Mounting instruction
Instrucciones de montaje | monteringsvejledning | istruzioni di montaggio




BMW X3(G45) 08/'24-


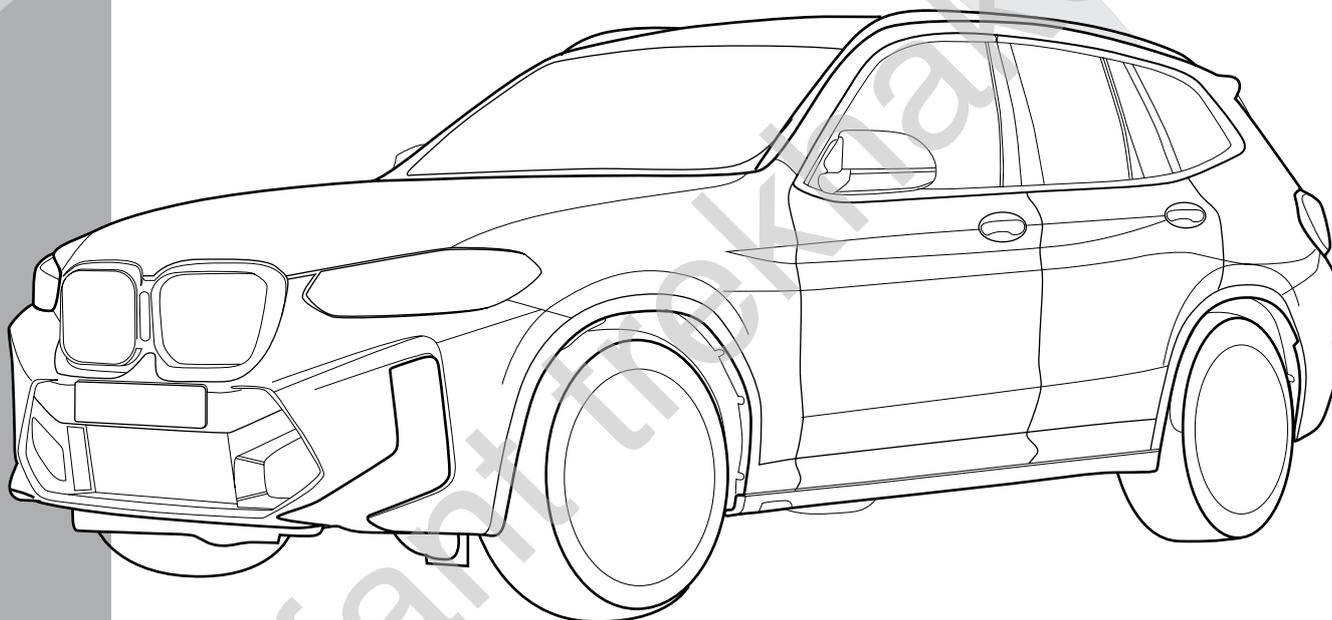


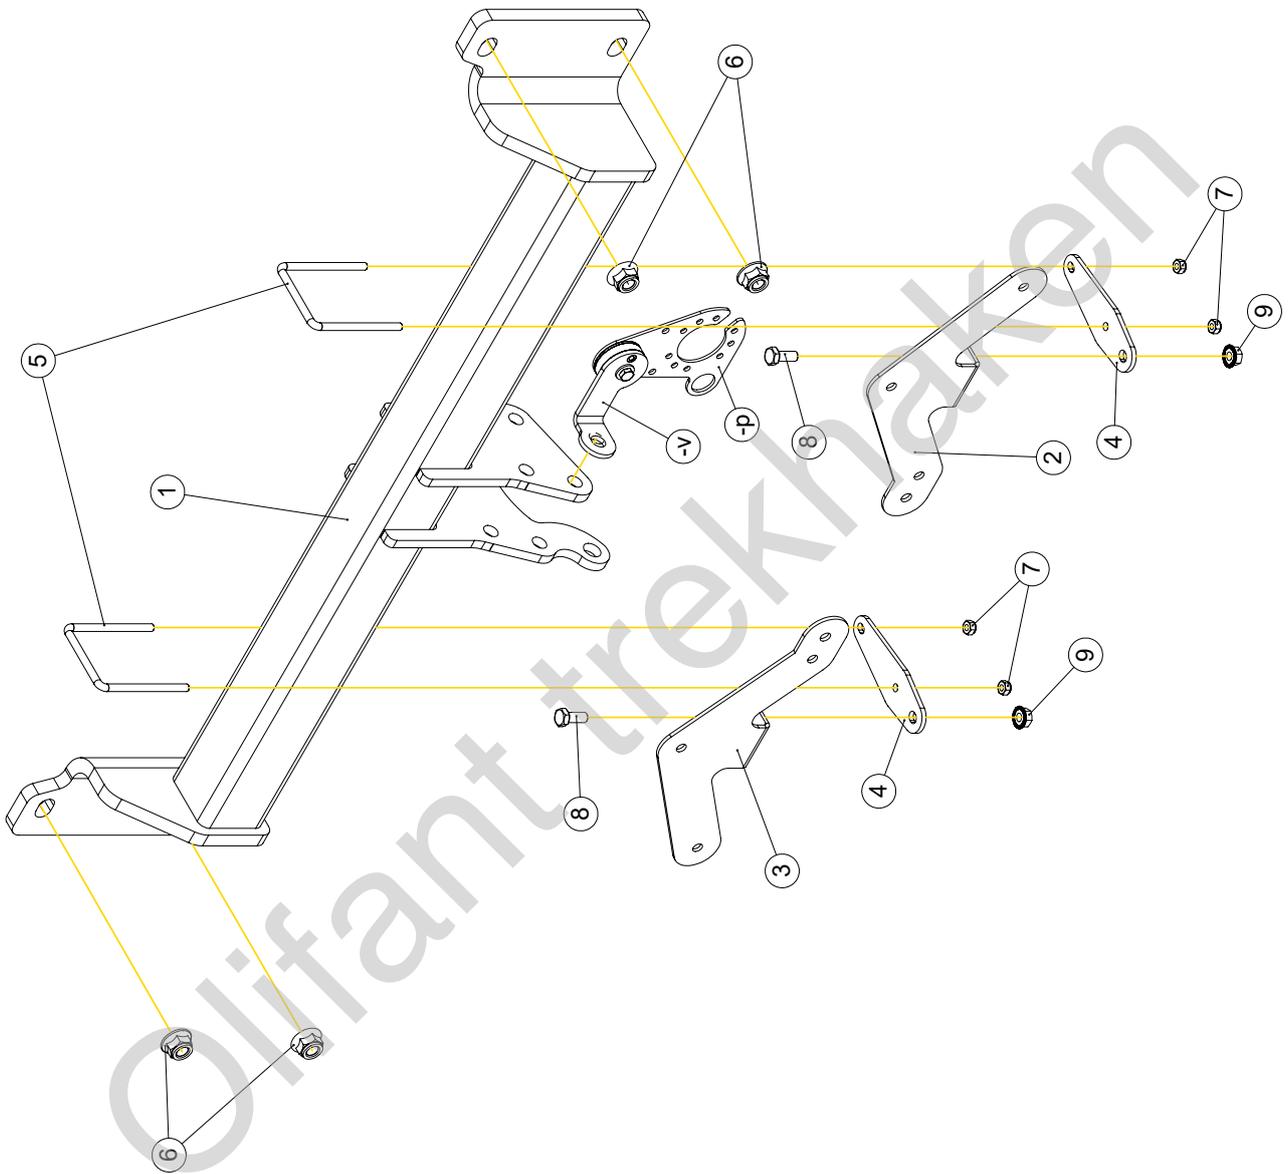




1

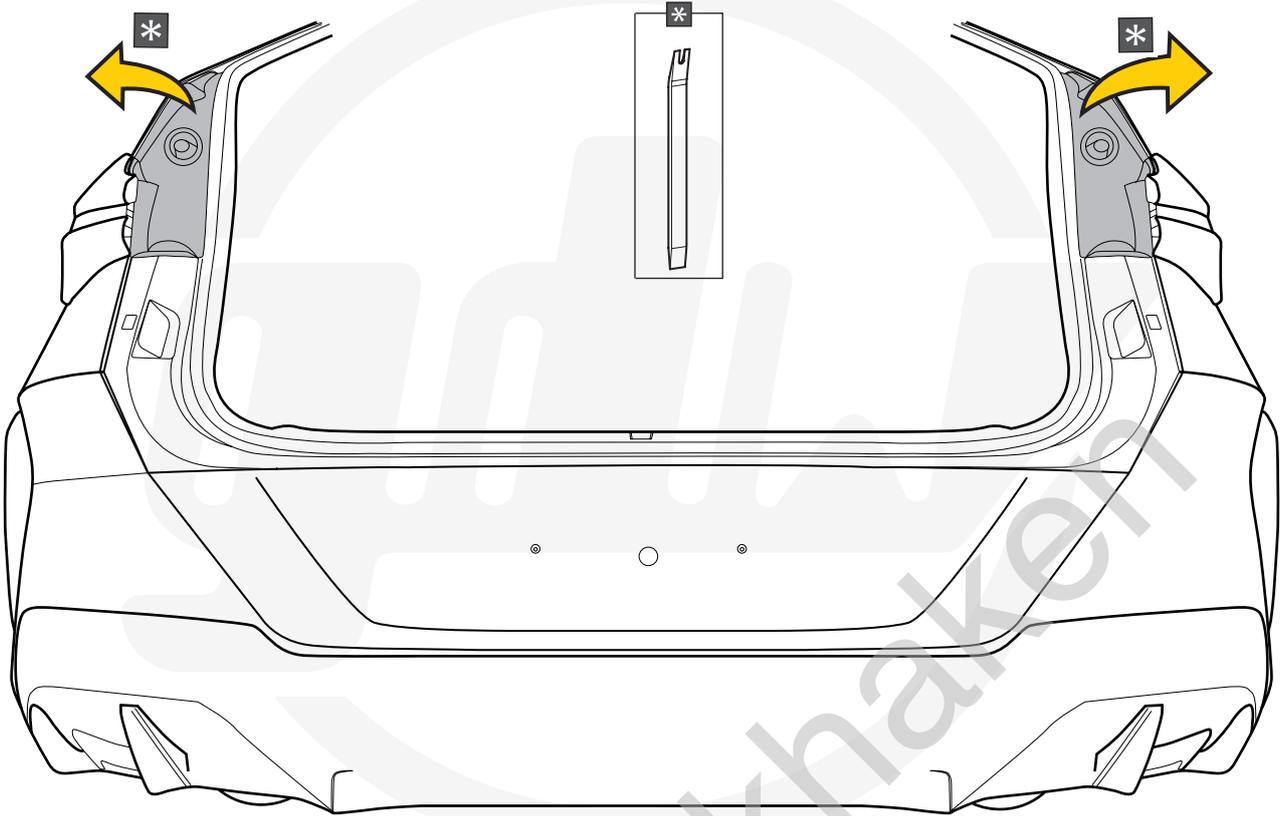




2

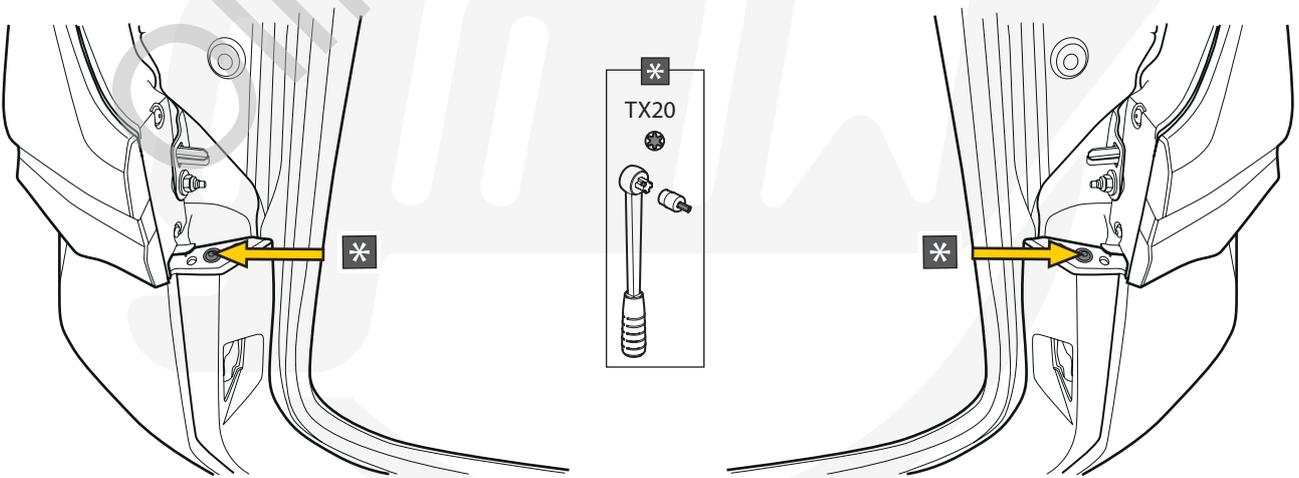
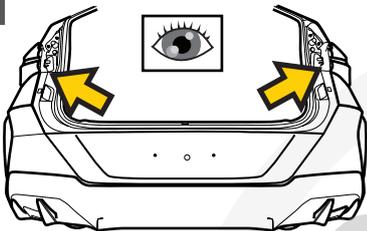


3

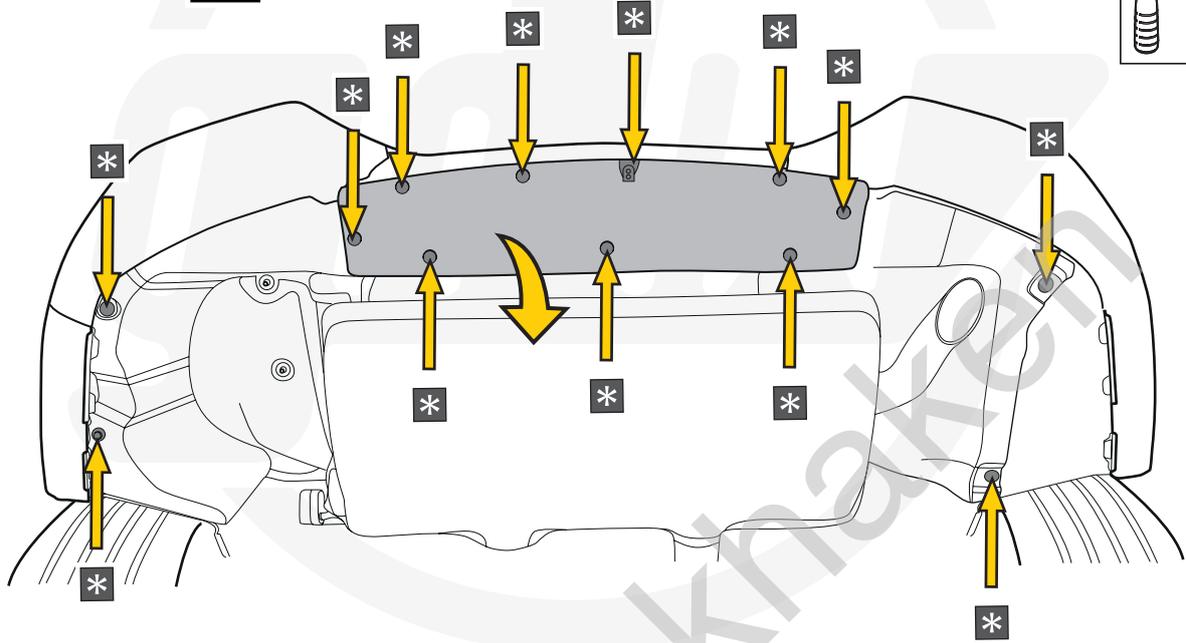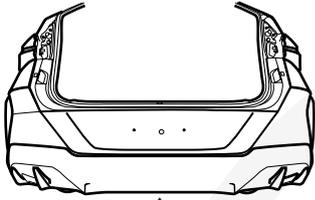


4

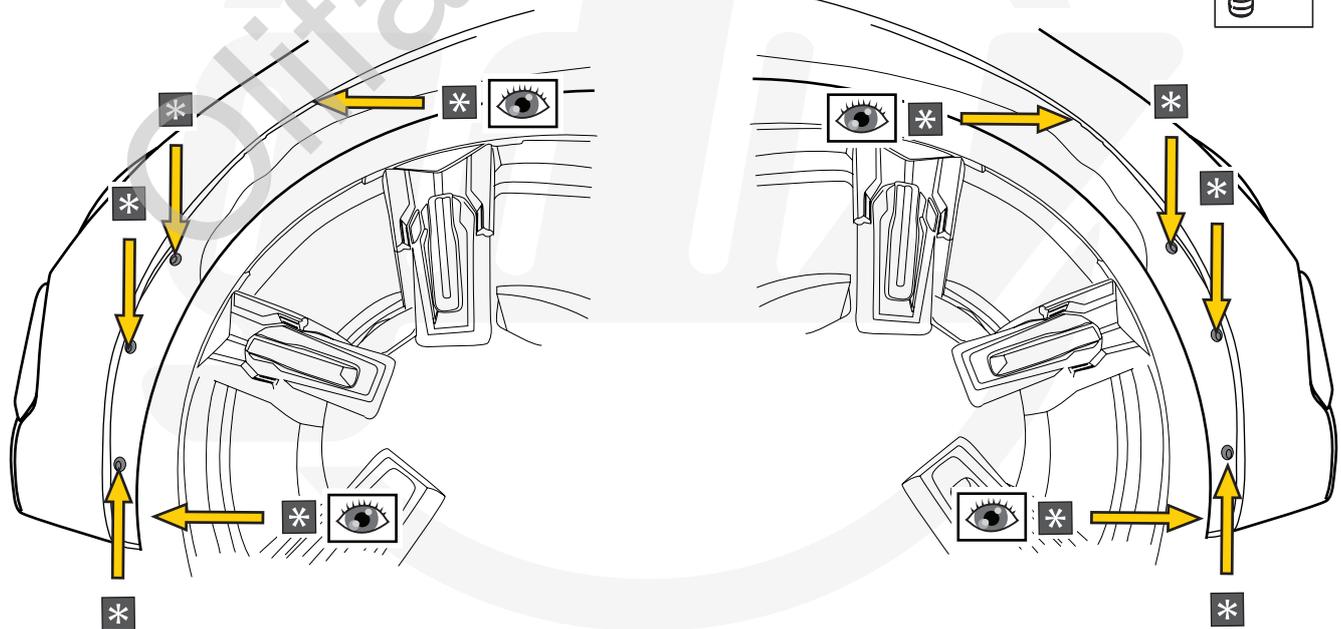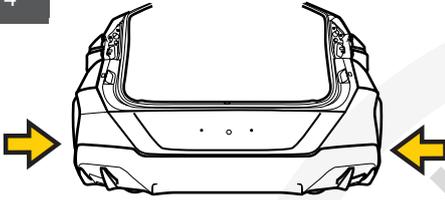


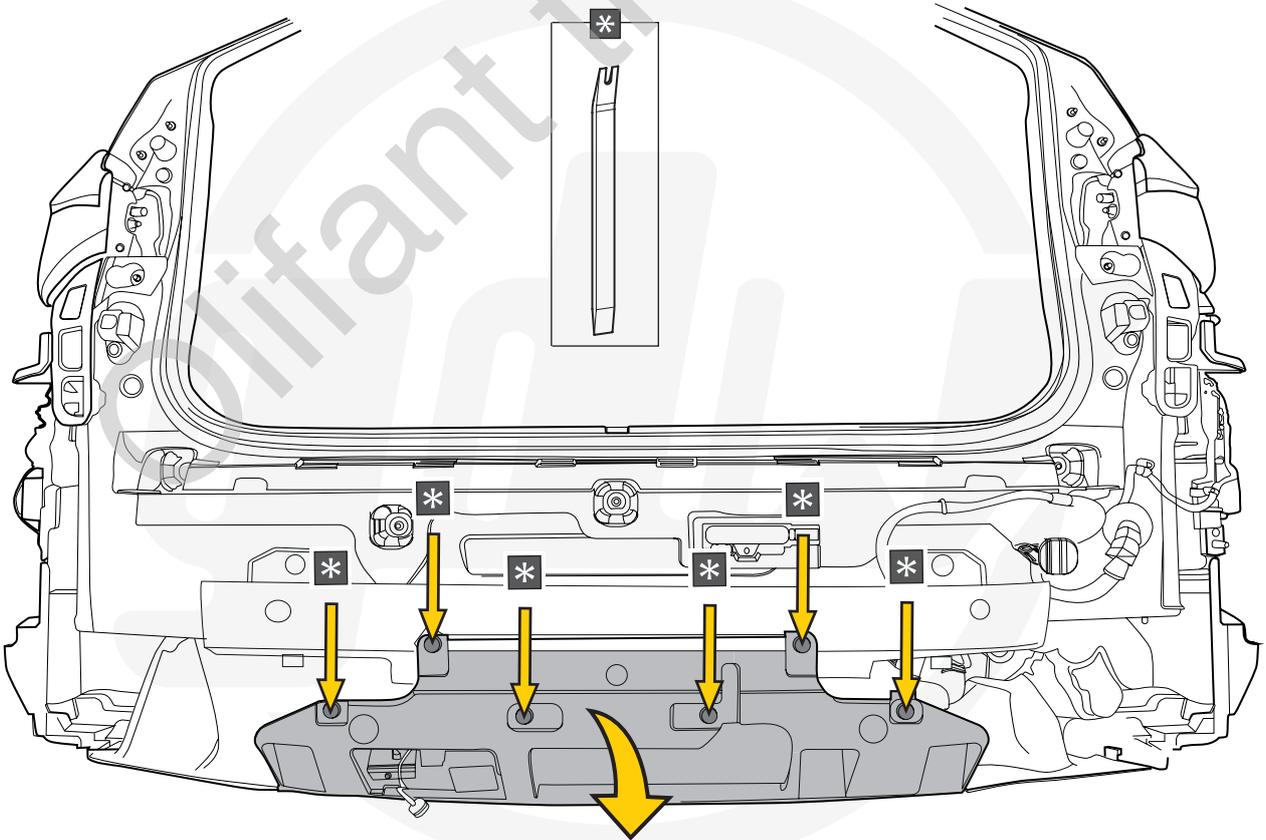
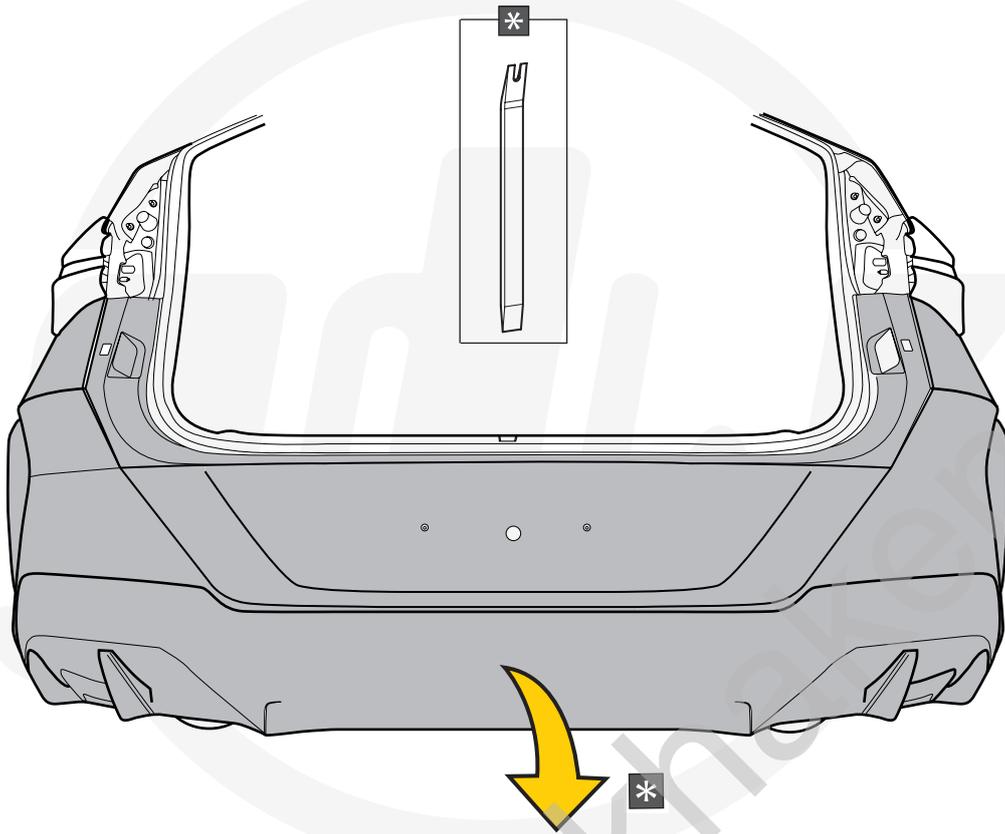






7

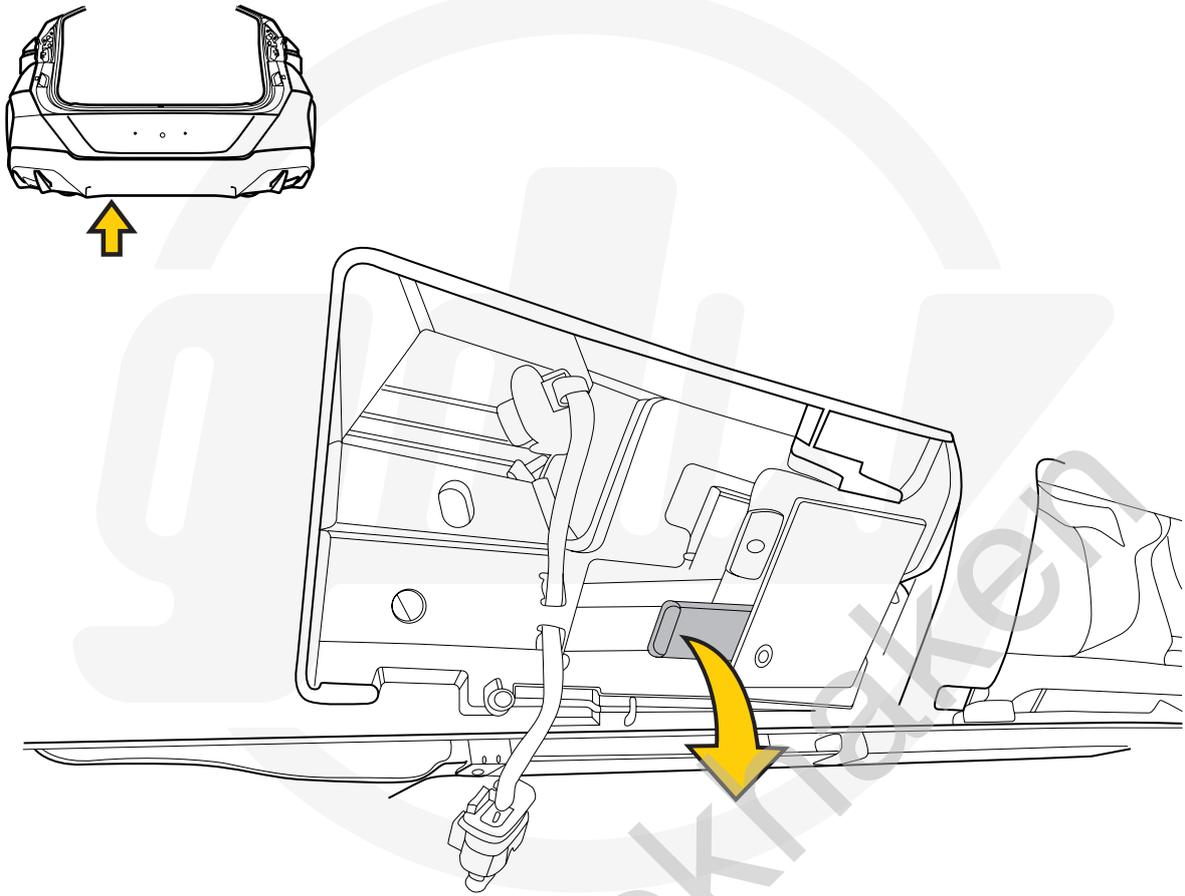



8

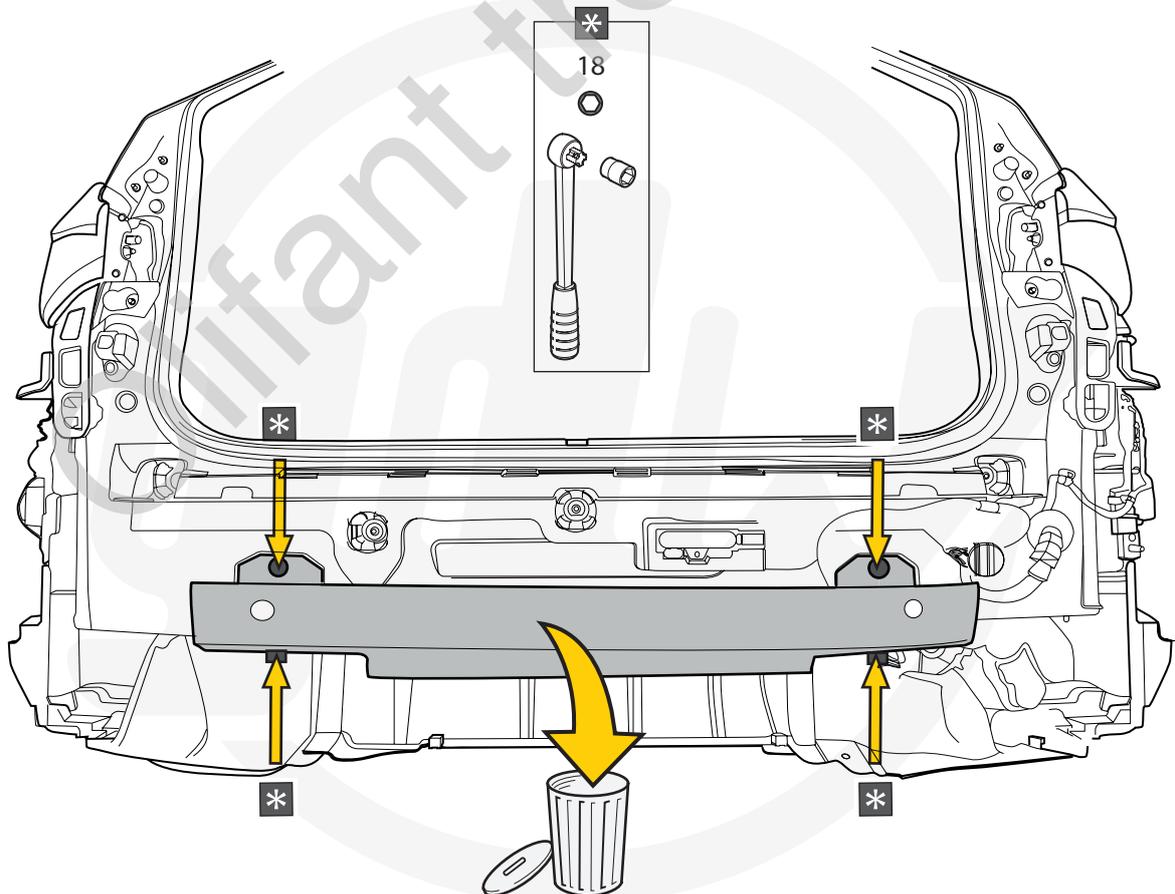

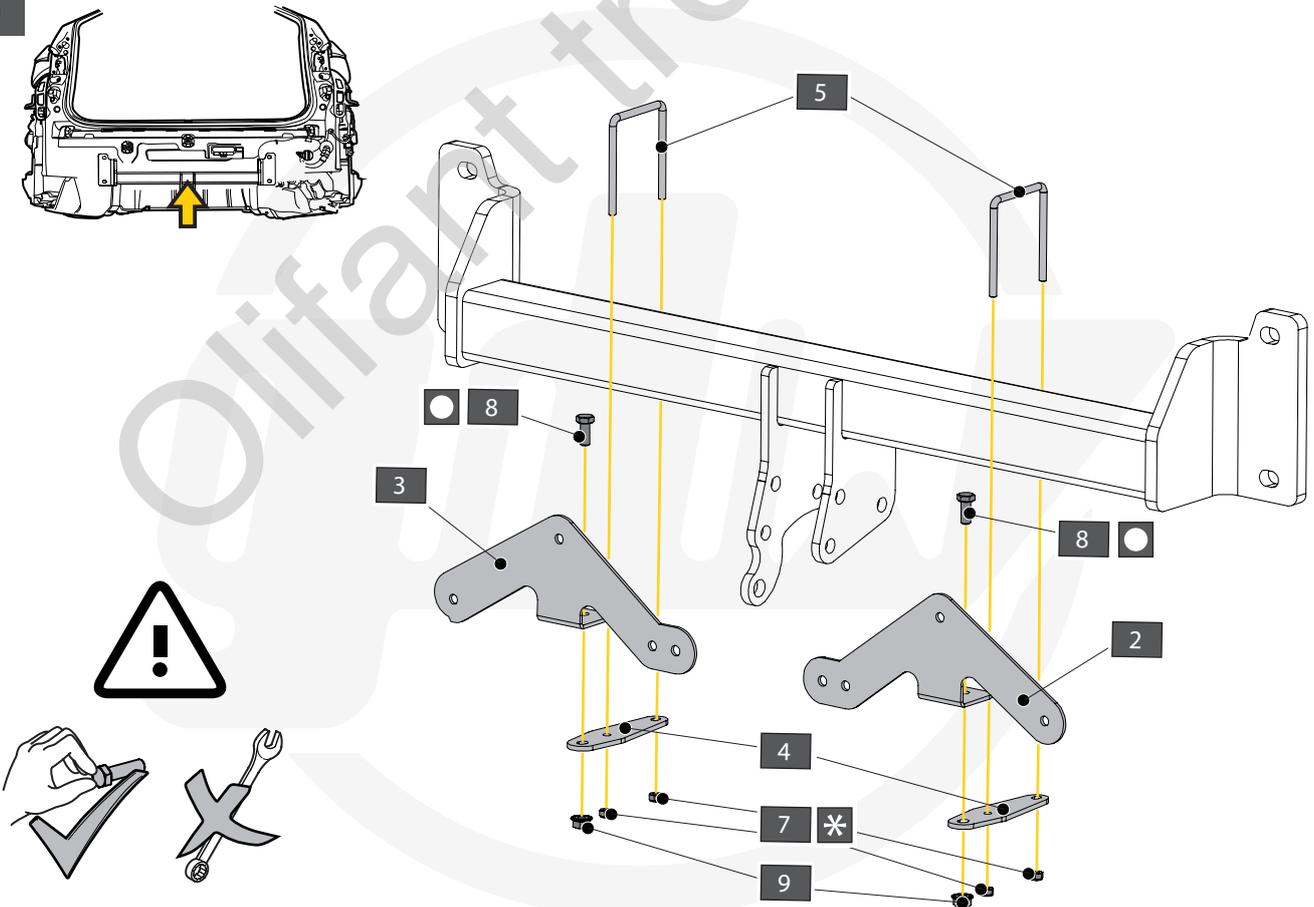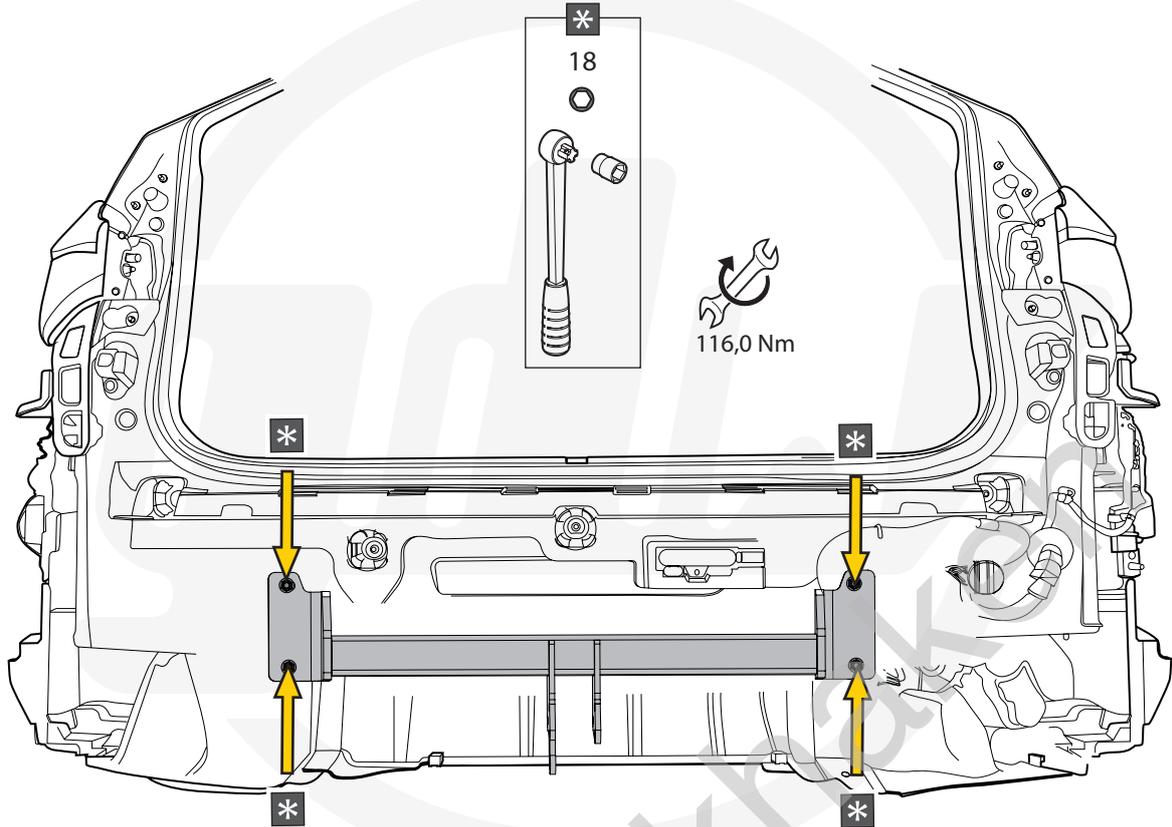


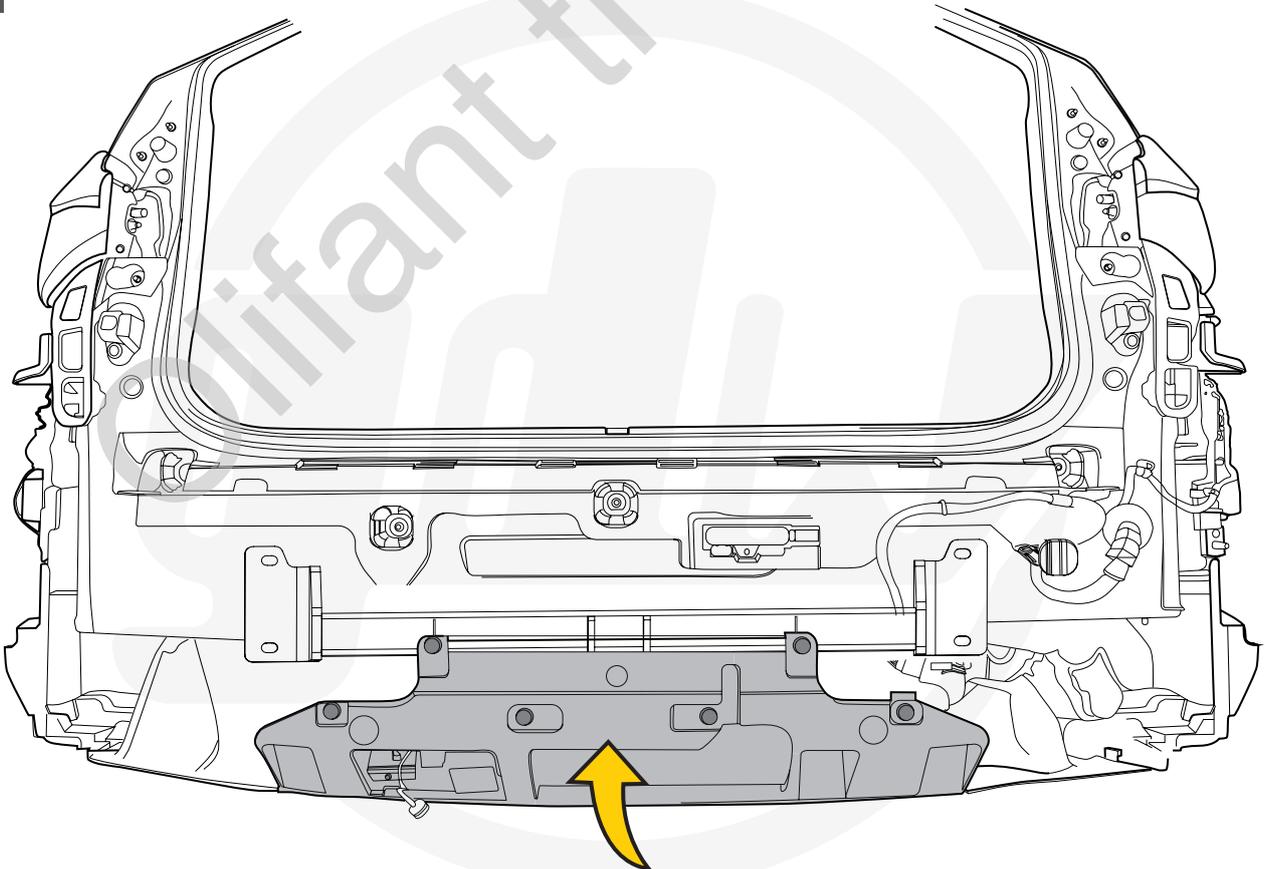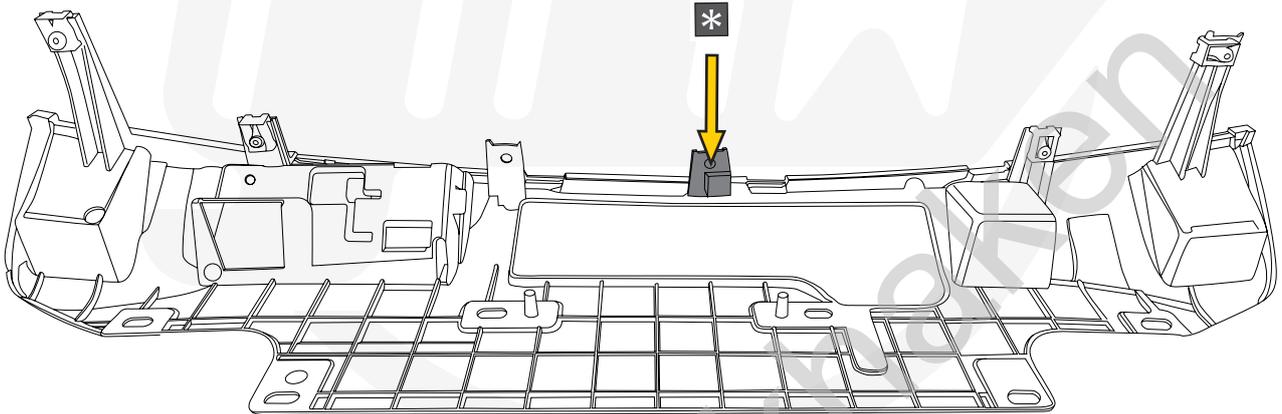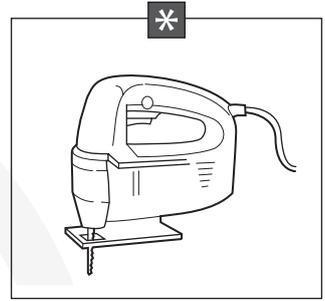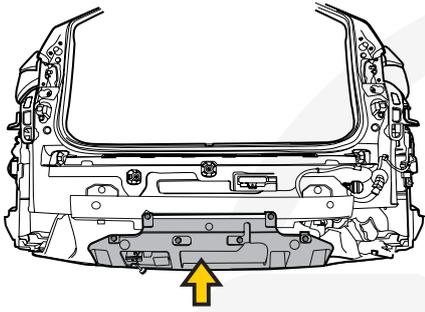


13

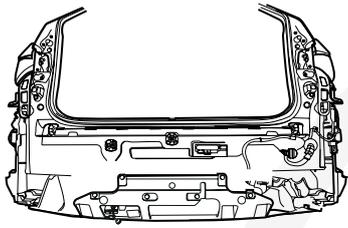




11,3 Nm





27,3 Nm

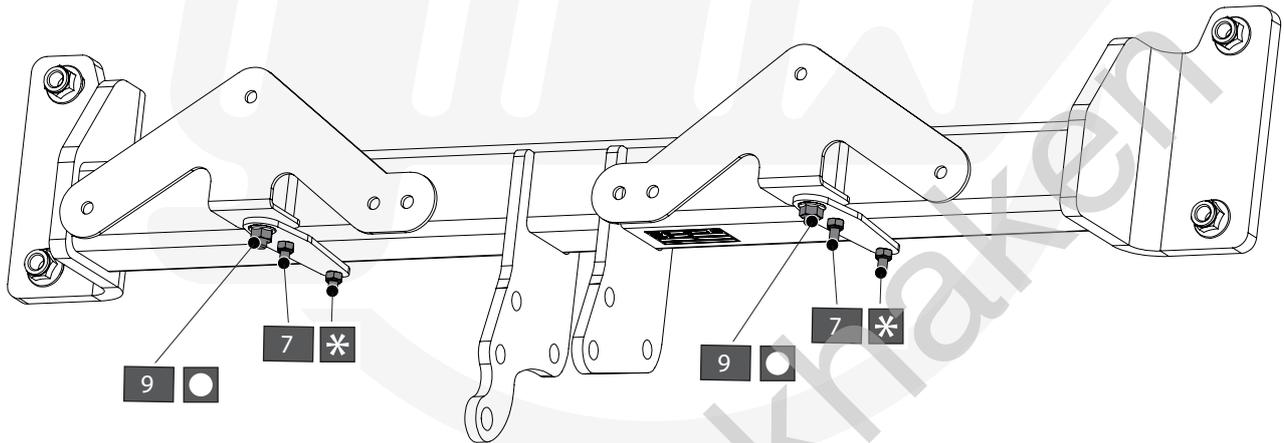

14

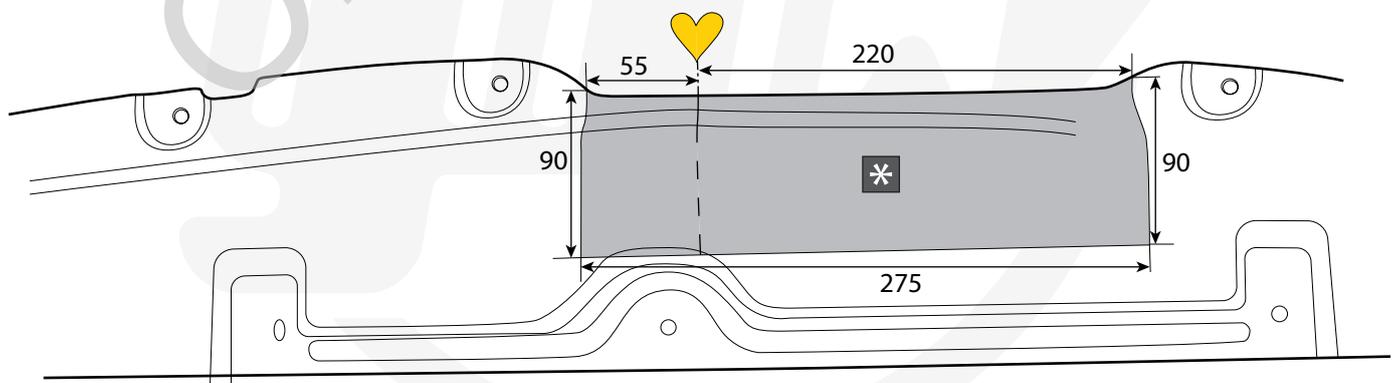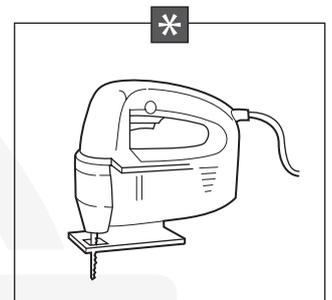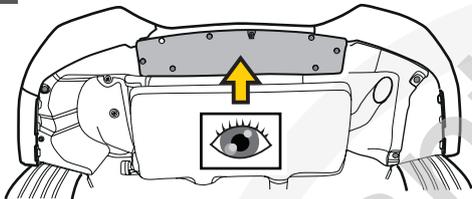

A		X1	GDW REF. 908.101
B		X1	DIN985-M6
C		X2	6,2 X 15,4 X 1,6 (NYLON)
D		X1	GDW REF. 718.16.002
E		X1	GDW REF. 718.16.003
F		X1	GDW REF. 908.094
G		X1	DIN933-M6 X 30

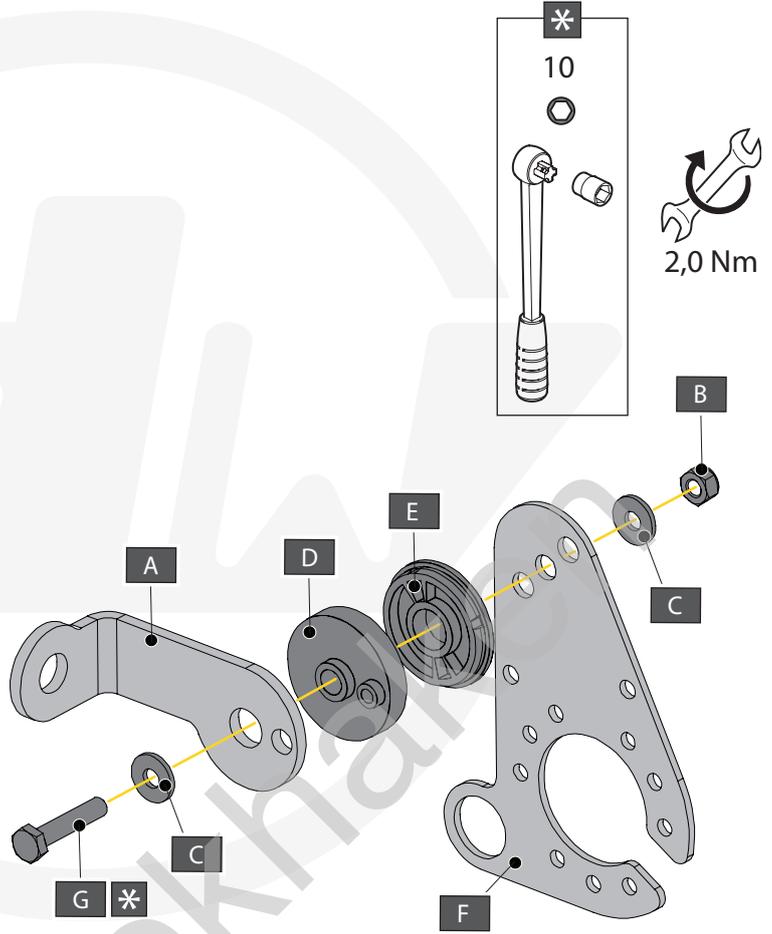

A		X3	DIN931-M12 X 110
B		X6	DIN125A-M12
C		X3	DIN934-M12
D		X3	DIN128A-M12

