

33-100 Tarnów ul.Przemysłowa 27a  
www.steinhof.pl

**VW Transporter T5  
(Van,Minibus,2WD/4WD),  
(+Caravelle), (+Multivan)**


**(2003 - 06/2015)**

**V-119**



**VW Transporter T6  
(Van,Minibus,2WD/4WD),  
(+Caravelle), (+Multivan)**

**(06/2015 - →)**

- PL** **Zaczep Kulowy** Instrukcja montażu i eksploatacji  YES  NO
- GB** **Tow bar** Installation and operating instructions  YES  NO
- D** **Die Anhängerkupplung** Montage- und Gebrauchsanleitung  YES  NO
- ES** **Gancho de remolque** Las instrucciones de instalación y de operación  YES  NO
- RU** **Фаркоп** Инструкция по установке и эксплуатации ТСУ  YES  NO
- FR** **Attelage** Notice de montage et d'utilisation  YES  NO
- IT** **Gancio traino** Istruzioni di montaggio  YES  NO
- CZ** **Tažné zařízení** Návod na montáž a použití  YES  NO
- RO** **Cârlig de remorcare** Instrucția de montaj și exploatare  YES  NO
- SE** **Dragkulan** Monterings- och bruksanvisningar.  YES  NO

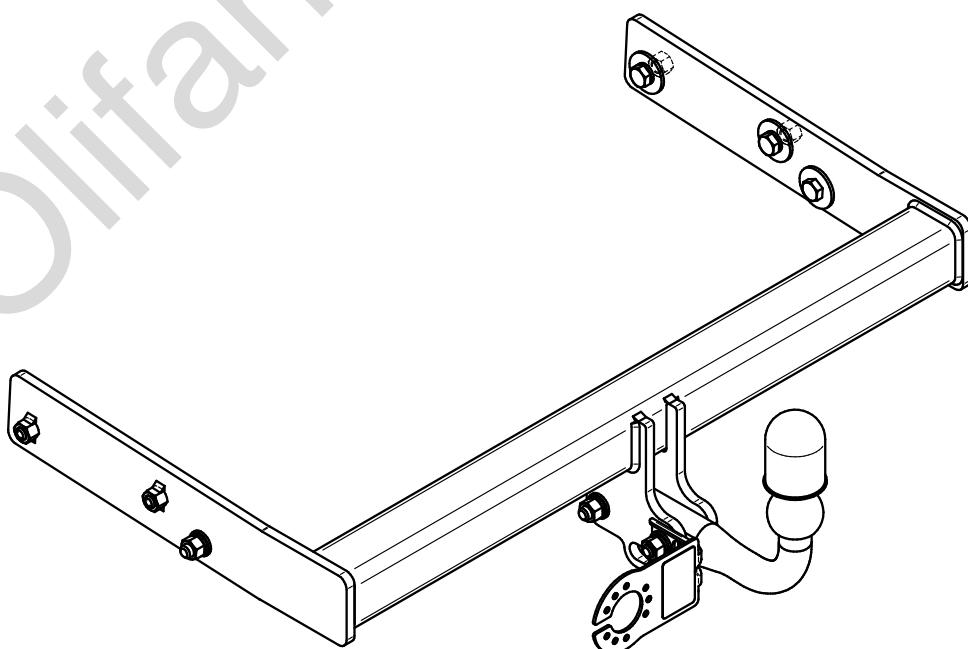







**Typ: V-119**  
**A50-X**  
**e20 00-1738**  
**D = 14,2kN**  
**S = 120kg**




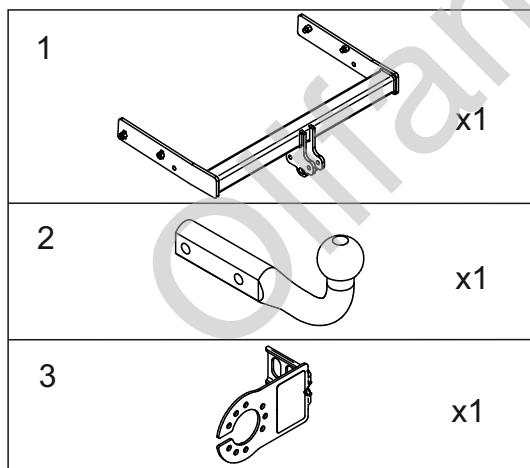
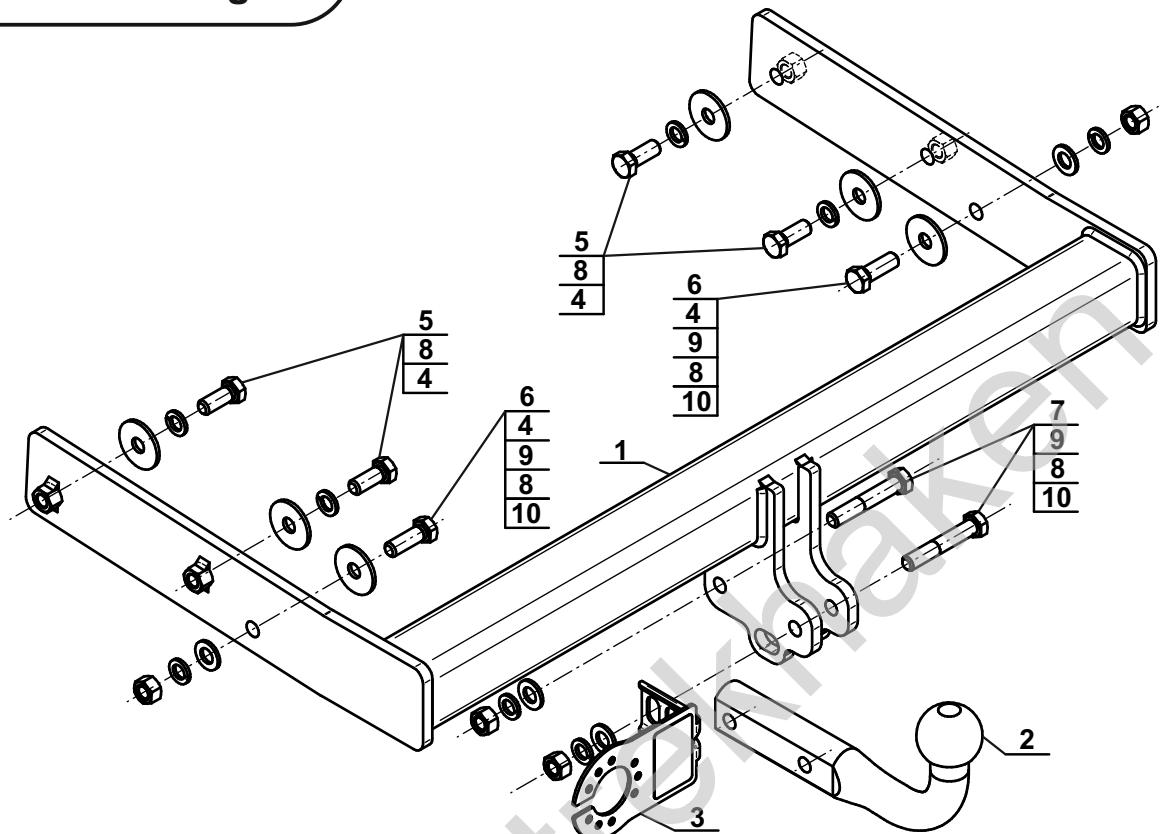


4		Ø40/Ø12,5x3	x6
5		M12x30 (PN/M-82105) (8.8)	x4
6		M12x35 (PN/M-82105) (8.8)	x2
7		M12x70 (PN/M-82101) (8.8)	x2
8		Ø12,2	x8
9		Ø13,0	x4
10		M12 (8)	x4




8.8	
M6 - 10 (Nm)	M12 - 85 (Nm)
M8 - 25 (Nm)	M14 - 135 (Nm)
M10 - 50 (Nm)	M16 - 200 (Nm)

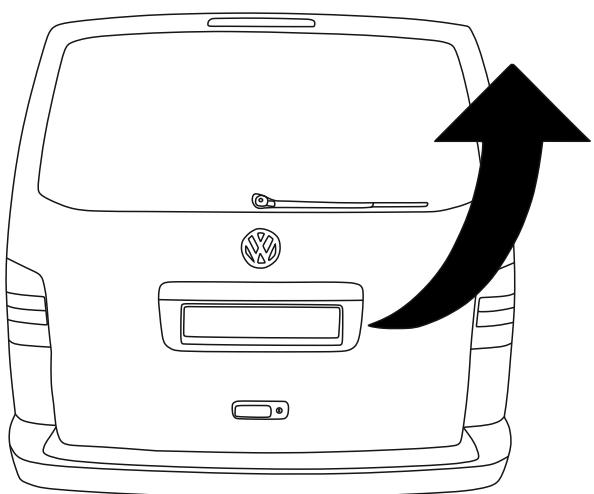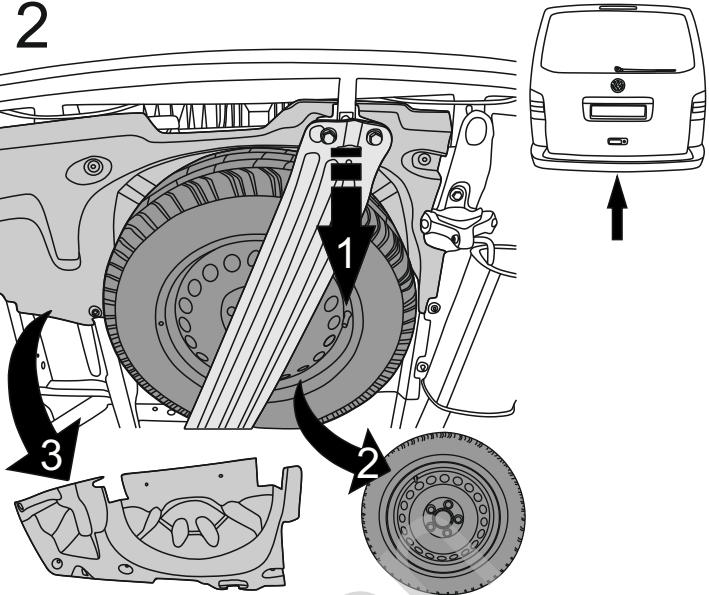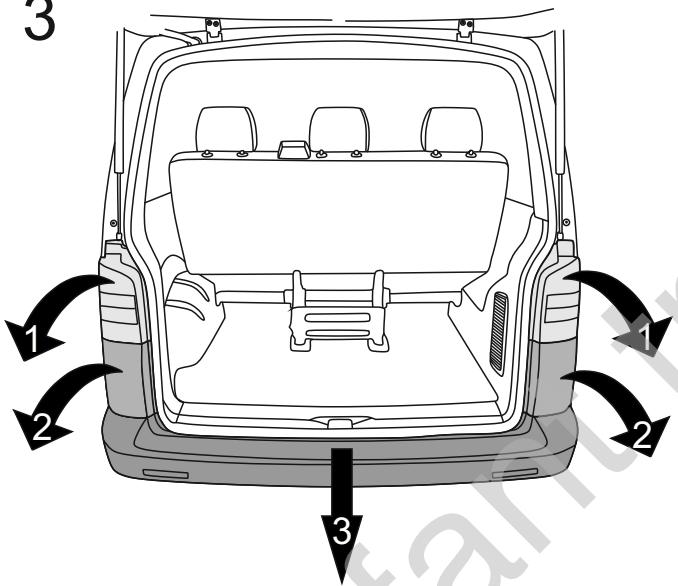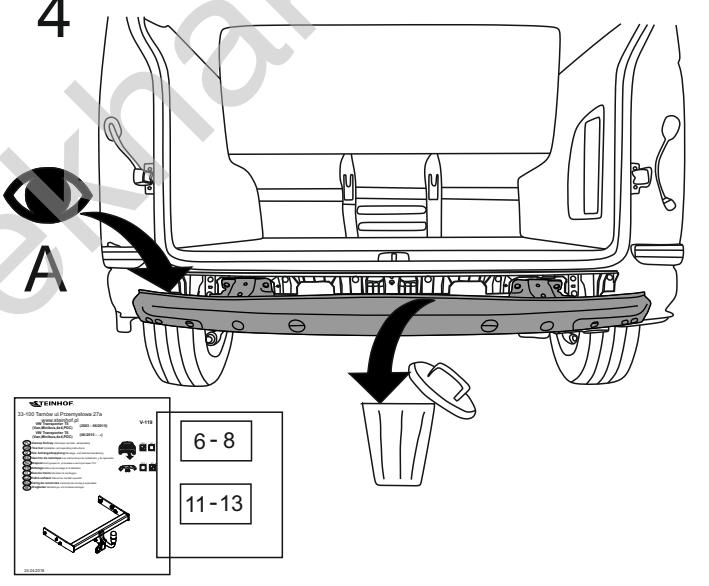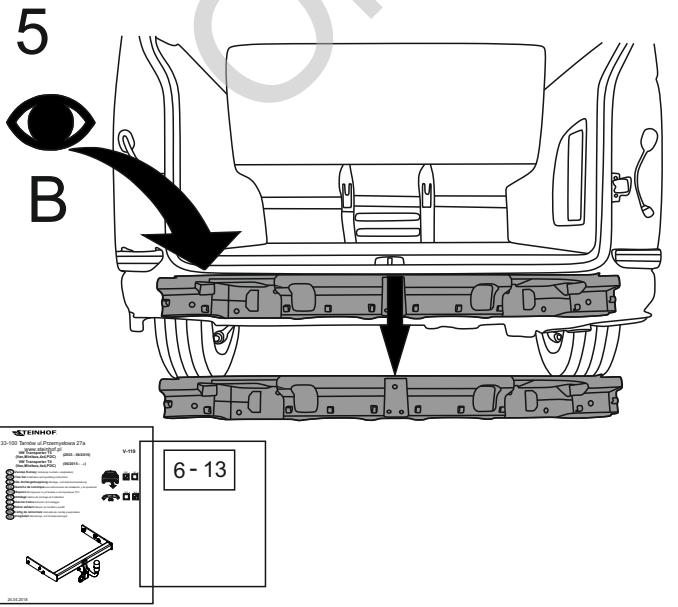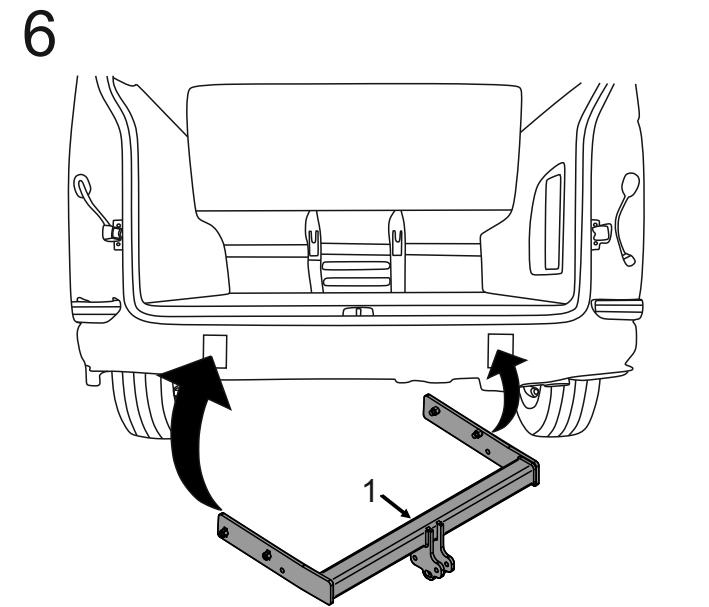
**1****2****3****4****5****6**

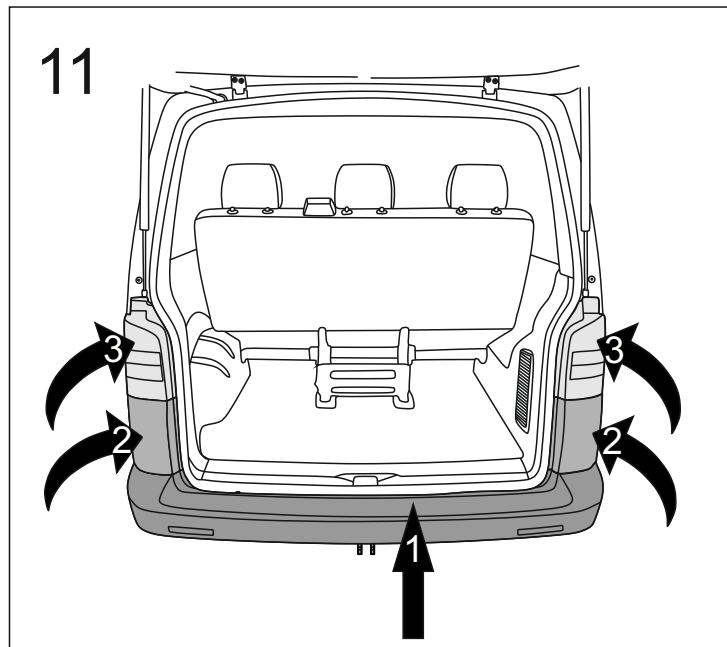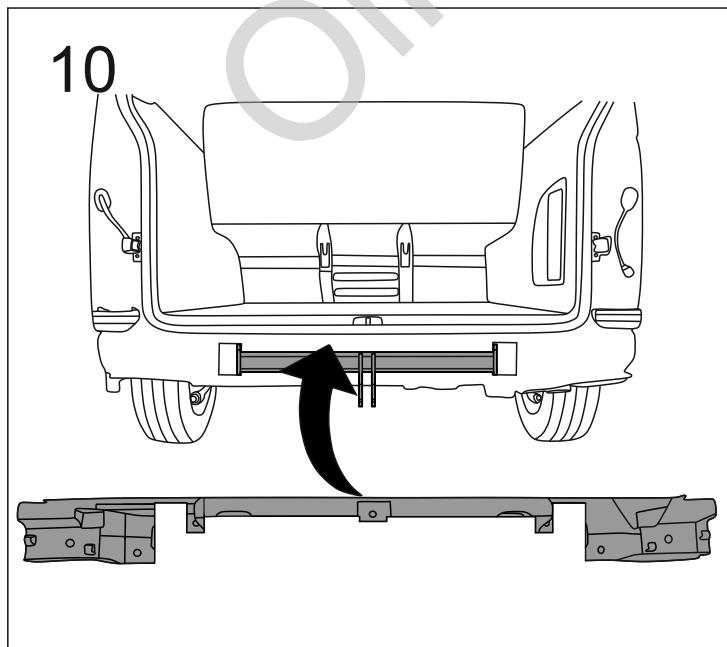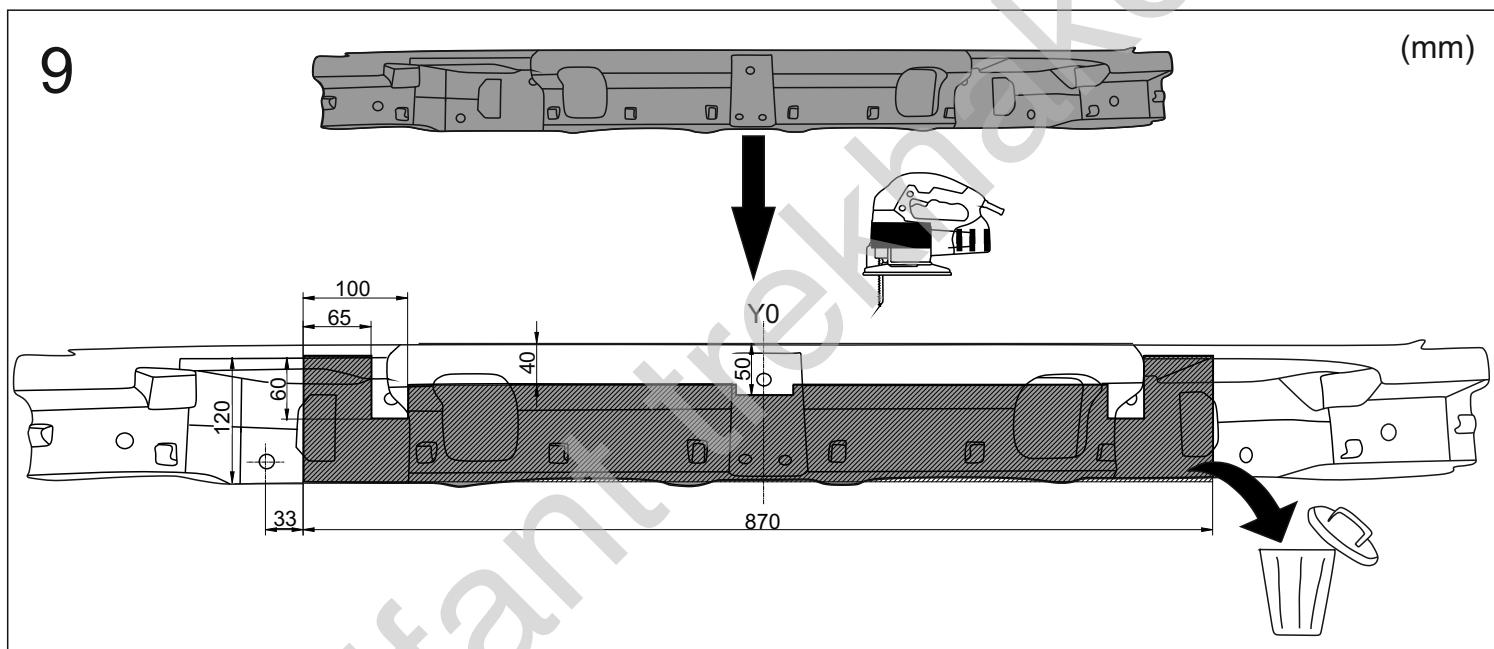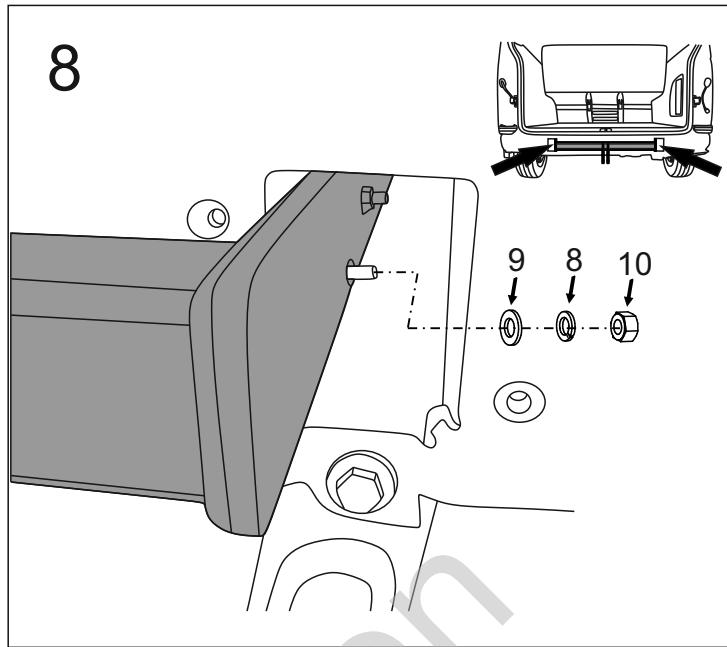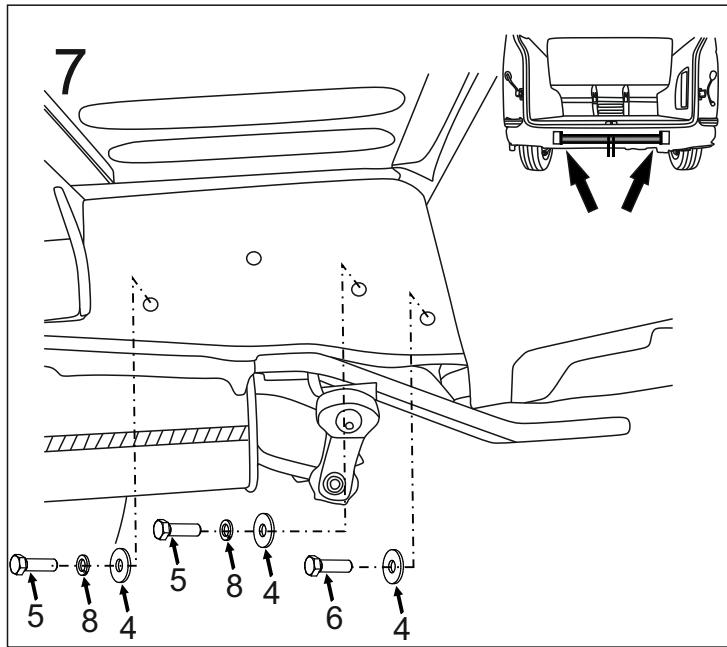

12

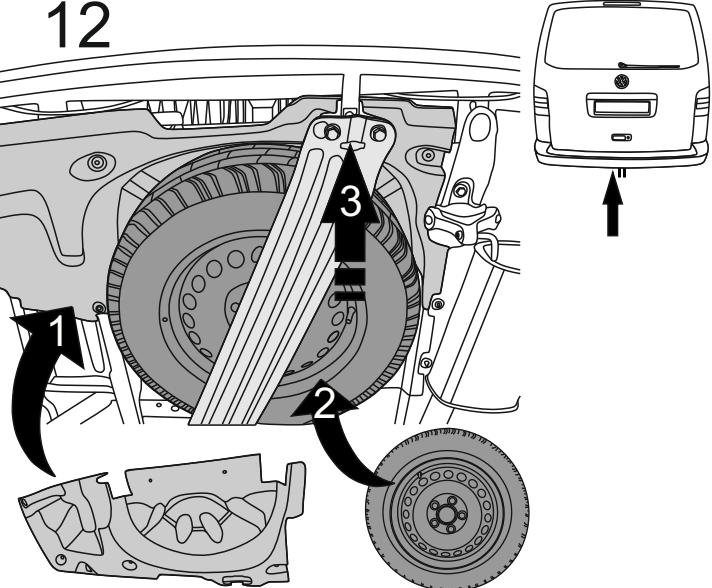

13

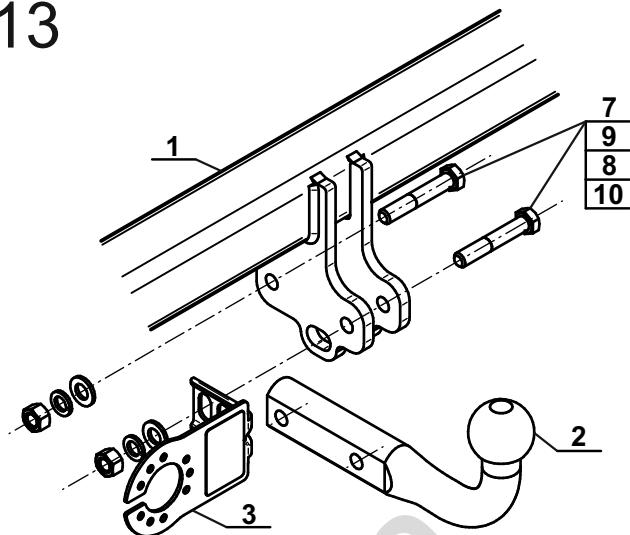

Olfant trekhaken